



User Manual

IP CAMERA

V1.1_20200106

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

DO NOT INSERT ANY METALLIC OBJECT THROUGH VENTILATION GRILLS.

CAUTION

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
<p>CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		

COPYRIGHT

THE TRADEMARKS MENTIONED IN THE MANUAL ARE LEGALLY REGISTERED TO THEIR RESPECTIVE COMPANIES.



Table of Contents

PREFACE	1	IP Settings	31
PRODUCT SPECIFICATIONS	1	IP Assignment	31
PRODUCT INSTALLATION	4	IPv6 Assignment	31
Monitor Settings	4	Port Assignment	32
Hardware Installation	5	UPnP	32
Bullet	5	RTSP Setting	34
Bracket & Lens Adjustment	6	Multicast Setting	35
Installing the Micro SD Card	6	ONVIF	35
Wireless Antenna For Bullet (Optional)	6	Bonjour	36
Vandal Dome	7	LLTD	36
Installation Steps For Dome	8	Advanced	37
Dome Cover Installation	1	Https (Hypertext Transfer Protocol Secure)	37
Preventing Foggy Lens For Dome	1	SNMP	40
Bracket & Lens Adjustment	1	Access List	41
Installing the Micro SD Card	2	QoS/DSCP	42
Connectors For Bullet & Vandal Dome	2	IEEE 802.1x	43
Dome	3	PPPoE & DDNS	44
Dome Installation Steps	3	PPPoE Setting	44
Bracket & Lens Adjustment	4	Send mail after PPPoE dialed	44
Connectors Instruction	4	DDNS Setting	45
Video Out Connector	5	State	45
Box	6	Server Settings	46
Connectors Instruction (Box)	6	Mail Setting	47
PoE (Power Over Ethernet)	7	FTP Setting	47
IP Assignment	8	Samba (Network Storage)	48
Install Active Control	12	Google Drive Setting	48
For users using IE 6.0 or above	12	Dropbox Setting	52
Another Method	14	Wireless Setting	53
For Non-IE Web Browser Users	15	Status of Networks in Wireless Setting	53
LIVE VIDEO	19	Connecting to an ad-hoc Wi-Fi network	54
Full Screen Mode	20	WEP Setting	58
Live Video Panel	20	WPA-PSK/ WPA2-PSK Setting	58
Submenu	21	A/V Settings	59
CAMERA CONFIGURATION	23	Image Setting	60
System	23	Camera	60
System Information	24	Privacy Mask	60
Server Information	24	Image Setting	61
OSD Setting	24	Day Profile & Night Profile	61
Time Setting	25	D-WDR & True-WDR features	61
EasyLink (Optional)	26	Denoise 3D & 2D	63
User Management	27	Shutter Time	63
Anonymous User Login	27	Sense-Up	63
Universal Password	27	AE Compensation	63
Add User	27	AE Strategymode	63
User List	27	Saturation	63
Default Account	28	AGC	63
System Update	28	Low Lux Auto-adjust	63
Firmware Upgrade	28	Anti Fog	63
Reboot System	28	Lens Distortion Correction	64
Factory Default	28	Video Orientation	64
Setting Management	28	Day & Night	64
Network	30	Video Setting	67
		Video System	67
		Input Resolution	67
		Video System	67
		TV Output	67



Corridor Mode	67
Streaming Settings	71
Basic Mode	71
Advanced Mode	73
3GPP Streaming Setting	74
Audio	74
IP Camera to PC	74
Adjust Volume	75
Sound Detection	75
Event List	76
Event Setting	77
Motion Detection	77
Motion Detection Operation	77
Object Motion Operation	79
Record File	81
Record Time Setting	81
Network IP Check	82
Schedule	83
Schedule	83
Snapshot & Record	84
I/O Setting	85
I/O Configuration	85
I/O Setup	86
Input Setting	86
Output Setting	86
Log List	87
SD Card	88
Playback	88
Record	90
SD Management	92
SD Card Files	92
Copy to PC	93
NETWORK CONFIGURATION	95
Configuration I	95
Configuration II	95
Configuration III	96
FACTORY DEFAULT	97
Bullet & Vandal Dome	97
Dome	97
Box	98
Connect to Internet	98
UNIVERSAL PASSWORD	99
PACKAGE CONTENTS	102
Bullet	102
Vandal Dome	103
Dome	104
Box	105
MICRO SD CARD COMPATIBILITY (OPTIONAL)	106

PREFACE

These are a series of **1/3" Megapixel CMOS Sensor** IP cameras with a built-in web server. The user can view real-time video via IE browser. It supports **H.264+**, **H.264** and **M-JPEG** video compression, providing smooth and high video quality. The video can be stored in Micro SD card and playback remotely.

With a user friendly interface, it is an easy-to-use IP camera for security applications.

PRODUCT SPECIFICATIONS

Main Features:

- 4 Megapixel IP Camera
- H.264+/ H.264/ M-JPEG Compression
- Smart Stream
- ROI Function
- Smart Focus System for Remote Focus Adjustment
- Digital Noise Reduction
- Power over Ethernet
- Digital Wide Dynamic Range
- Day & Night Manual Switch Time Control
- IR LED Built-in 20M
- IR Cut Filter Mechanism
- IP66
- IK10
- Micro SD Card Backup
- 2-way Audio
- Support iPhone/iPad/Android
- SDK for Software Integration
- Free Bundle 36 Ch Recording Software

Hardware	
CPU	Multimedia SoC
RAM	512MB
Flash	32MB
Image Sensor	1/3" Megapixel CMOS Sensor
Lens Type	2.8-12mm 4.2X Bulid-in Zoom Lens @ F1.4
Sensitivity	Color: 0.08 Lux (AGC ON); B / W: 0.03 Lux (AGC ON)
ICR	IR cut Filter Mechanism
I/O	1 DI / 1 DO
Video Output	Yes
Audio	G.711(64K) and G.726(32K,24K) audio compression Input : External Audio in Output: External Line out, Support 2-way.
Power over Ethernet	Yes
Power Consumption	DC 12V Max: 5 W(IR ON) PoE Max: 7 W(IR ON)
Operating Temperature *IR ON: 50°C	-20°C ~ 60°C [*IR OFF]
IR LEDs	
LEDs	10 Units 5φ + 2 Units High Power, 850nm
IR Distance	20M
Network	
Ethernet	10/ 100 Base-T
Network Protocol	IPv6, IPv4, HTTP, HTTPS, SNMP, SSL, TLS , DNS , ICMP, IGMP, ARP, SNTP, QoS/DSCP, IEEE 802.1X, RTSP/RTP/RTCP, TCP/IP, UDP, SMTP, FTP, PPPoE, DHCP, DDNS, NTP, UPnP, 3GPP, SAMBA, Bonjour
Heater (optional)	
Operating Temperature	Working Temperature: -22°F ~ 122°F(-30°C ~50°C) Starting Temperature: -4°F ~ 122°F(-20°C ~50°C)
Power Consumption	DC 12V Max: 8.5 W PoE Max: 10 W
System	
Video Resolution[16:9]	2592x1520@25fps, 1920x1080@30fps, 1280x720@30fps, 640x360@30fps
Video Adjust	Brightness, Contrast, Hue, Saturation, Sharpness, AGC, Night Mode, WDR, DNR , Flip, Mirror, Noise

	Reduction, Day&Night Adjustable
Features	ROI, Smart Stream, Motion Detection, Privacy Mask, Anti Fog, Tampering Detection, Corridor Mode, Push Video , P2P(Optional)
Shutter time	Indoor , Outdoor , 1/1 ~ 1/10000
Quadruple Streaming	Yes
Image Snapshot	Yes
Full Screen Monitoring	Yes
Privacy Mask	Yes, 3 different areas
Compression Format	H.264+/ H.264/ M-JPEG
Video Bitrates Adjust	CBR, VBR
Motion Detection	Yes, 3 different areas
Triggered Action	Mail, FTP, Save to Micro SD card, DO, SAMBA , Dropbox , Google drive
Security	Password protection, IP address filtering, HTTPS encrypted data transmission, 802.1X port-based authentication for network protection, QoS/DSCP
Firmware Upgrade	HTTP mode, can be upgraded remotely
Simultaneous Connection	Up to 10
Micro SD Card Management (Optional)	
Recording Trigger	Motion Detection, Tempering Detection , IP check, Network break down (wire only), Schedule, DI
Video Format	AVI, JPEG
Video Playback	Yes
Delete Files	Yes
Client System Requirement	
OS	Windows 7, 8 , 10 ,XP, Microsoft IE 6.0 or above
Mobile Support	iOS 8 or above, Android 4.4.2 or above.
Hardware Suggested	Intel Dual Core 2.8G, RAM, 4GB, Graphic card: 128MB

***SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTIFICATION.**

PRODUCT INSTALLATION

Monitor Settings


Caution: This setting only applies to Windows 7 system users.

Right-Click on the desktop.

Select **Properties**




Change color quality to highest (**32bit**).

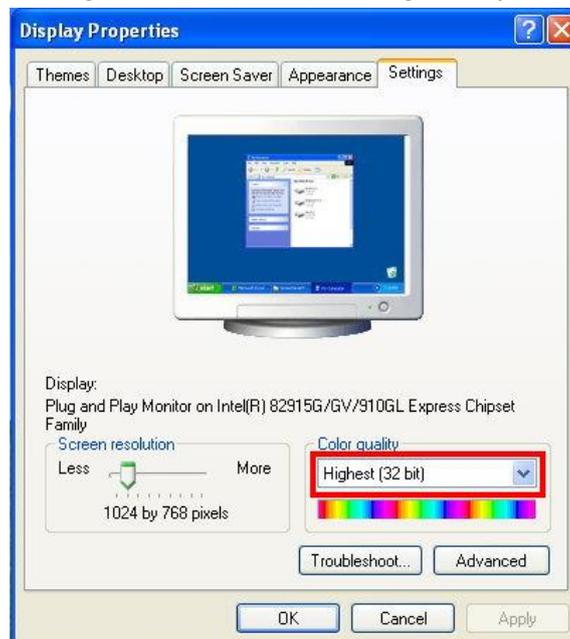


Hardware Installation

Bullet

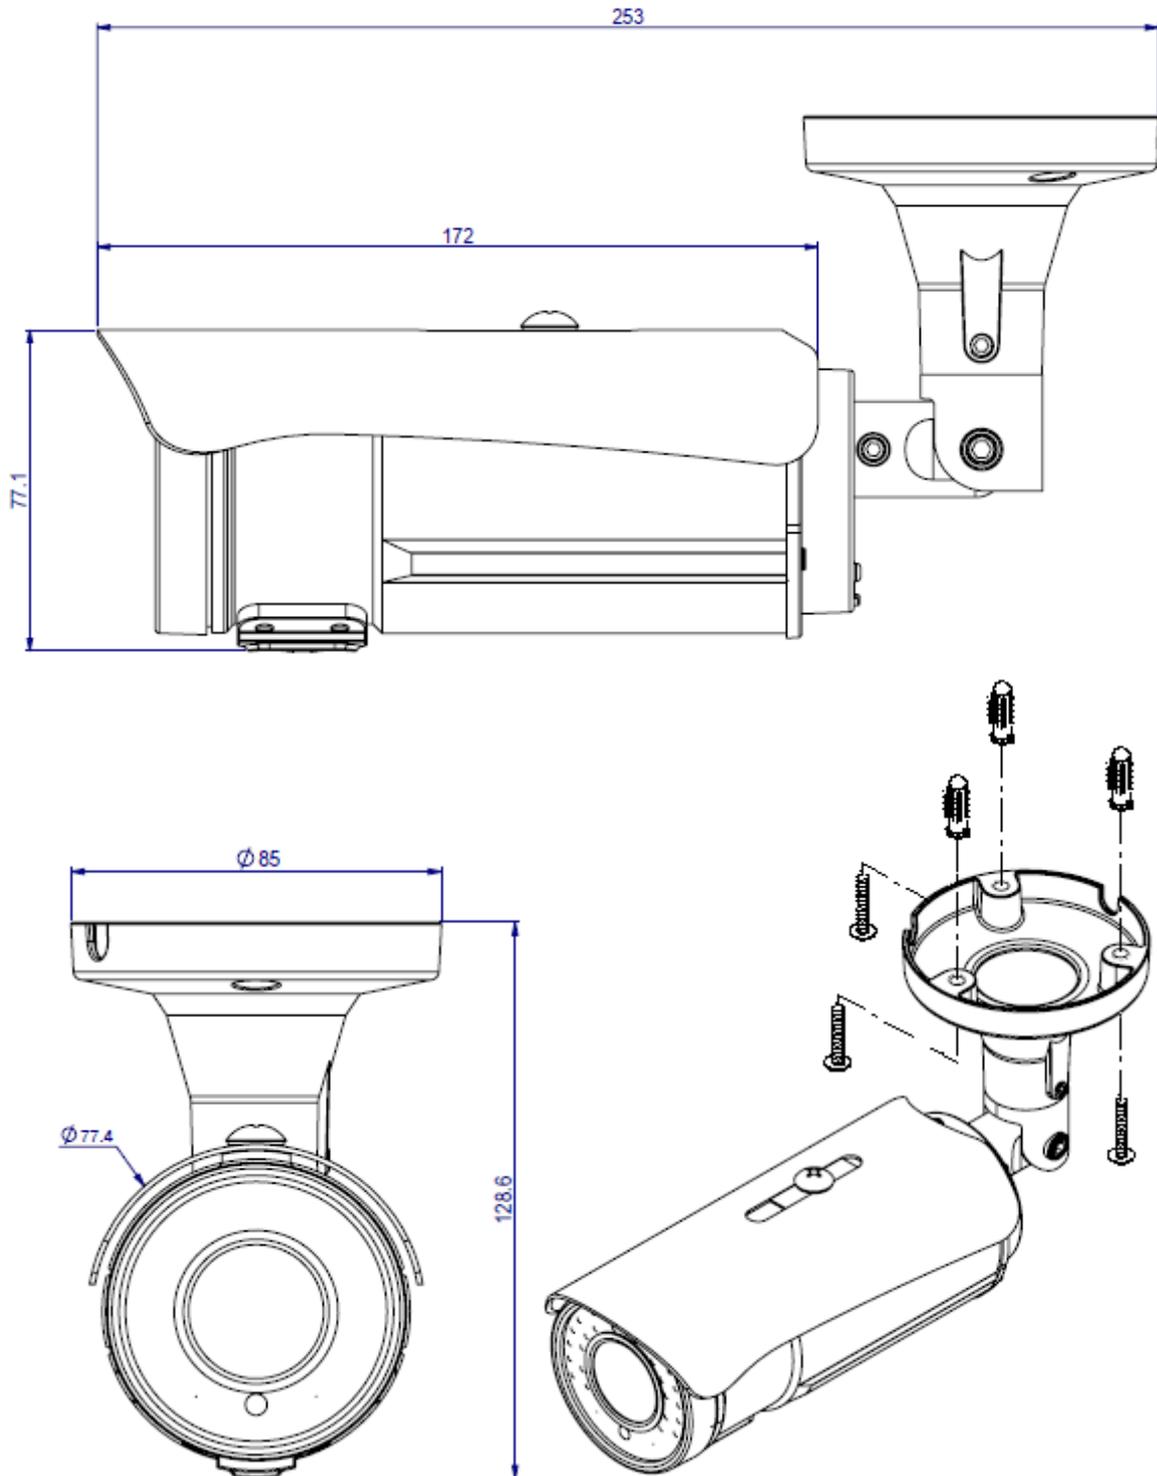


Bracket & Lens Adjustment

Use the 3-Axis bracket to adjust the camera to appropriate angle, then turn and tighten the screw to fix it.

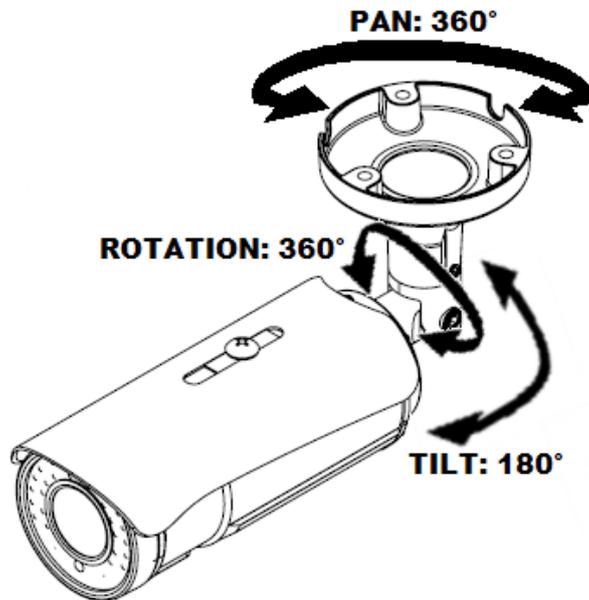

Installing the Micro SD Card

Insert the Micro SD card into the slot which is right beneath the camera unit for installation, and push the Micro SD card again to for ejection.

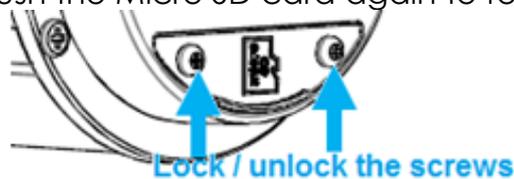


Wireless Antenna For Bullet (Optional)

(Pictures based on another camera model)




- Plug the Antenna into the connector while holding the Antenna bar.
- Turn the lock nut to the right until it is totally locked.
- Do not bend or try to straight the antenna bar.


Vandal Dome

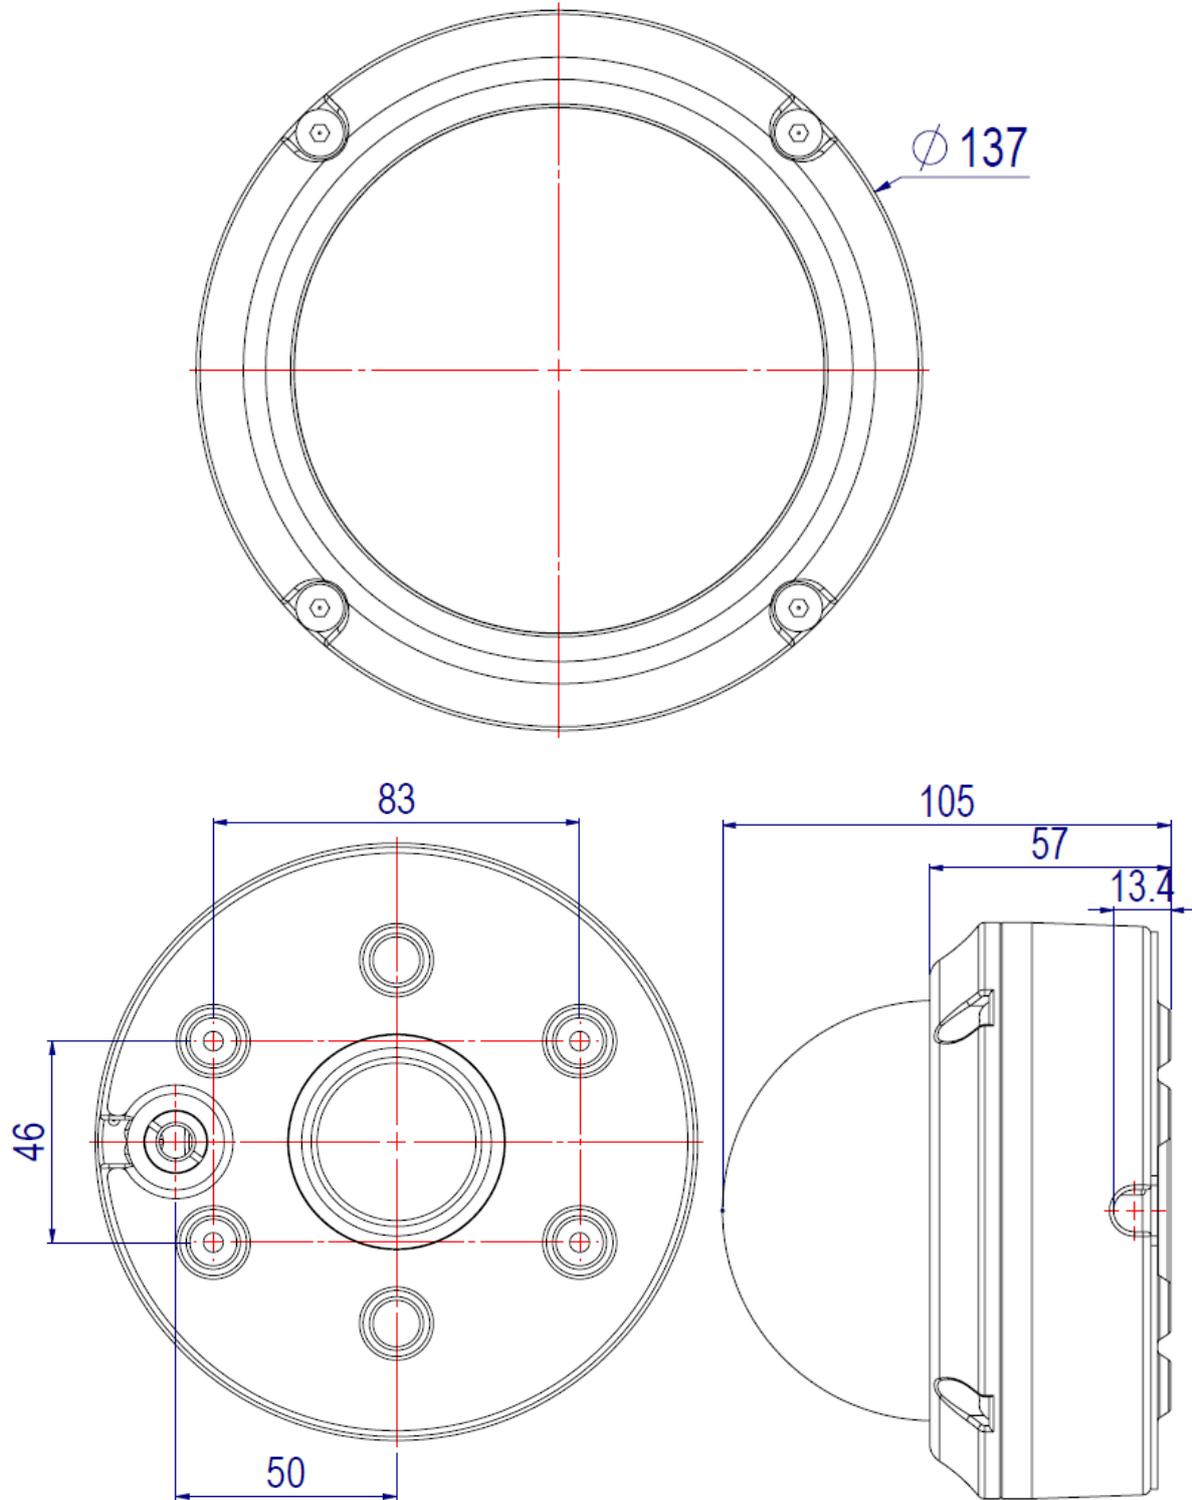

Installation Steps For Dome
With a Mounting Plate (Optional)

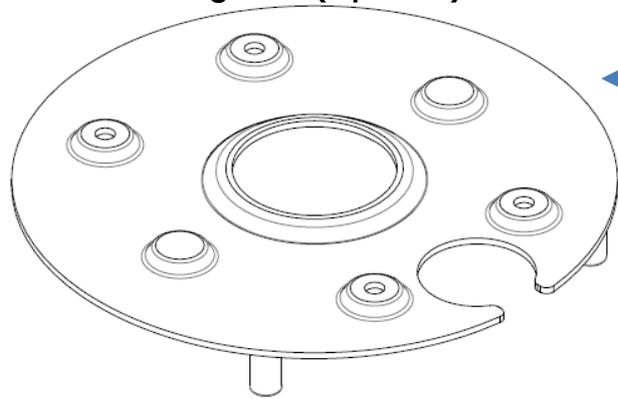


Mount the whole plate onto the surface where the installation takes place first.

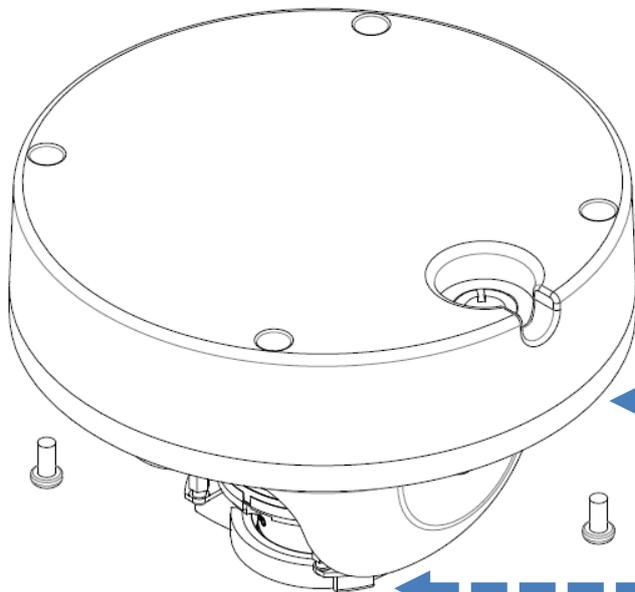

It is also recommended that the surface where you mount the camera is smooth and closely flat with the camera.

Match the gaps and the screws with the plate surface facing the direction as the picture depicts. Attach the Camera body with the Mounting Plate.

Adjust the 3 Axis Diagram.

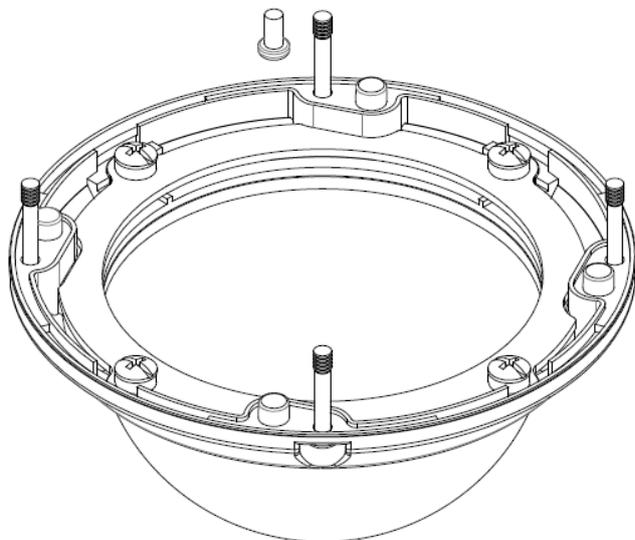

Install the Dome Cover.

Dome Cover Installation

Make sure there are no cables around the screws, and slowly lock the four corners at the same time, applying equal force. Do not fully lock one screw at a time; otherwise the closing might not be equally thorough.



Before you close the dome cover, make sure that the black rubber edge sticks to the cover completely. Crooked or uneven conditions may cause the waterproof defective.


Preventing Foggy Lens For Dome

To avoid lens fog while the dome is open during installation, take out the Silica Gel from the small package and place it inside the dome to reduce the humidity level.




Bracket & Lens Adjustment

Adjust the camera to appropriate angles.

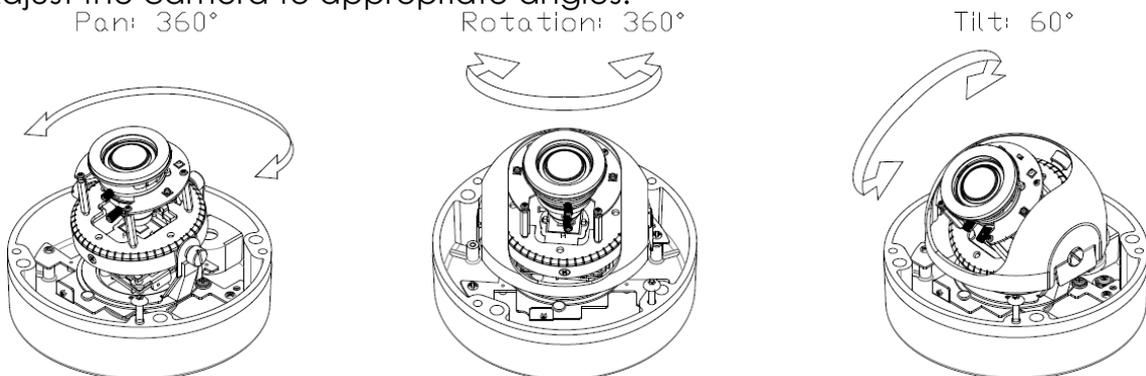


Installing the Micro SD Card

Insert the Micro SD card into the slot which is right beneath the camera unit for installation, and push the Micro SD card again to for ejection.

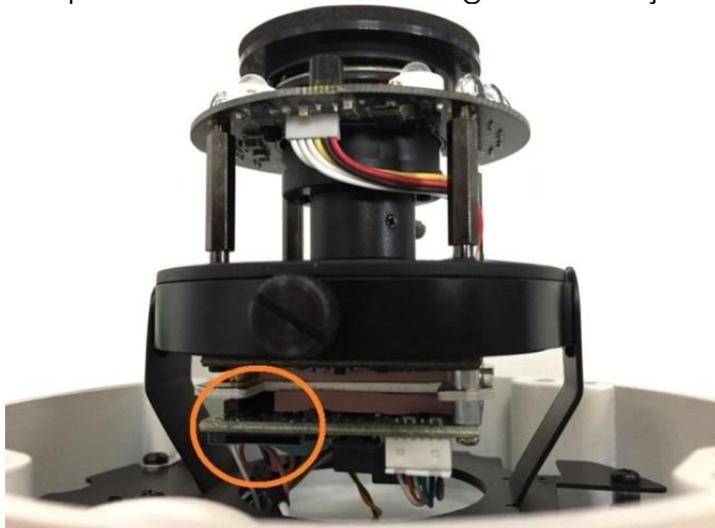


Connectors For Bullet & Vandal Dome

Set up configurations based on the network environment. For I/O setting, please refer to [I/O Configuration](#) chapter for more.

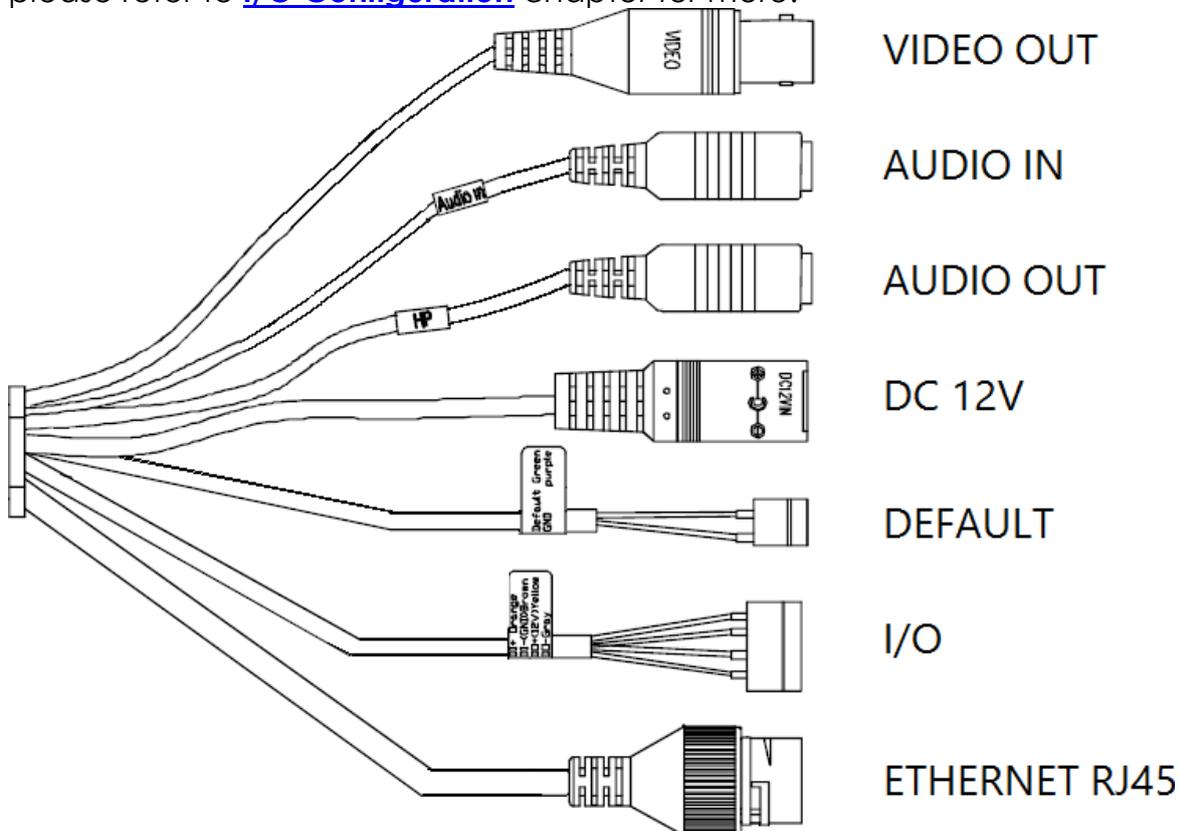

Dome

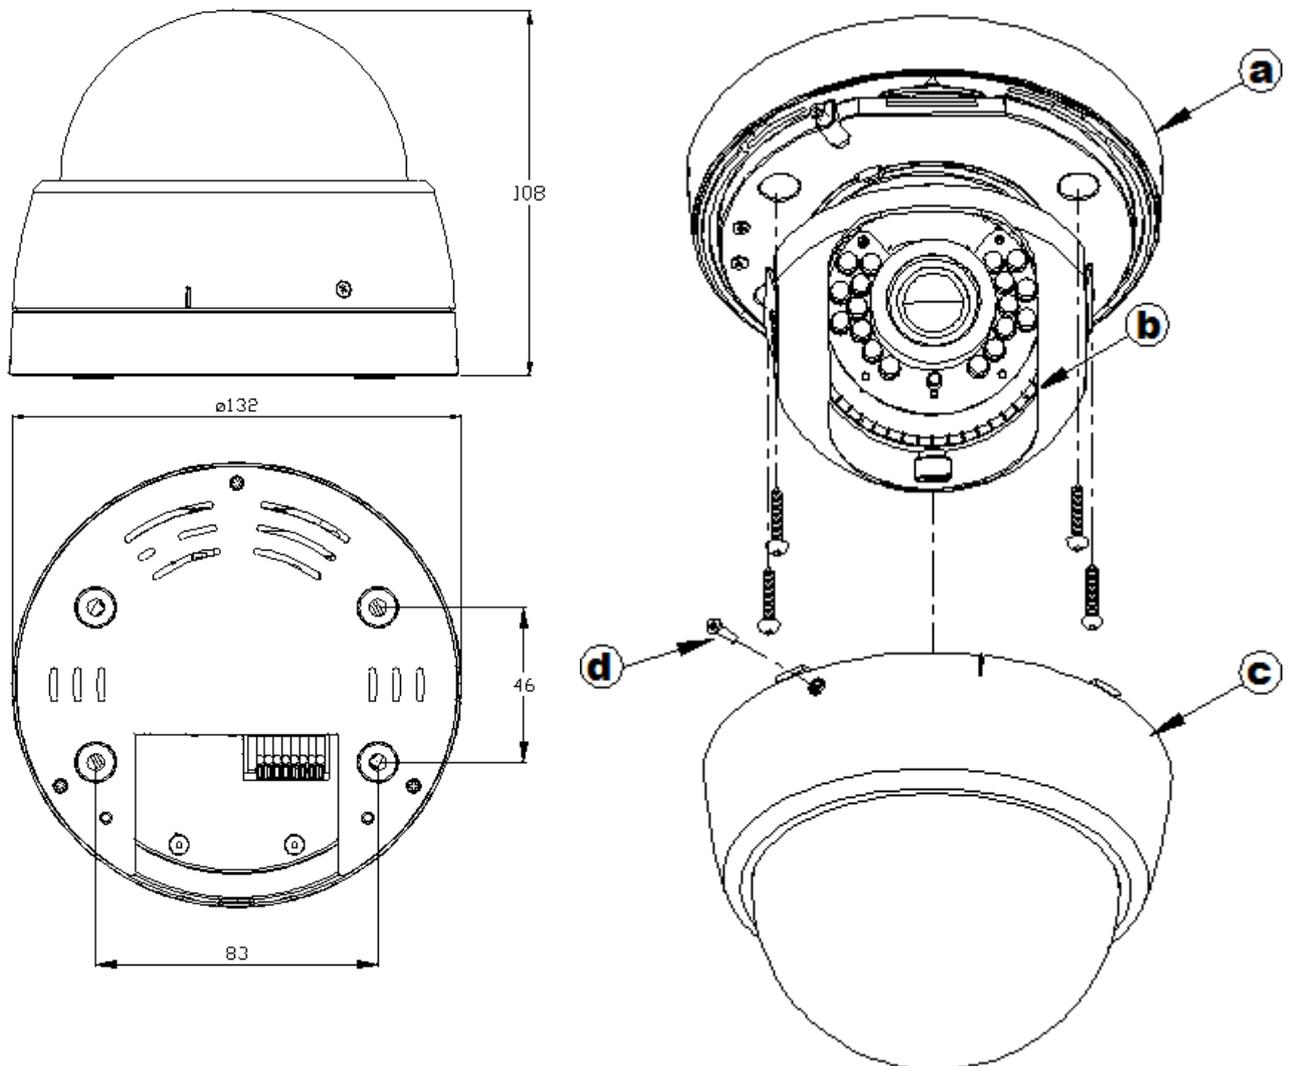

Dome Installation Steps

(Please refer to the top-right image above)

- a. Use screws to lock the bottom of camera to the ceiling or the wall.
- b. Adjust the lens angle with its 3-Axis bracket.
- c. Close the dome cover.
- d. Tighten the screw on the cover to fix it.




Bracket & Lens Adjustment

Adjust the camera to appropriate angles.

Pan: 172°


Rotation: 360°

Tilt: 60°

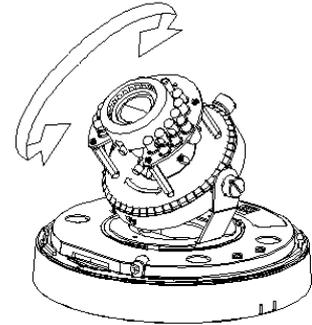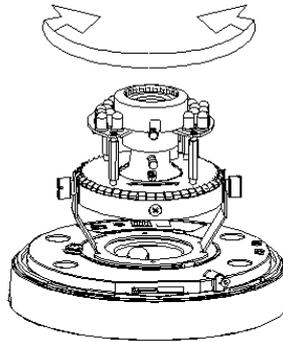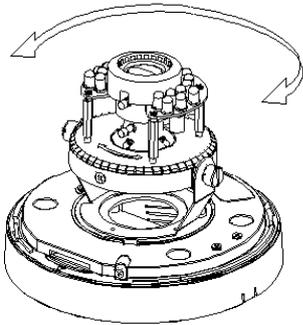

Connectors Instruction

Connect power adaptor first, then connect the IP Camera to PC or network, and set up the network configurations according to the network environment. For I/O setting, please refer to [I/O Configuration](#) for more descriptions.

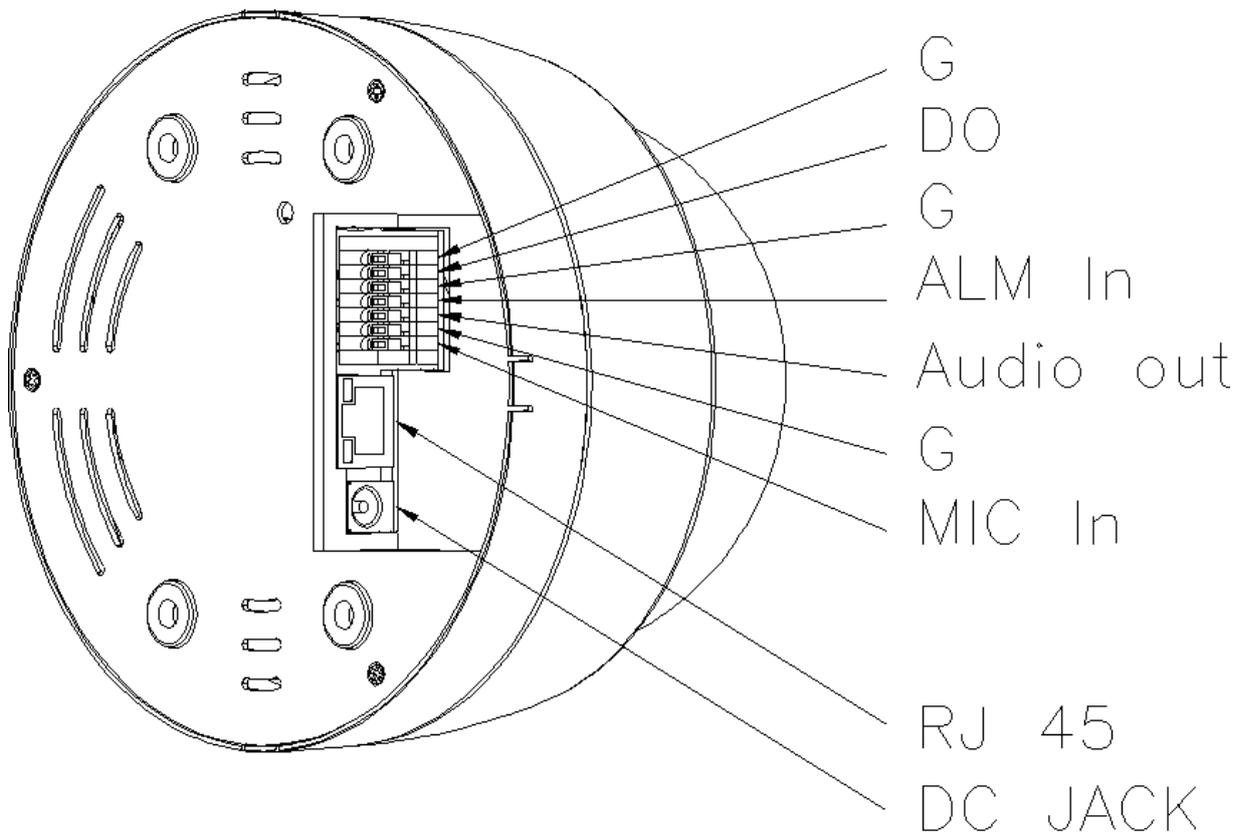


Video Out Connector


A Video Out connector is included in the accessories package.



Please plug the connector into the base as shown in the pictures below.

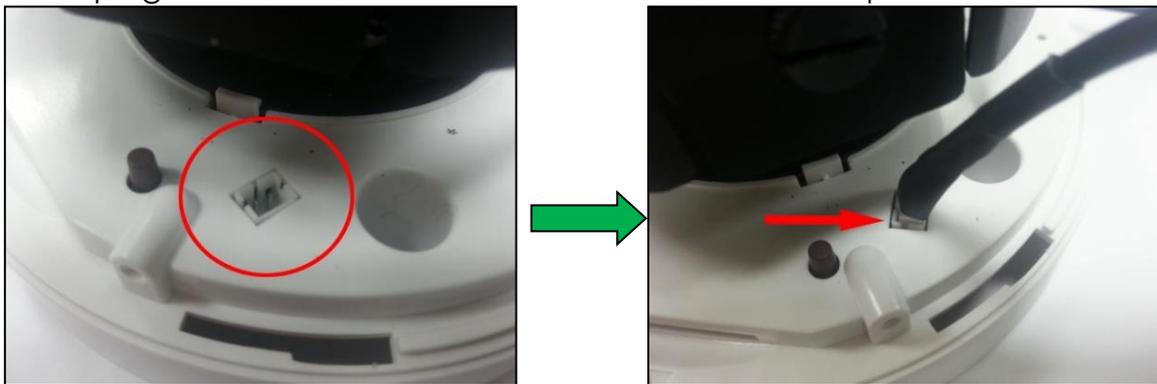


Box

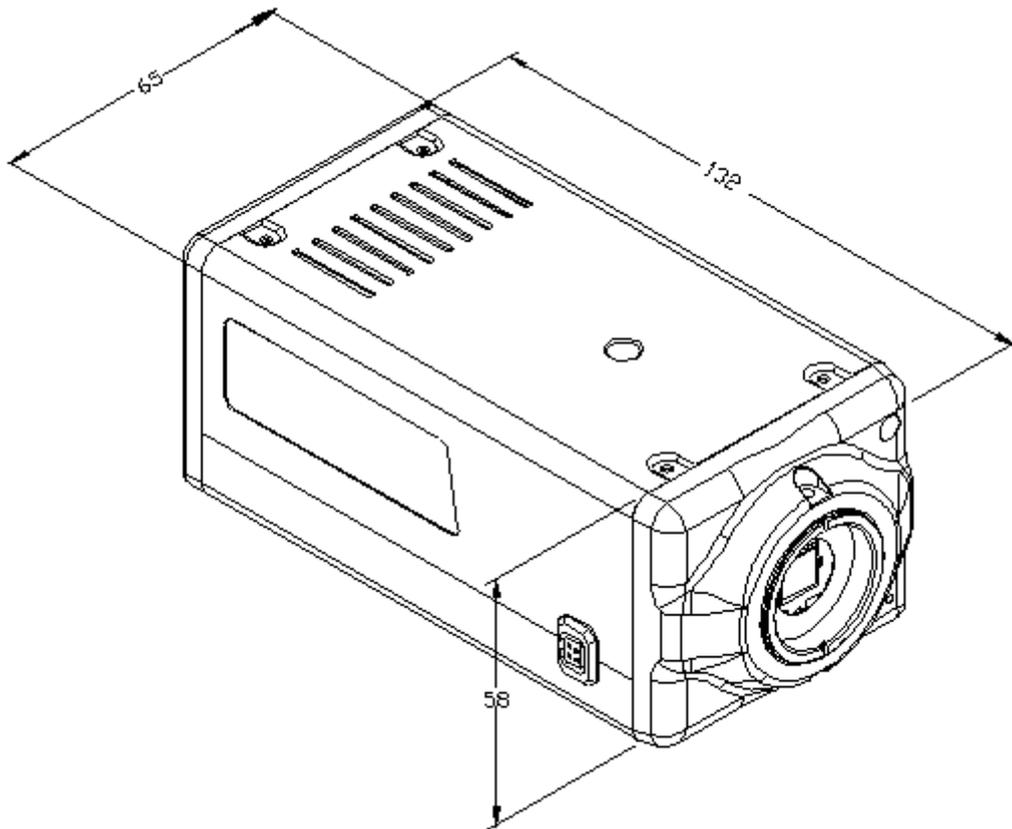

Connectors Instruction (Box)


Connect power adaptor first, then connect the IP Camera to PC or network, and set up the network configurations according to the network environment. For I/O setting, please refer to [I/O Configuration](#) for more descriptions.

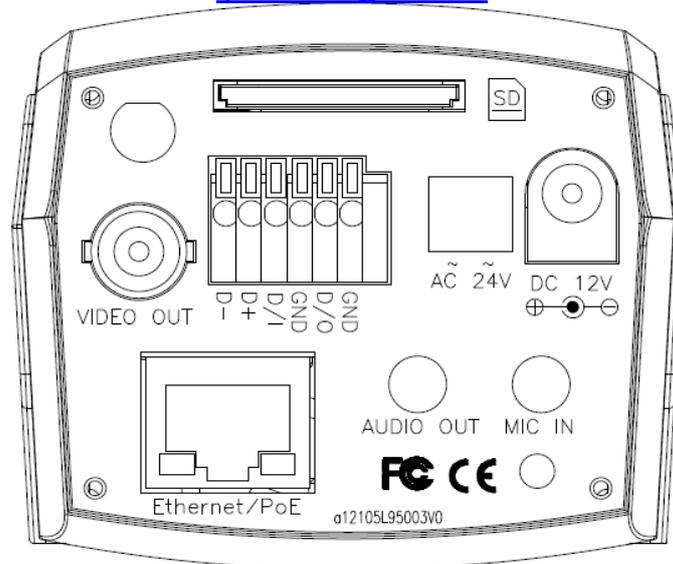

PoE (Power Over Ethernet)


802.3af, 15.4W PoE Switch is recommended (Optional)

Power over Ethernet (PoE) is a technology that integrates power into a standard LAN infrastructure. It allows providing power to a network device, such as an IP phone or a network camera, using the same cable for network connection. It eliminates the need for power outlets at the camera locations and enables easier application of uninterruptible power supplies (UPS) to ensure 24 hours a day, 7 days a week operation.

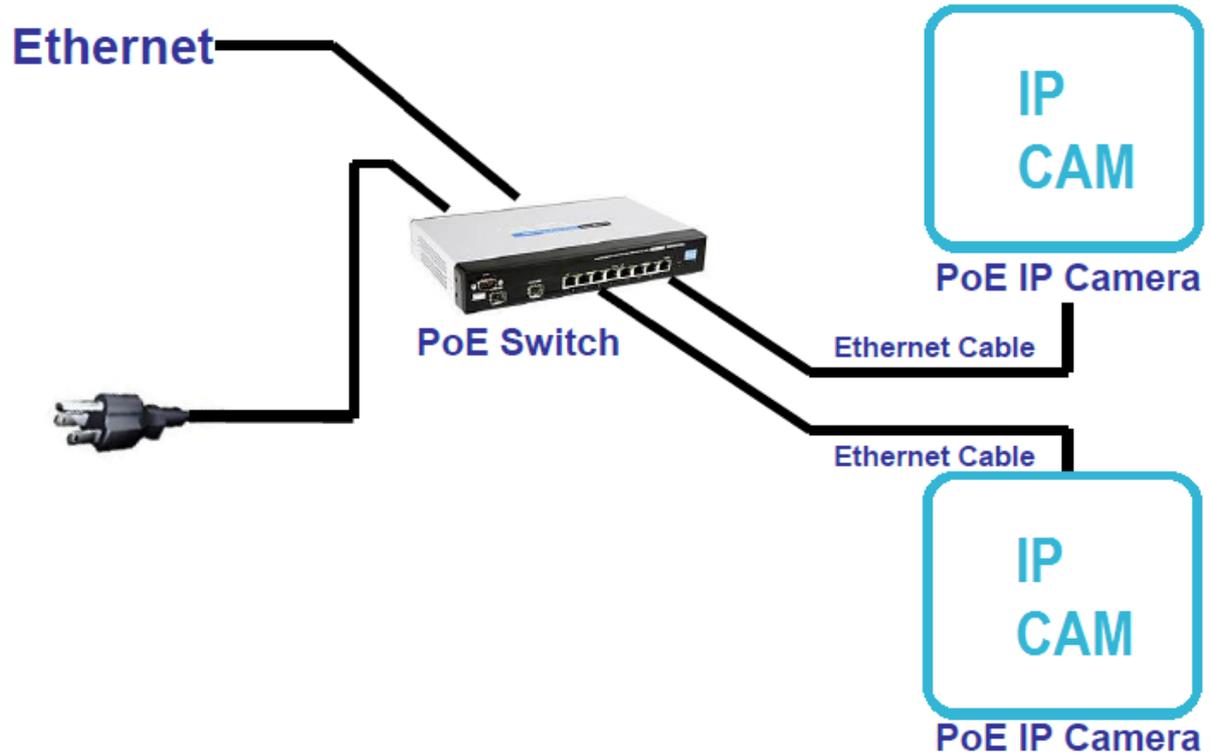


IP Assignment

- i. Open the software **IP Scanner** to assign the IP address of the IP Camera. Find it in **Applications** folder from the CD attached of the product package.
- ii. Execute the English version of **IP Scanner: IPScannerENG**
- iii. There are 3 kinds of IP configuration.
 - Fixed IP (Public IP or Virtual IP)
 - DHCP (Dynamic IP)
 - Dial-up (PPPoE)
- iv. For Windows XP SP2 or above, a Windows Security Alert may pop up. Choose the network type based on your surveillance environment, and click on **Allow access**.

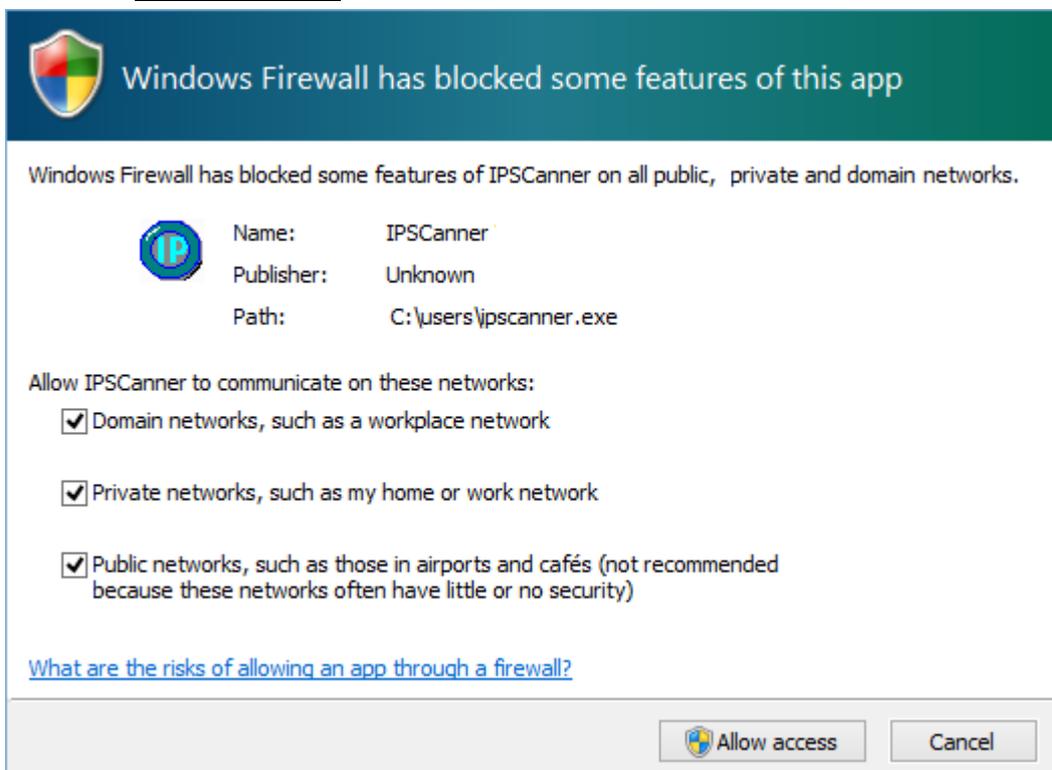

- v. **IP Scanner** will search for all the IP Cameras connected on the LAN. The user can click **Search IPCam** to search again.

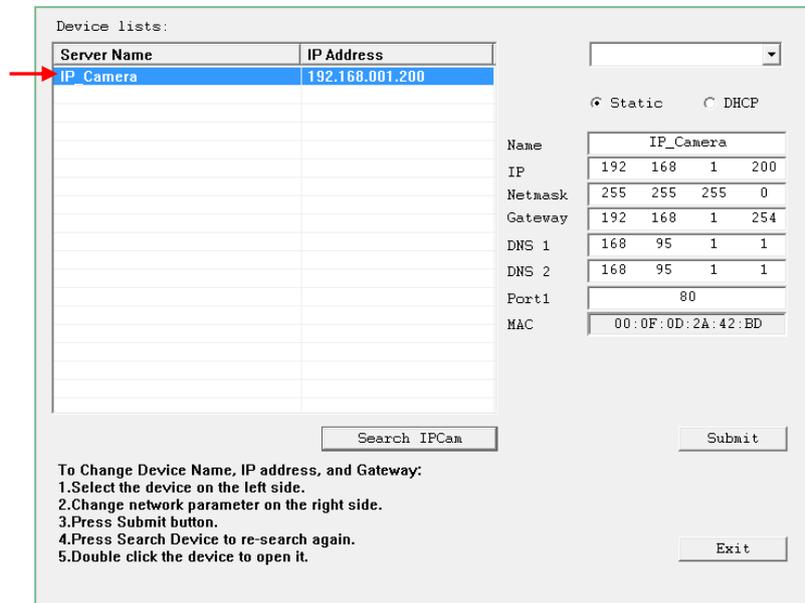

Device lists:

Server Name	IP Address
IP_Camera	192.168.001.200

Static DHCP

Name: IP_Camera

IP: 192 168 1 200

Netmask: 255 255 255 0

Gateway: 192 168 1 254

DNS 1: 168 95 1 1

DNS 2: 168 95 1 1

Port1: 80


MAC: 00:0F:0D:2A:42:BD

Buttons: Search IPCam, Submit, Exit

To Change Device Name, IP address, and Gateway:

1. Select the device on the left side.
2. Change network parameter on the right side.
3. Press Submit button.
4. Press Search Device to re-search again.
5. Double click the device to open it.

- vi. Click one of the IP Cameras listed on the left side. The network configuration of this IP camera will be shown on the right side once you highlight the device with your mouse. You can change the **name** of the IP Camera to your preference (e.g.: Office, warehouse). Change the parameters and click **Submit**.

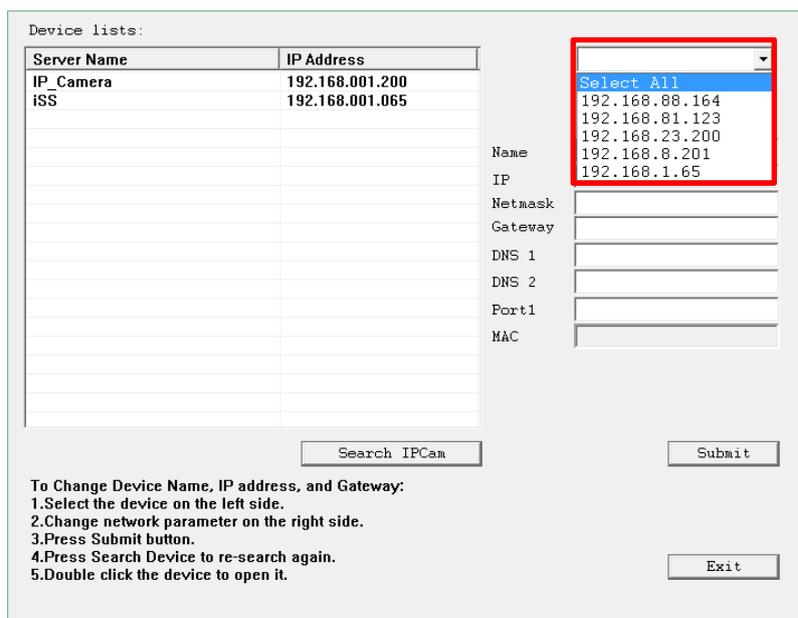

Device lists:

Server Name	IP Address
IP_Camera	192.168.001.200
iSS	192.168.001.065

Name:

IP:

Netmask:

Gateway:

DNS 1:

DNS 2:

Port1:

MAC:

Buttons: Search IPCam, Submit, Exit

To Change Device Name, IP address, and Gateway:

1. Select the device on the left side.
2. Change network parameter on the right side.
3. Press Submit button.
4. Press Search Device to re-search again.
5. Double click the device to open it.

You can select different network cards that you are currently connected to from the drop-down menu at the top right corner. You can also select the online device from a specific network card in **Device lists**, or choose **Select All** to include all network card devices in **Device lists**.

- vii. Please make sure the subnet of the PC IP address and the IP Camera IP address are the same.

The same Subnet

IP Camera IP address: 192.168.1.200

PC IP address: 192.168.1.100

Different Subnets

IP Camera IP address: 192.168.2.200


PC IP address: 192.168.1.100

To Change the PC IP address


Control Panel → Network Connections → Local Area Connection

Properties → Internet Protocol (TCP/IP) → Properties

Make sure your IP Camera and PC are in the same Subnet. If not, change the IP Camera subnet or the PC IP subnet accordingly below.

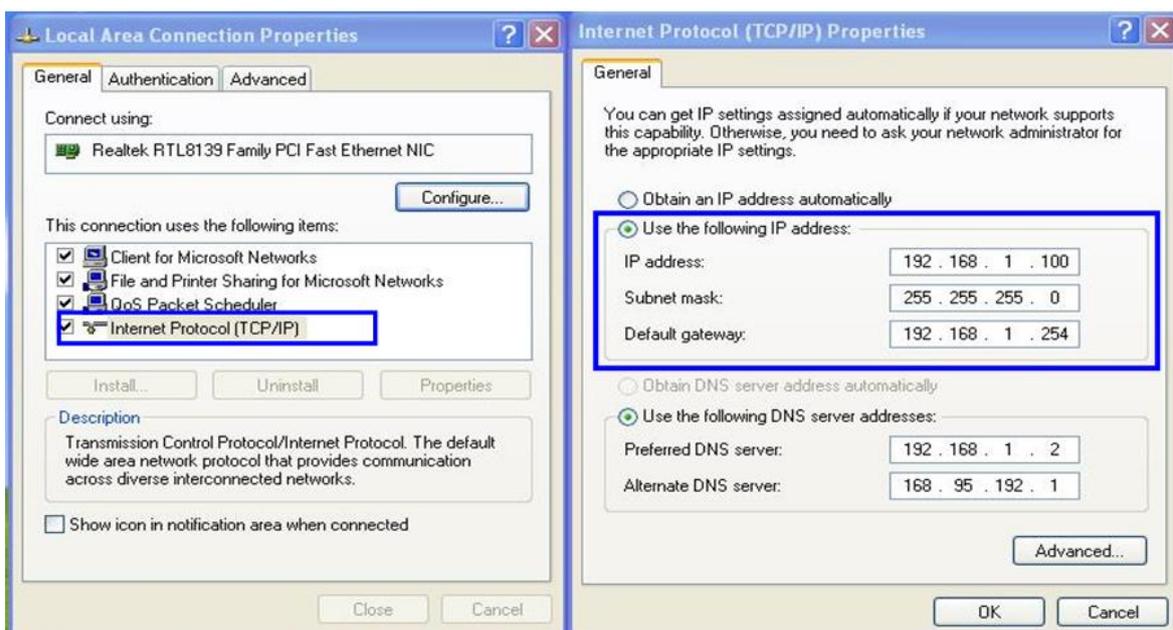

- viii. To quickly access remote monitoring, left-click the mouse twice on the selected IP Camera listed under **Device list** of **IP Scanner**.

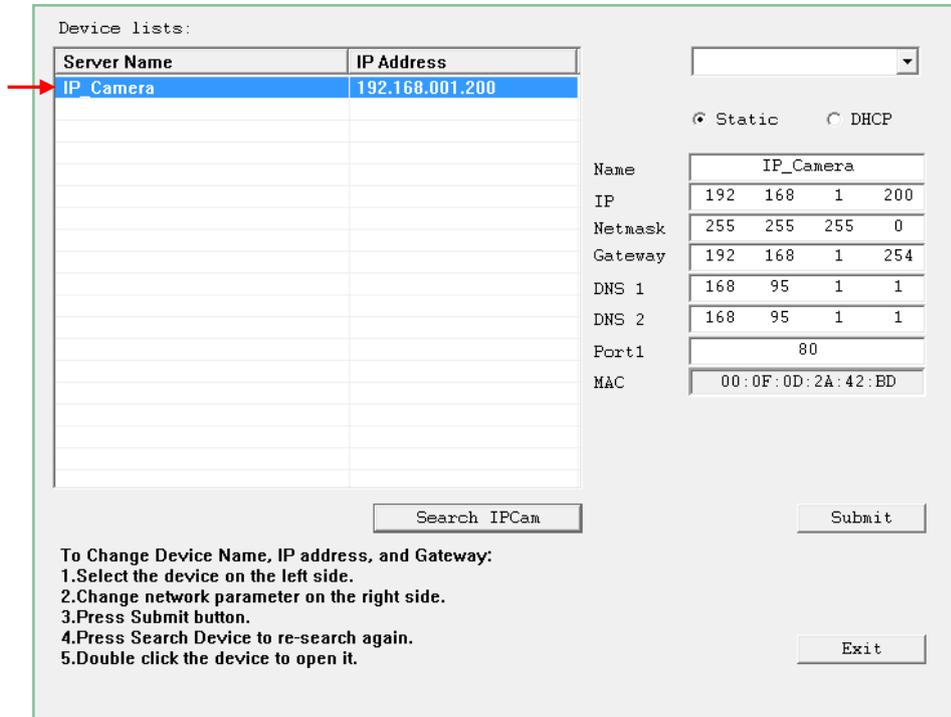

Device lists:

Server Name	IP Address
IP Camera	192.168.001.200

Static DHCP


Name: IP_Camera

IP	192	168	1	200
Netmask	255	255	255	0
Gateway	192	168	1	254
DNS 1	168	95	1	1
DNS 2	168	95	1	1
Port1	80			
MAC	00:0F:0D:2A:42:BD			

Search IPCam Submit Exit

To Change Device Name, IP address, and Gateway:
 1. Select the device on the left side.
 2. Change network parameter on the right side.
 3. Press Submit button.
 4. Press Search Device to re-search again.
 5. Double click the device to open it.

- ix. A default network browser of the camera control interface will open. Enter **admin** for both Username and Password to gain access.

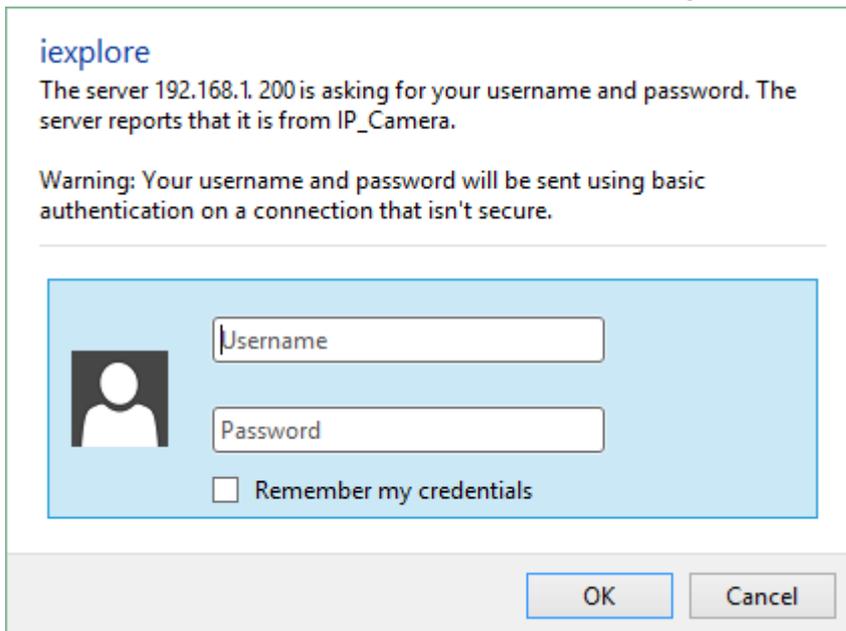

iexplore

The server 192.168.1. 200 is asking for your username and password. The server reports that it is from IP_Camera.

Warning: Your username and password will be sent using basic authentication on a connection that isn't secure.

Username

Password

Remember my credentials


OK Cancel

Install Active Control

For users using IE 6.0 or above

When viewing the camera video for the first time via IE, the browser will ask you to install the **ActiveX** component.

Choose '**Allow**'

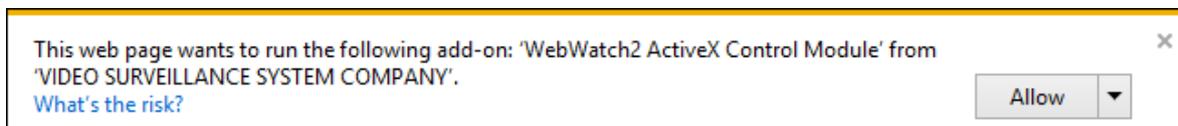





The ActiveX component should then be completed and user will be able to view the live video screen.

If the installation fails, please check the security settings in the IE browser.

Follow the steps below:


- 1) Go to **Start-Up Menu**  on the lower left corner of the **Windows**
- 2) Select **Control Panel** 
- 3) Double-click on  **Internet Options**.
- 4) You will then enter the page of **Internet Properties** settings.
- 5) Starting from **Internet Properties**, proceeding steps as below:

- Security → Custom Level → Security Settings → Download unsigned ActiveX controls → Enable or Prompt (recommended).
- Security → Custom Level → Security Settings → Initialize and script ActiveX controls not marked as safe → Enable or Prompt (recommended).

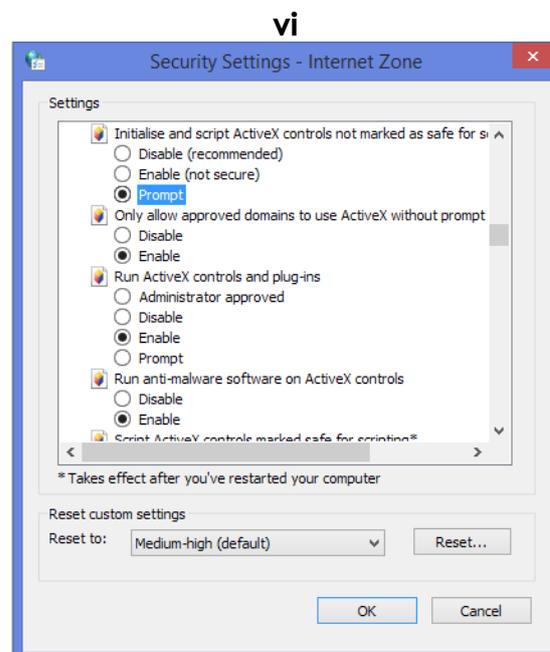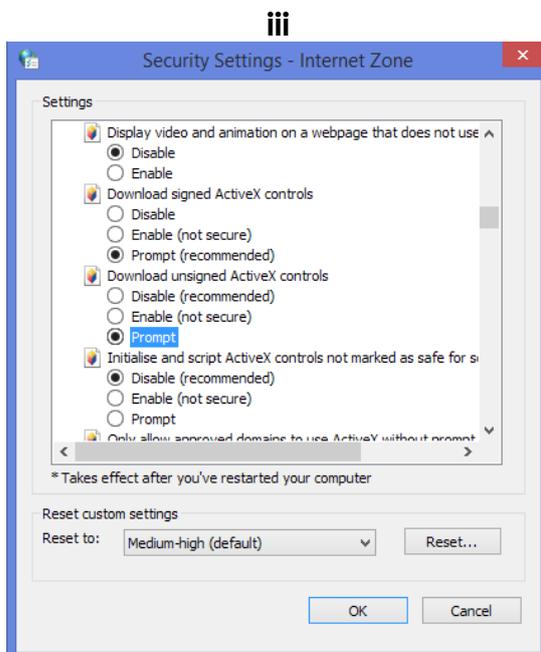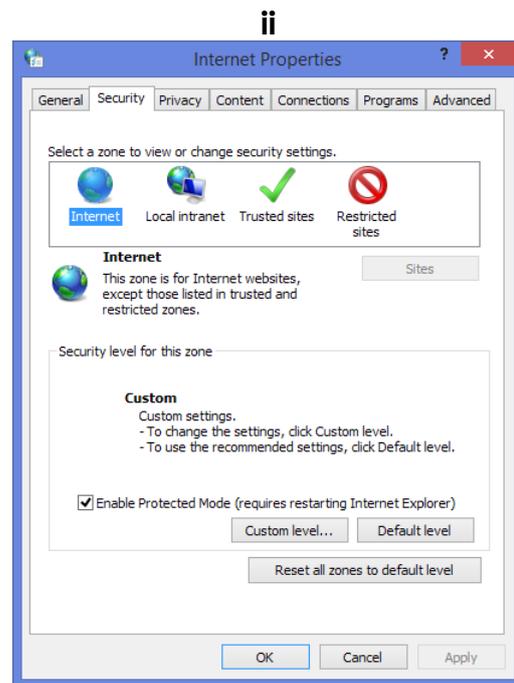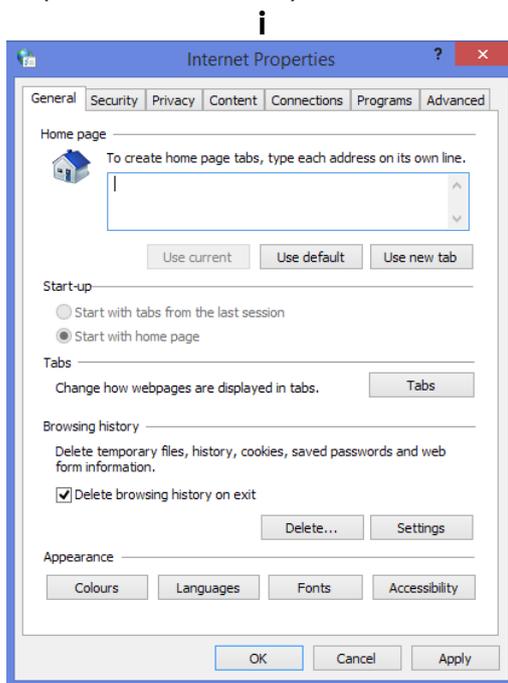


v

When popup the following dialogue box, click **Yes**.

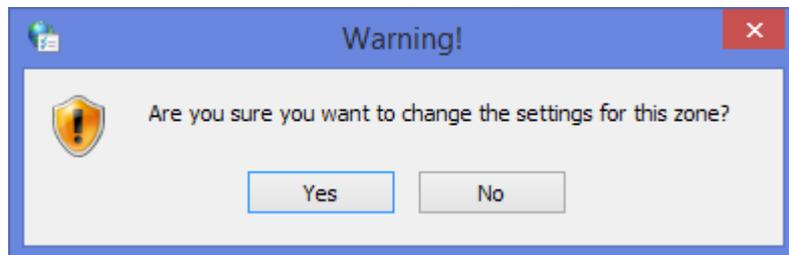

Another Method

Go to: IE→Tools → Internet Options... → Security Tab → Trusted sites → Add the IP address and click **OK**.

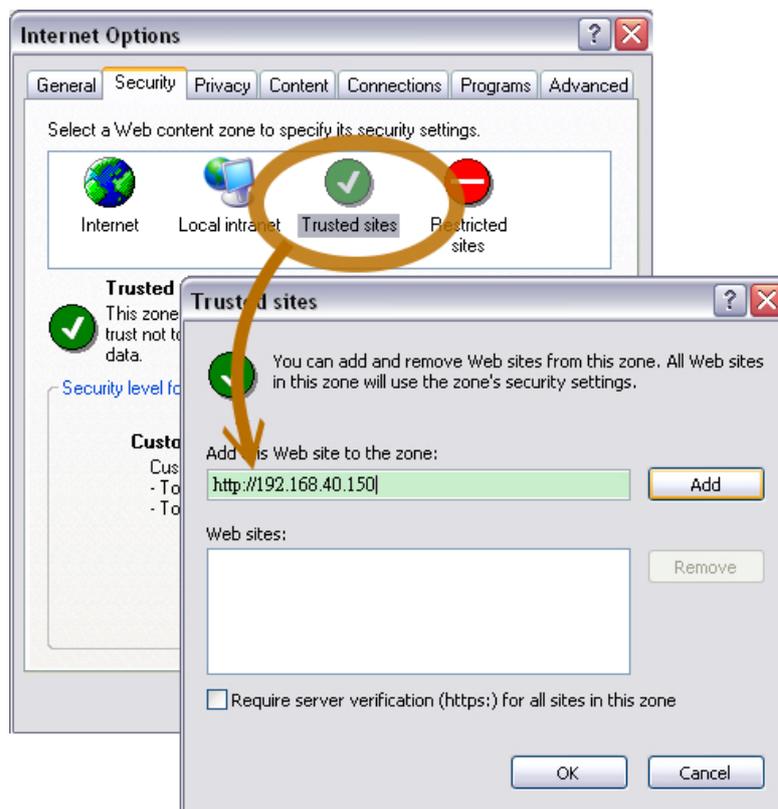


In the site list you can key in one single IP address or a LAN address. For example, if you add **192.168.21.***, all the IP address under **21.*** on the LAN will be regarded as trusted sites.


For Non-IE Web Browser Users

If you use Firefox or Google chrome to access the IP camera but fails to watch the live video, please follow the steps to install necessary tools: (The following pictures are based on chrome.)


- i. You may see the prompt message as the picture below. Click the **a** link: **Firstly, please install Microsoft Visual C++ 2010 Redistributable Package (x86).**

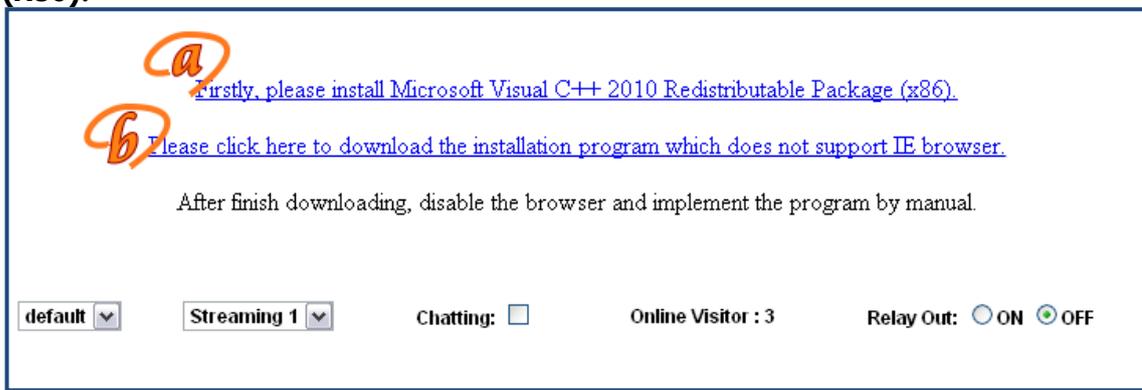

The link will conduct you to the Microsoft official site where you can download the tools. Please select the language and click **download**.

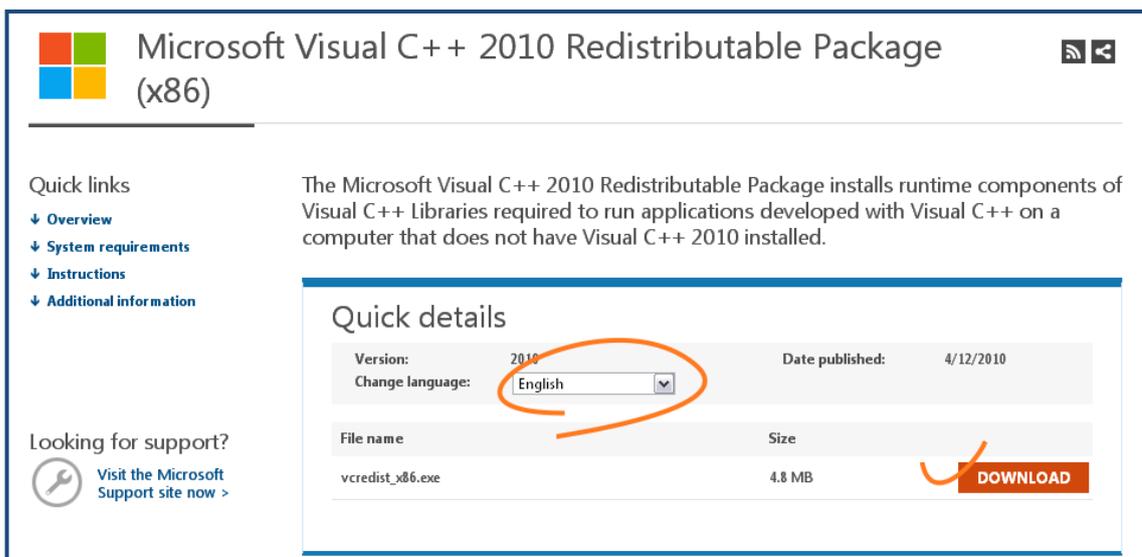

Tick the first and the third file in the pop-up window as the picture below.

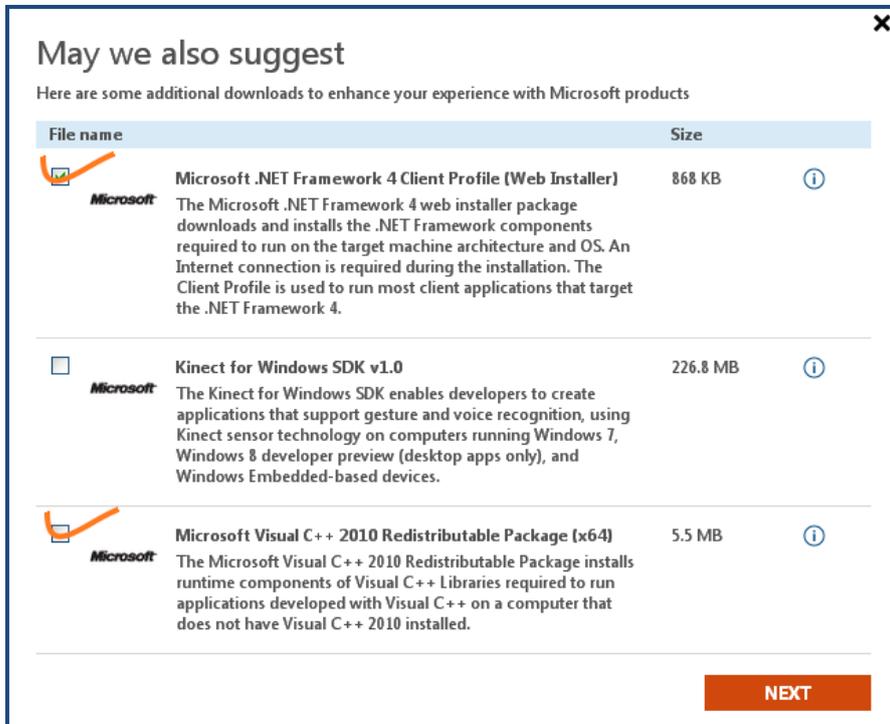


Click **Next** to download both **Microsoft .NET Framework 4 Client Profile (Web Installer)** and **Microsoft Visual C++ 2010 Redistributable Package (x64)**.

After finishing downloading, execute the two files respectively to install them. The windows may ask you to reboot the PC when the installation is finished.



 
- ii. Then, click the second link **Please click here to download the installation program which does not support IE browser** to download Setup ActiveX.




After finishing downloading, execute the files to install **ActiveX**. Then restart the browser.

- iii. If you execute the steps above but still cannot see live video normally, please try the following solution:

Search for the file **np_hoem_x.dll** in your system disk. For Windows XP users, please go to **Start** → **Search** → Search for **All files and folders** and key-in **np_hoem_x.dll**. For Windows 7 users, please use the search bar on the top-right of the Windows Explorer.

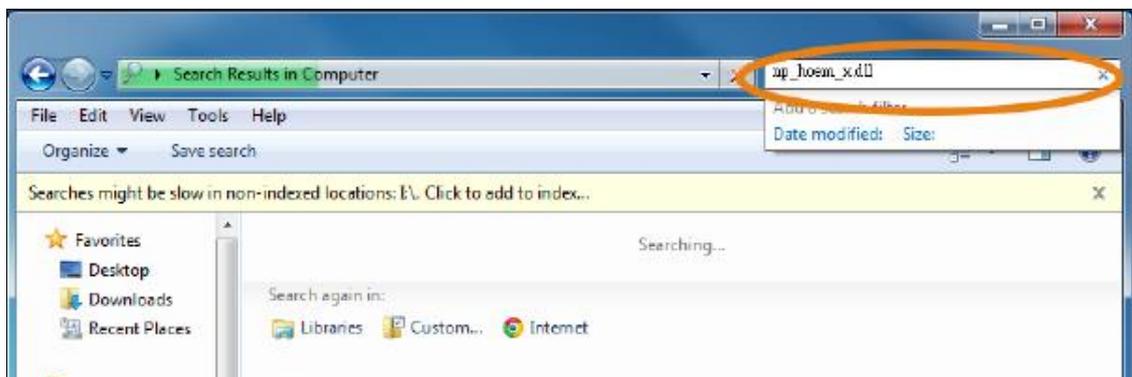

Delete all the files named **np_hoem_x.dll**. They're the **ActiveX** control tools installed in your computer, but the old version of **ActiveX** might not be compatible with the new version of the browser. Therefore, they need to be deleted in order to install the latest **ActiveX** control.

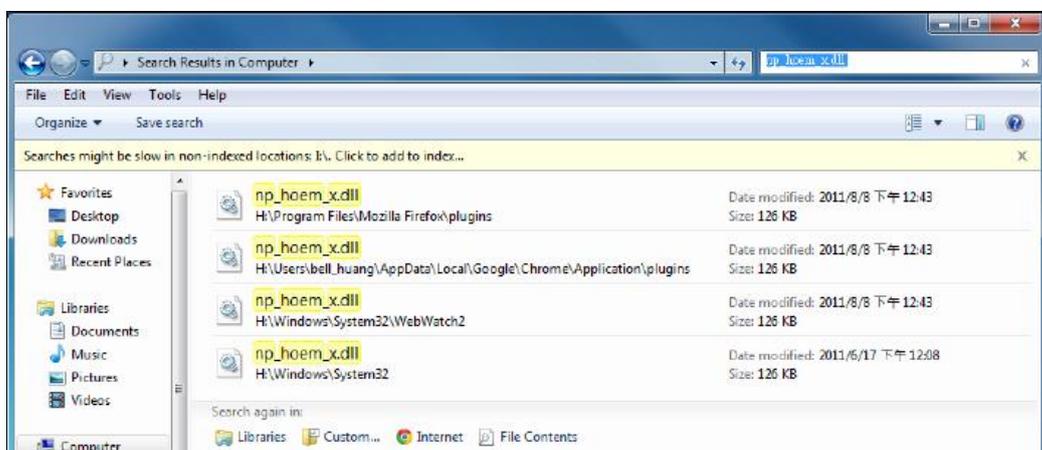

Start your web browser, and repeat the **step i: Download the installation program which does not support IE browser** to download and install **ActiveX**.

a [Firstly, please install Microsoft Visual C++ 2010 Redistributable Package \(x86\).](#)


b [Please click here to download the installation program which does not support IE browser.](#)

After finish downloading, disable the browser and implement the program by manual.

default ▼ Streaming 1 ▼ Chatting: Online Visitor : 3 Relay Out: ON OFF

LIVE VIDEO

Start an IE browser, input IP address of the IP camera in the address field. A dialogue box will pop up as below. Log in username & password using **admin**.

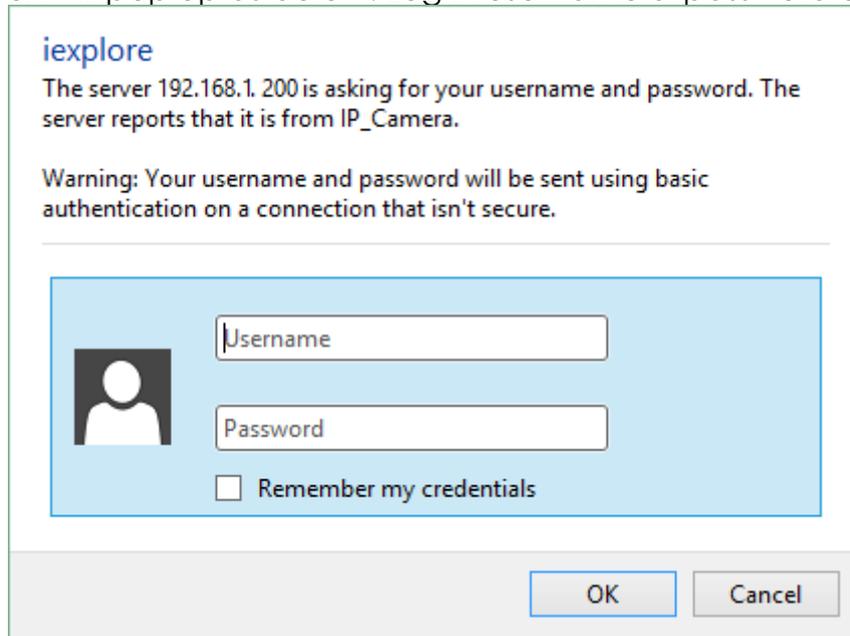

iexplore
The server 192.168.1.200 is asking for your username and password. The server reports that it is from IP_Camera.

Warning: Your username and password will be sent using basic authentication on a connection that isn't secure.

Remember my credentials

OK Cancel

When IP Camera is successfully connected it shows the following interface.



Please change default password is a sign which flickers on the live view screen as a reminder, to suggest the user to change the default password. You may configure the login settings in [System](#) to secure your account privacy.

Full Screen Mode

Double-clicking on the video screen will enter the full screen mode. Press “Esc” on your computer keyboard or double-click the video screen again for returning to normal screen mode.

Live Video Panel


- Click  - Get into the administration page.
- Click  - A snapshot preview window will appear. Choose  to save the current snapshot or choose  to discard it.
- Show the system time, video resolution, and other information.
- - Adjust image size by its ratio of 1/2x(default), 1x, and 2x.
- - Select the video streaming source: If the streaming 2 is set closed in Video Setting, this function will not be displayed.


Streaming 2 Setting
 Basic Mode Advanced Mode Close
- Tick on **Chatting** checkbox to enable two-way audio. You may adjust settings from Audio Setting.
- **Online Visitor:** Shows how many people are connected to this device.
- Click on   icons to adjust Zoom In / Zoom Out.
- **Focus:** Click on   icons to adjust focus.
- **Auto Focus:** Click on  icon to automatically adjust focus.


- **Home**: Click to view without adjustments through Focus & Zoom.
- **Speed**: Set the zoom speed.
- Control the external output device or DO (digital output) connected to this camera.

Submenu


Right-Click the mouse on live video screen, a pop-up menu will then appear as below.

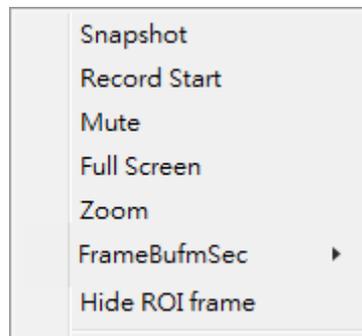

- Snapshot**: Save a JPEG picture
- Record Start**: Record the video to the local PC. The video format is AVI and you will be asked to set up the directory for the video file. To stop recording, right-click again. Select "Record Stop".
- Mute**: Click to turn off the audio. Click again to turn it on.
- Full Screen**: Full-screen mode.
- Zoom**: Select "zoom" within the pop-up dialogue box and then drag and drop the bar to adjust the zoom factors.

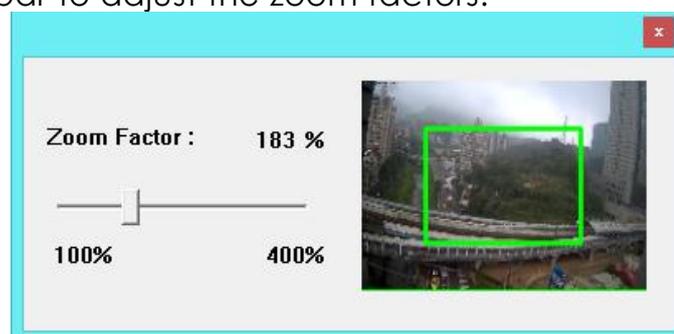


- vi. **Frame Buffm Sec:** This function aims to build a temporary buffer to accumulate several video frames in a LAN network environment. It can make video streaming smooth when the network speed is slow.

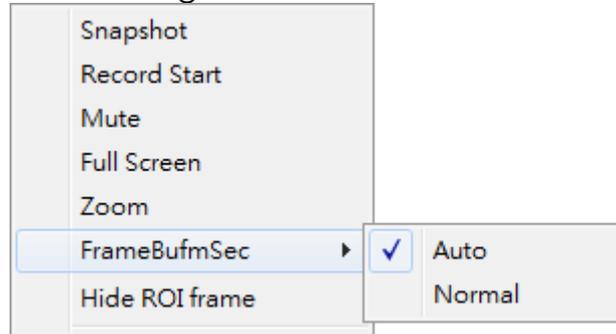

Select **Auto** to allow this function automatically help fix the streaming performance whenever the video happens to be lagging.

Select **Normal** to play the video data based on the current network streaming performance. (Note: the lagging of the video displayed will not be seen as a result of the actual video data)

- vii. **Hide / Show ROI frame:** Once the ROI frame has been set up from **AV Settings**, there will be frames in colors appearing on the live view. Choose to hide to make the frames invisible, or choose show to keep the frames.

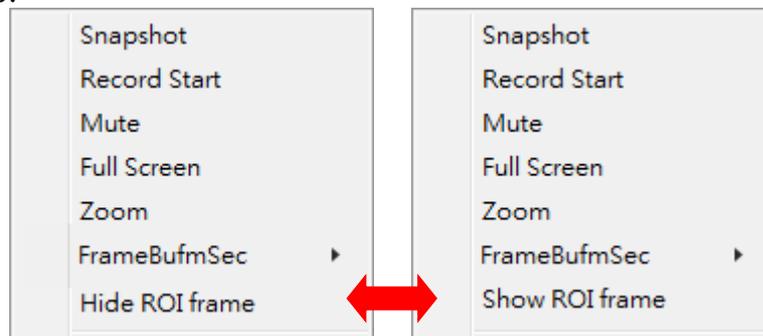

CAMERA CONFIGURATION

System



Click  to get into the administration page. Click  to go back to the live video page.




The screenshot shows the 'System Information' configuration page. On the left is a navigation menu with categories: System, Network, A/V Setting, and Event. The main content area is titled 'System Information' and contains several sections:

- Server Information:**
 - MAC Address: 00:0F:0D:28:D5:07
 - Server Name: IP Camera
 - Language: English (selected), 繁體中文, 简体中文, French, Russian, Italian, Spanish, German, Portuguese, Polish, Japanese.
- OSD Setting:**
 - Time Stamp: Disabled (selected)
 - Text: Disabled (selected)
 - OSD Display (selected) | Text Edit
- Time Setting:**
 - Server Time: 2017/5/2 12:14:56 Time Zone: GMT+08:00
 - Date Format: yy/mm/dd (selected), mm/dd/yy, dd/mm/yy
 - Time Zone: GMT+08:00
 - Enable Daylight Saving: (unchecked)
 - NTP:
 - NTP Server: pool.ntp.org
 - Update: 6 Hour
 - Time Shift: 0 Minutes [-1440..1440]
 - Synchronize with PC's time:
 - Date: 2017/5/2
 - Time: 12:14:2
 - Manual:
 - Date: 2017/5/2
 - Time: 12:13:56
 - The date and time remain the same (selected)

An 'Apply' button is located at the bottom right of the configuration area.

System Information

Server Information

Set up the camera name, language, and the camera time.



Server Information


MAC Address: 00:0F:0D:27:4A:4B

Server Name: IP_Camera Status Bar

LED Indicator: ON OFF

Language : English 繁體中文 简体中文 French
 Russian Italian Spanish German
 Portuguese Polish Japanese

- **Mac Address:** The **Media Access Control Address** of the network interface card installed in this specific device.
- **Server Name:** This is the **CAMERA NAME** which will also be shown on the IP Scanner. Tick the checkbox of **Status Bar** to have it displayed in [live video](#). For example, if you key in DEMO, it will be displayed at live video mode at the bottom. **DEMO SEP/17/2018 13:52:25 H.264+ Size:3840x2160**
- **LED Indicator:** Turn on/off the LED indicator on the camera.
- **Language:** When a language preference is selected, the following dialogue box will pop up to confirm the change.

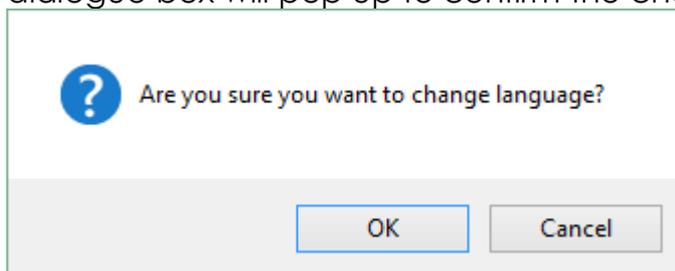

OSD Setting

You can adjust the **Position** for the **Enabled** option of **Time Stamp** or **Text** which will be displayed on [live video](#) screen.



OSD Setting

Time Stamp: Enabled Disabled

Text: Enabled Disabled

OSD_Display Text Edit

Click **Text Edit** to open the editing window. Click **Upgrade** to apply settings.

Text Edit



Text Edit

Text

Size

Transparency

Upgrade

Time Setting

Select between NTP, Synchronize with PC's time, Manual, The date and time remain the same for setting the server time.

Time Setting

Server Time: 2015/7/28 12:43:57 **Time Zone:** GMT+08:00

Date Format: yy/mm/dd mm/dd/yy dd/mm/yy

Time Zone:

Enable Daylight Saving:

	Month	Day of Week	Time
DST Start:	<input type="text" value="Mar"/>	<input type="text" value="2nd"/>	<input type="text" value="Sun"/>
DST End:	<input type="text" value="Nov"/>	<input type="text" value="1st"/>	<input type="text" value="Sun"/>

NTP :

NTP Server :

Update : Hour

Time Shift : Minutes [-1440..1440]

Synchronize with PC's time

Date :

Time :

Manual

Date :

Time :

The date and time remain the same


EasyLink (Optional)



The image shows a software window titled "EasyLink". It contains a text field labeled "EasyLink ID:" with the value "FRPU8N6WV9FCTG6GUHZ1" entered. Below this is a "QR Code:" label next to a square QR code. At the bottom right of the window is an "Apply" button.


Install **IP Motion App** on your mobile phone to access **EasyLink** operation which allows user to watch IP camera live view on self-owned mobile phones. Once the installation is done, either enter the **EasyLink ID** from the IP camera web browser, or simply scan the **QR Code** to help you log in to your IP camera through **IP Motion App** and watch the live view.

For iOS

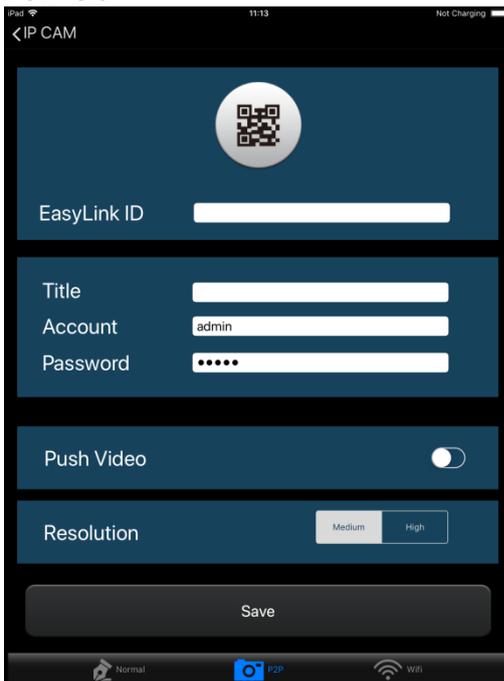

The image shows the iOS app interface for EasyLink configuration. It features a QR code scanner at the top. Below it are input fields for "EasyLink ID", "Title", "Account" (with "admin" entered), and "Password" (with masked characters). There is a "Push Video" toggle switch which is turned on, and a "Resolution" selector with "Medium" and "High" options. A "Save" button is at the bottom. The status bar at the top shows "11:13" and "Not Charging".

For Android

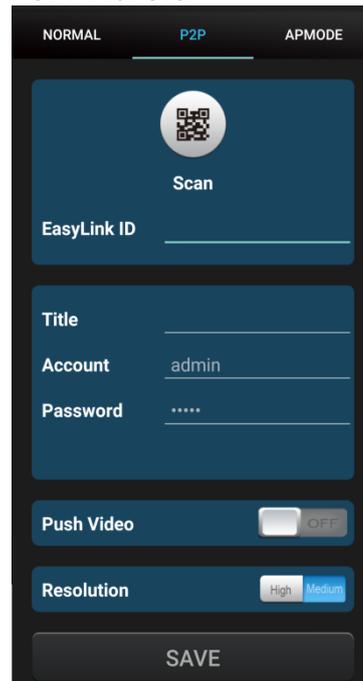

The image shows the Android app interface for EasyLink configuration. It features a QR code scanner at the top. Below it are input fields for "EasyLink ID", "Title", "Account" (with "admin" entered), and "Password" (with masked characters). There is a "Push Video" toggle switch which is turned off, and a "Resolution" selector with "High" and "Medium" options. A "SAVE" button is at the bottom. The top navigation bar shows "NORMAL", "P2P", and "APMODE" modes.

Read more about operating **IP Motion App** from the user's manual [document](#) inside the folder [User Manual Mobile Phone APP](#) which comes as part of the [CD contents](#).

Note: Your smartphone must be equipped with a camera and featured with a QR code scanner application.

User Management

User Management

Anonymous User Login

YES NO

Universal Password (differs by IP Address)

YES NO

Add User

Username:
 Password:
 Confirm:

User List

Username	User Group	Modify	Remove
admin	Administrator	Edit	-----
grace	Guest	Edit	Remove

Default Account

Show reminder message [Please change IP Cam default password]

Anonymous User Login

Select **Yes** for allowing access to watch [live video](#) of the IP camera without having to input username and password. Yet when entering the configuration page of the IP camera, the system will do otherwise. Select **No** for requiring a username and login to access the camera.

Universal Password

Select **Yes** for allowing login to this IP camera by universal password. Please refer to [Universal Password](#) chapter for more explanations. Select **No** for disabling universal password.

Add User

The IP Camera supports 2 different users: **Administrator** and **Guest**. **Administrator** can operate everything. **Guest** has the right to access [live view](#), Time sync, location setting, playback viewing and check playlist.

User List


Type the user name and password, then click **Add/Set**. The guest user can only browse live video page and is not allowed to enter the configuration page. Click **Edit** or **Remove** in the user list to modify them. The system will ask

you to input the password in the pop-up window before you edit the user information.

Default Account

Please change default password is a sign which appears on the [live view](#) screen as a reminder, suggesting the user to change the default password. Click the checkbox to enable/disable the reminder message.

System Update

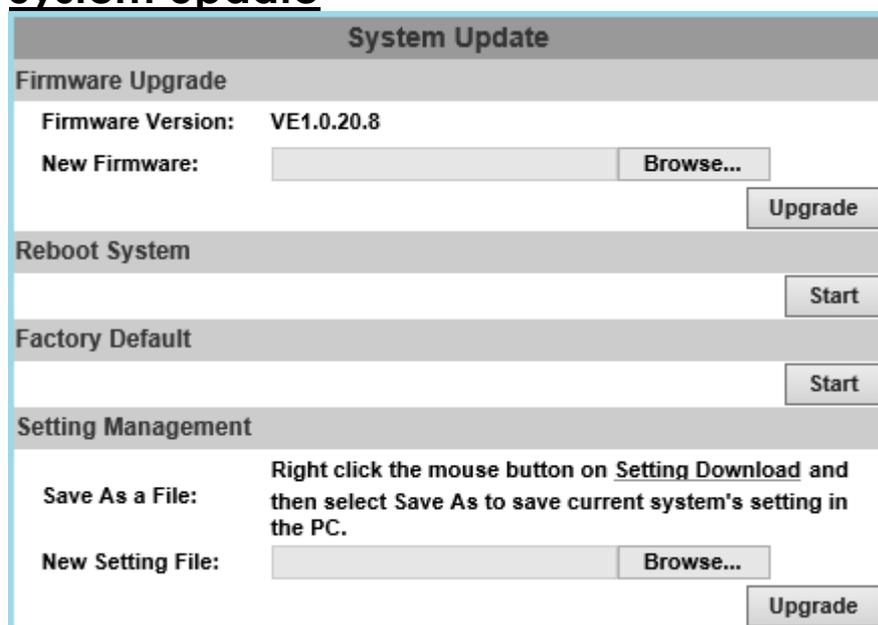

The screenshot shows a web interface titled "System Update" with the following sections:

- Firmware Upgrade**: Shows "Firmware Version: VE1.0.20.8". Below it is a "New Firmware:" field with a "Browse..." button and an "Upgrade" button.
- Reboot System**: A "Start" button.
- Factory Default**: A "Start" button.
- Setting Management**: Includes a "Save As a File:" label with instructions: "Right click the mouse button on Setting Download and then select Save As to save current system's setting in the PC." Below this is a "New Setting File:" field with a "Browse..." button and an "Upgrade" button.

Firmware Upgrade

To update the firmware online, click **Browse...** to select the firmware, and then click **Upgrade** to proceed.

Reboot System

Restart the IP camera.

Factory Default

Delete all the settings of this IP camera.

Setting Management

The user can download the current settings to PC, or upgrade from previous saved settings.

- **Setting Download**

Right-click the mouse button on **Setting Download** → Select **Save AS...** to save current IP Camera settings in PC → Select saving directory → Save

- **New Setting File**

To upgrade new settings, click **Browse** to search previous settings from a pop-up window, then click **Open** → **Upgrade** → Settings update confirm. Finally, click **index.html**. to returning to main page.


Network



Click  to get into the administration page.



Click  to go back to the live video page.

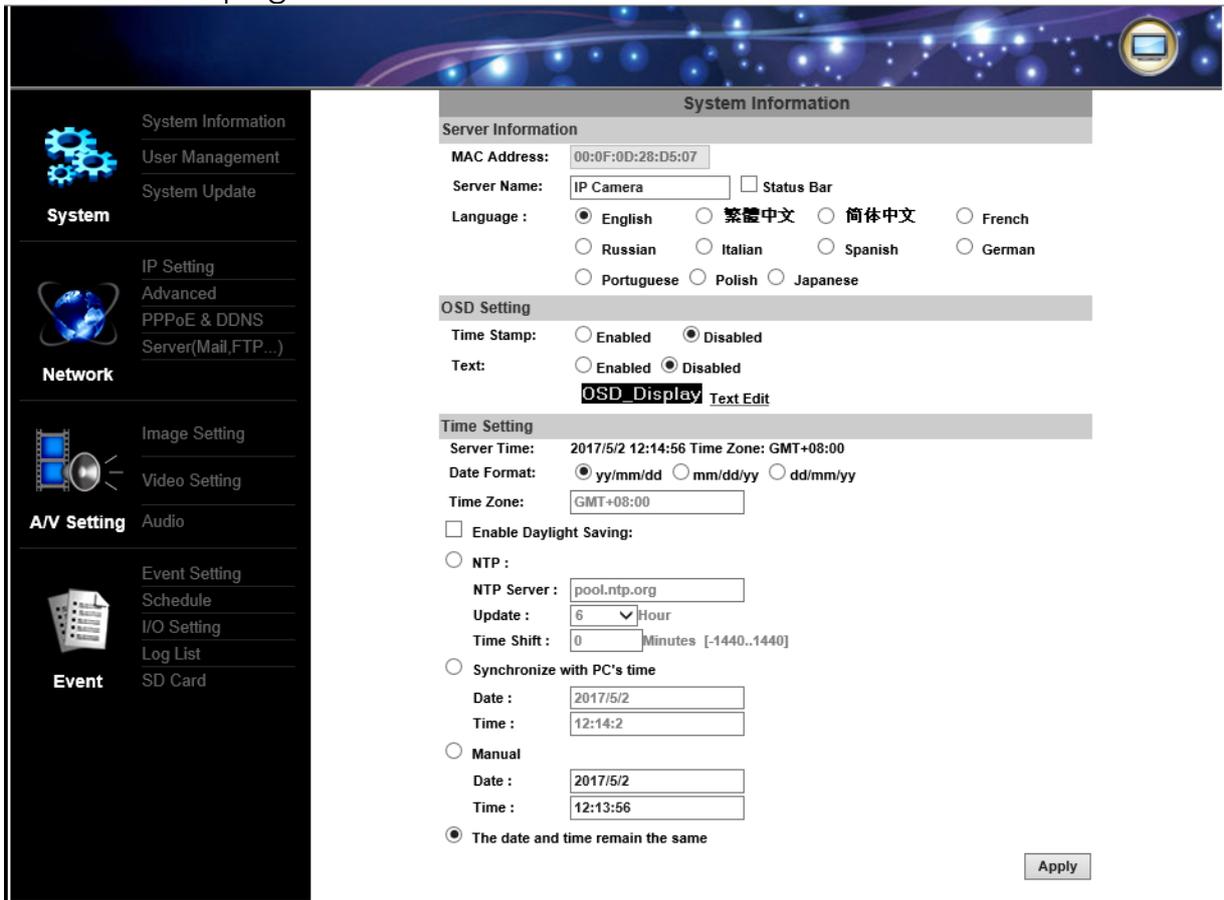

The screenshot displays the 'System Information' configuration page. On the left is a navigation menu with categories: System (System Information, User Management, System Update), Network (IP Setting, Advanced, PPPoE & DDNS, Server(Mail,FTP...)), A/V Setting (Image Setting, Video Setting, Audio), and Event (Event Setting, Schedule, I/O Setting, Log List, SD Card). The main content area is titled 'System Information' and contains the following sections:

- Server Information:**
 - MAC Address: 00:0F:0D:28:D5:07
 - Server Name: IP Camera Status Bar
 - Language: English, 繁體中文, 简体中文, French, Russian, Italian, Spanish, German, Portuguese, Polish, Japanese
- OSD Setting:**
 - Time Stamp: Enabled, Disabled
 - Text: Enabled, Disabled
 - [OSD Display](#) [Text Edit](#)
- Time Setting:**
 - Server Time: 2017/5/2 12:14:56 Time Zone: GMT+08:00
 - Date Format: yy/mm/dd, mm/dd/yy, dd/mm/yy
 - Time Zone: GMT+08:00
 - Enable Daylight Saving:
 - NTP:
 - NTP Server: pool.ntp.org
 - Update: 6 Hour
 - Time Shift: 0 Minutes [-1440..1440]
 - Synchronize with PC's time
 - Date: 2017/5/2
 - Time: 12:14:2
 - Manual
 - Date: 2017/5/2
 - Time: 12:13:56
 - The date and time remain the same

An 'Apply' button is located at the bottom right of the configuration area.

Enter the Network by clicking on titles from IP Setting, Advanced, PPPoE & DDNS and Server Settings.

IP Settings

IP Assignment

The IP Camera supports DHCP and static IP.

IP Setting	
IP Assignment	
<input type="radio"/> DHCP	
<input checked="" type="radio"/> Static	
IP Address:	<input type="text" value="192.168.1.200"/>
Subnet Mask:	<input type="text" value="255.255.255.0"/>
Gateway:	<input type="text" value="192.168.1.254"/>
DNS 0:	<input type="text" value="168.95.1.1"/>
DNS 1:	<input type="text" value="168.95.192.1"/>

- **DHCP:** The IP Camera will get all the network parameters automatically.
- **Static IP:** Type-in the IP address subnet mask, gateway, and DNS.


IPv6 Assignment

By enabling DHCPv6 you can configure the following IPv6 address settings:

IPv6 Assignment	
<input checked="" type="checkbox"/> IPv6 Enabled:	
<input checked="" type="checkbox"/> Manually setup the IPv6 address:	
IPv6 Address/Prefix:	<input type="text" value="::"/> / <input type="text" value="64"/>
IPv6 Gateway:	<input type="text" value="::"/>
IPv6 DNS:	<input type="text" value="::"/>
DHCPv6:	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
IPv6 Address:	fe80::20f:dff:fe00:284d

- **Manually setup the IPv6 address:** Key-in the Address, Gateway, and DNS.

- **DHCPv6:** If you have a DHCPv6 server, enable it to assign the IPv6 automatically. The assigned IP address will be displayed alongside.
- **Automatically generated IPv6 Address:** Indicates a virtual IPv6 address generated automatically by the IP camera. This virtual IPv6 address cannot be used on WAN.
- Use IPv6 address to access the IP camera. Open a web browser and input **[IPv6 address]** in its address bar. The **[]** parentheses mark is necessary.

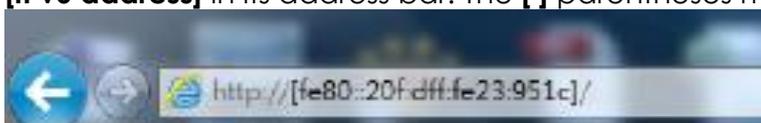

Port Assignment

The user might need to assign a different port to avoid conflicts when setting up the IP.

Port Assignment	
Web Page Port:	<input type="text" value="80"/>
HTTPS Port:	<input type="text" value="443"/> HTTPS Setting

- **Web Page Port:** Setup the web page connecting port and video transmitting port (Default: 80)
- **HTPps Port:** Setup the https port(Default: 443)

UPnP

UPnP	
UPnP:	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled
UPnP Port Forwarding:	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
External Web Port:	<input type="text" value="80"/>
External HTTPS Port:	<input type="text" value="443"/>
External RTSP Port:	<input type="text" value="554"/>

This IP camera supports UPnP, if this service is enabled on your computer, the camera will automatically be detected and a new icon will be added to **My Network Places**.

- **UPnP Port Forwarding:** Enable UPnP Port Forwarding for accessing the IP Camera from the Internet; this option allows the IP Camera to open ports on the router automatically so that video streams can be sent out from a LAN. There are three external ports for being set: **Web Port, Http Port** and

RTSP port. To utilize of this feature, make sure that your router supports **UPnP** and is activated.


Note: *UPnP must be enabled on your computer.*
Please follow the procedure to activate UPnP:

<Approach 1>


- i. open the **Control Panel** from the **Start Menu**
- ii. Select **Add/Remove Programs**
- iii. Select **Add/Remove Windows Components** and open **Networking Services** section
- iv. Click **Details** and select **UPnP** to setup the service.
- v. The IP device icon will be added to **My Network Places**.
- vi. The user may double click the IP device icon to access IE browser

<Approach 2>

- i. Open **My Network Space**
- ii. Click **Show icons for networked UPnP devices** in the tasks column on the left of the page.
- iii. Windows might ask your confirmation for enabling the components. Click **Yes**.

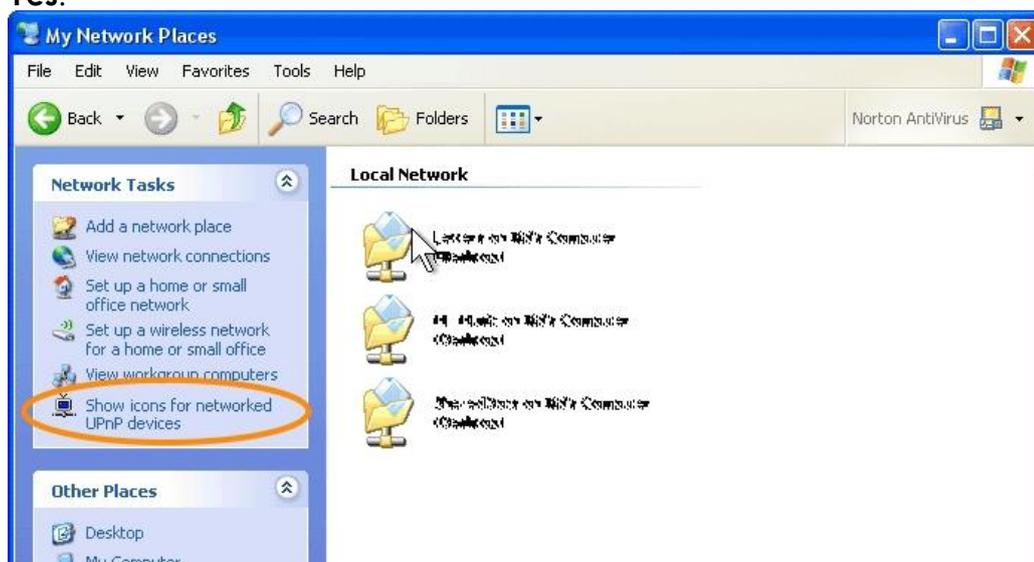

- iv. Now the IP device is displayed under the LAN. Double-click the icon to access the camera via web browser. To disable the UPnP, click **Hide icons for networked UPnP devices** in the tasks column.

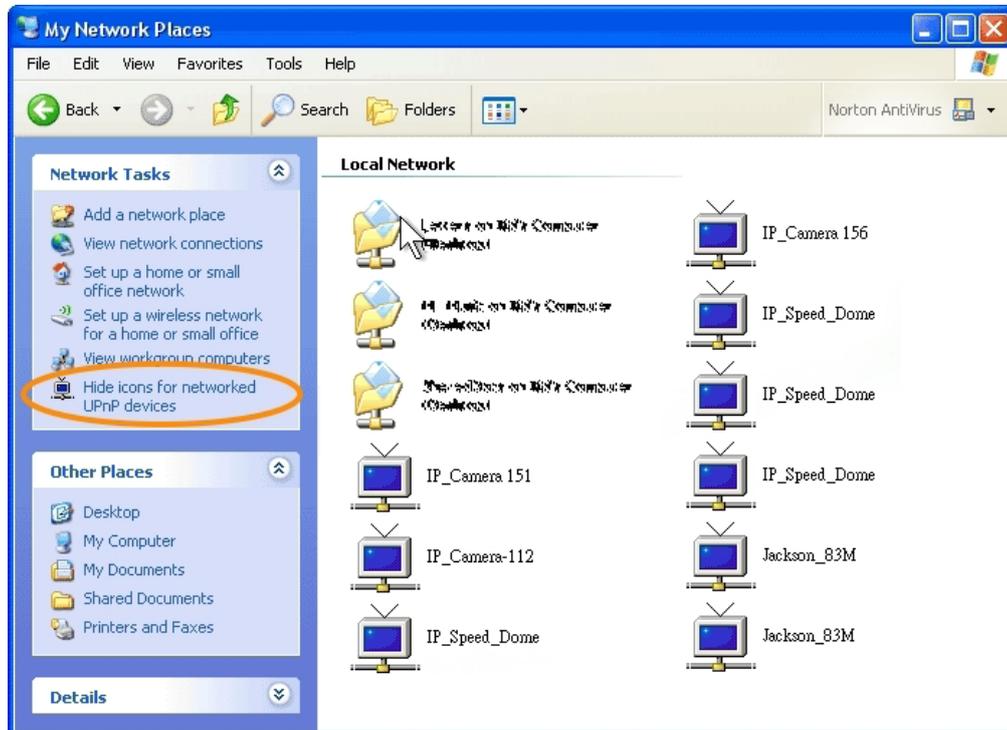

RTSP Setting

RTSP Setting	
RTSP Server:	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled
RTSP Authentication:	Disable
RTSP Port :	554
RTP Start Port:	5000 [1024..9997]
RTP End port:	9000 [1027..10000]

If you have a media player that supports RTSP protocol, you can use it to receive video streaming from the IP camera. The RTSP address can be set for two streaming transmissions respectively.

- **RTSP Server:** Choose **Enabled** or **Disabled**.
Disable means everyone who knows your camera IP Address can link to your camera via RTSP. No username and password are required. Under **Basic** and **Digest** authentication mode, the camera asks for a username and password before allows access. The password is transmitted as a clear text under basic mode, which provides a lower level of security than under **digest** mode. Make sure your media player supports the authentication schemes.

- **RTSP Port:** Setup port for RTSP transmitting (Default: 554)
- **RTP Start and End Port:** In RTSP mode, you can use TCP and UDP for connecting. TCP connection uses RTSP Port (554). UDP connection uses RTP Start & End Port.

Multicast Setting (Based on the RTSP Server)

Multicast Setting (Based on the RTSP Server)		
Streaming 1:		
IP Address:	<input type="text" value="234.5.6.78"/>	[224.3.1.0 ~ 239.255.255.255]
Port:	<input type="text" value="6000"/>	[1 ~ 65535]
TTL:	<input type="text" value="15"/>	[1 ~ 255]
Streaming 2:		
IP Address:	<input type="text" value="234.5.6.79"/>	[224.3.1.0 ~ 239.255.255.255]
Port:	<input type="text" value="6001"/>	[1 ~ 65535]
TTL:	<input type="text" value="15"/>	[1 ~ 255]

Multicast is a bandwidth conservation technology. This function allows several users to share the same packet sent from the IP camera.

For using Multicast, appoint here an IP Address and port. TTL means the life time of packet, the larger the value is, the more users can receive the packet.

For using Multicast, be sure to enable the function **Force Multicast RTP via RTSP** in your media player. Then key in the RTSP path of your camera: **rtsp ://(IP address)/** to receive the multicast.

ONVIF

ONVIF		
ONVIF:	<input checked="" type="radio"/> v2.10/v1.02	<input type="radio"/> v1.01 <input type="radio"/> Disabled
Security:	<input type="radio"/> Enabled	<input checked="" type="radio"/> Disabled
RTSP Keepalive:	<input checked="" type="radio"/> Enabled	<input type="radio"/> Disabled

Choose your ONVIF version and settings.

- **ONVIF:** Under ONVIF connection, the video will be transmitted by RTSP. Be sure to enable the RTSP server in IP setting, otherwise the IP Camera will not be able to receive the video via ONVIF.
- **Security:** By selecting **Disable**, the username and password are not required for accessing the camera via ONVIF. By selecting **Enable** the username and password are necessary.


- **RTSP Keepalive:** When the function is enabled, the camera checks once in a while if the user who is connected to the camera via ONVIF is still connected. If the connection has been broken the camera will stop transmitting video to the user.

Bonjour

Bonjour	
Bonjour:	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
Bonjour Name:	<input type="text" value="IP_Camera"/> @00:0F:0D:00:28:4D

This function allows Apple systems to connect to this IP camera. On **Bonjour Name** key-in the name here. The web browser **Safari** also has a Bonjour function. Tick **Include Bonjour** in the bookmark setting, for the IP camera to appear under the Bonjour category.


Click the icon to connect to the IP camera. The Bonjour function on Safari browser doesn't support HTTPS protocol. If on the camera you select **https**, the camera will appear on Safari's bookmarks but it cannot be accessed. Take as a reference the following image:

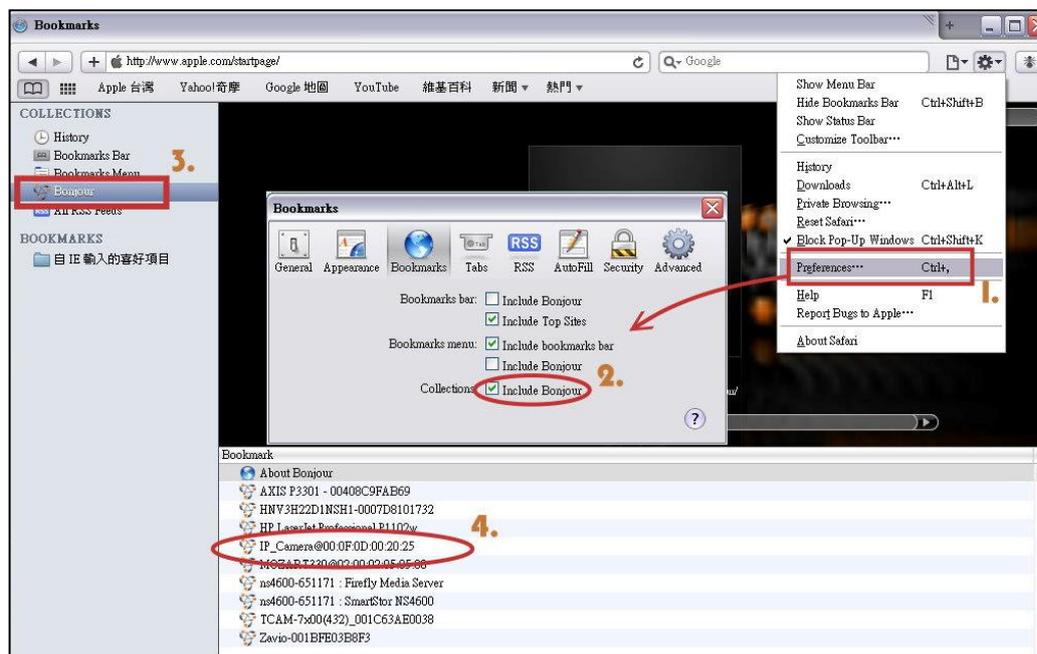

LLTD

LLTD (Link Layer Topology Discovery)	
LLTD:	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled

If your PC supports LLTD, enable this function for allowing checking the connection status, properties, and device location (IP address) in the network map. If the computer is running Windows Vista or Windows 7, you can find LLTD through the path: Control Panel → Network and Internet → Network and Sharing Center → Click **See full map**.

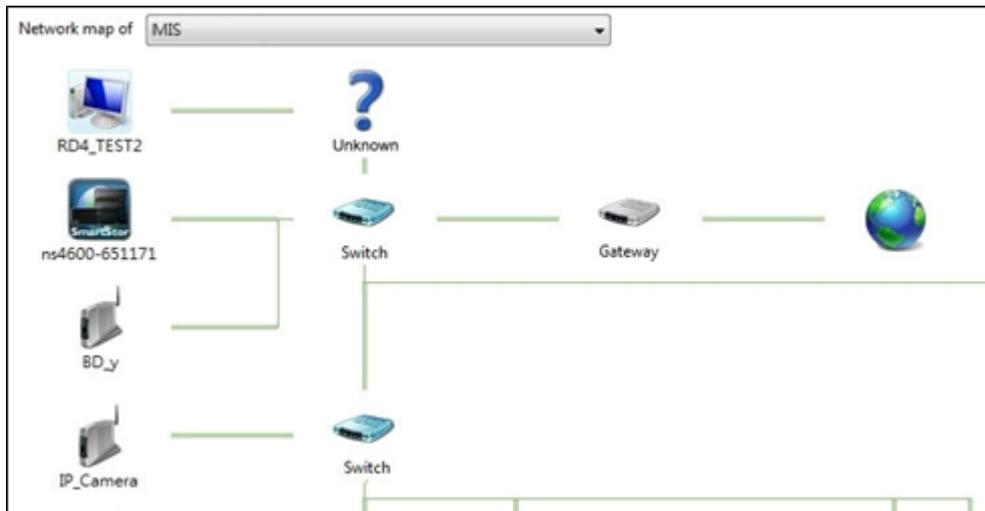

Advanced Https (Hypertext Transfer Protocol Secure)



When the users access cameras via Https protocol, the transmitted information will be encrypted, increasing the security level.


Select the connection type:

- **Http:** the user can access the camera via the Http path but cannot access it via the Https path.
- **Https:** the user can access the camera via the Https path but cannot access it via the Http path.
- **Http & Https:** Both the Http and Https path can be used to access the camera. When you change the connection type settings, it may cause connection error or disconnection error if you switch the protocol directly. Therefore, **Http & Https** mode is necessary.

If you want to change from Http to Https, please switch to **Http & Https** mode first, and then switch to **Https** mode and vice versa.

The Https protocol has a verifying mechanism. When the user access a website via Https, the browser will check the certificate of that domain and verify its trustiness and security.

Certificate generation process:

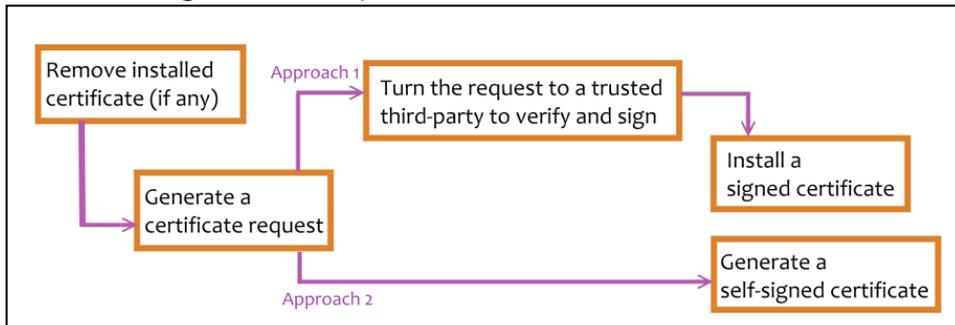


Remove the existing certificate: Before you generate a new certificate, please remove the installed one. Select the **Http** connection type and click **Remove**. If a dialog box pops up to ask you to confirm, click **Yes**.




The screenshot shows the 'Https Setting' dialog box. It has two sections: 'Created Request' and 'Installed Certificate'. Each section contains a 'Subject' field with the value 'C=TW, ST=, L=, O=, OU=, CN=' and a 'Date' field. Below each section are 'Content' and 'Remove' buttons. The 'Remove' buttons are highlighted with red boxes. At the bottom, there is a 'Connection Types' section with a dropdown menu currently set to 'Http'.

- **Created Request:** Fill-in the following form and click **apply**.

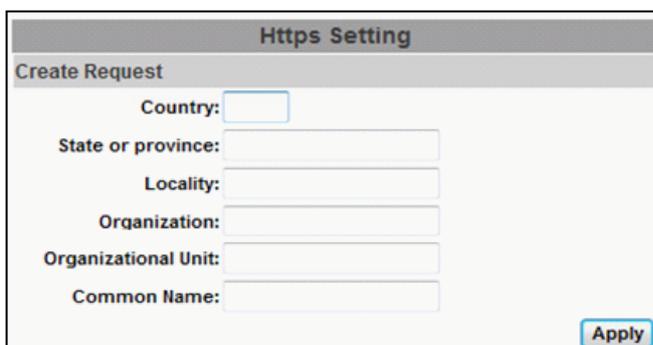

The screenshot shows the 'Create Request' form within the 'Https Setting' dialog box. It contains several input fields: 'Country:', 'State or province:', 'Locality:', 'Organization:', 'Organizational Unit:', and 'Common Name:'. An 'Apply' button is located at the bottom right of the form.

After generating a certificate request, if you choose to turn it & verify it by a trusted third-party, click **Content** and copy all the request content.

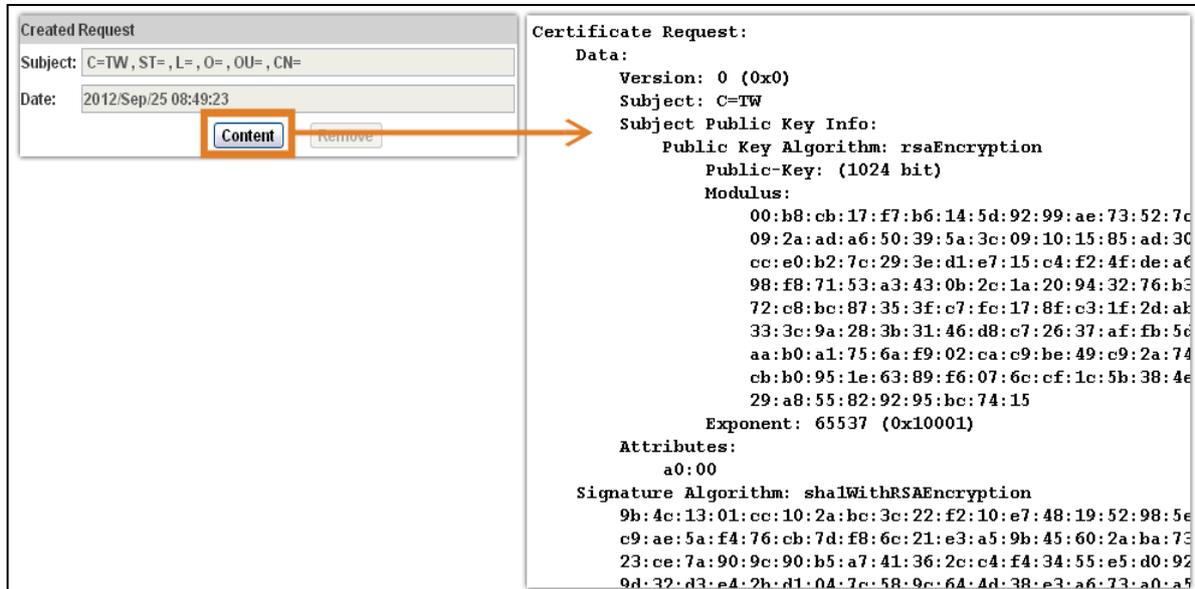

Created Request

Subject: C=TW, ST=, L=, O=, OU=, CN=

Date: 2012/Sep/25 08:49:23

Content remove

Certificate Request:

Data:

Version: 0 (0x0)

Subject: C=TW

Subject Public Key Info:

Public Key Algorithm: rsaEncryption

Public-Key: (1024 bit)

Modulus:

```
00:b8:cb:17:f7:b6:14:5d:92:99:ae:73:52:7c
09:2a:ad:a6:50:39:5a:3c:09:10:15:85:ad:30
cc:e0:b2:7c:29:3e:d1:e7:15:c4:f2:4f:de:a6
98:f8:71:53:a3:43:0b:2e:1a:20:94:32:76:b3
72:c8:bc:87:35:3f:c7:fc:17:8f:c3:1f:2d:ak
33:3c:9a:28:3b:31:46:d8:e7:26:37:af:fb:5c
aa:b0:a1:75:6a:f9:02:ca:c9:be:49:c9:2a:74
cb:b0:95:1e:63:89:f6:07:6c:cf:1c:5b:38:4e
29:a8:55:82:92:95:bc:74:15
```

Exponent: 65537 (0x10001)

Attributes:

a0:00

Signature Algorithm: sha1WithRSAEncryption

```
9b:4c:13:01:cc:10:2a:bc:3c:22:f2:10:e7:48:19:52:98:5e
e9:ae:5a:f4:76:cb:7d:f8:6c:21:e3:a5:9b:45:60:2a:ba:73
23:ce:7a:90:9c:90:b5:a7:41:36:2c:c4:f4:34:55:e5:d0:92
9d:32:d3:e4:2b:d1:04:7c:58:9c:64:4d:38:e3:a6:73:a0:a5
```

According to the certificate source, there are two ways to install the certificate: If you had sent the certificate request for signing and receiving a signed certificate, click **browse** and find the certificate file in your computer. Click **Apply** to install it.

If you choose to generate a self-signed certificate, fill-in the following forms and set the validity day, click **Apply** to finish installed it.



Install Signed Certificate

Signed Certificate: 瀏覽...

Apply

Create Self-Signed Certificate

Country:

State or province:

Locality:

Organization:


Organizational Unit:

Common Name:

Validity: Days

Apply

After finishing the installation, click on **Content** to call out and check the certificate content.

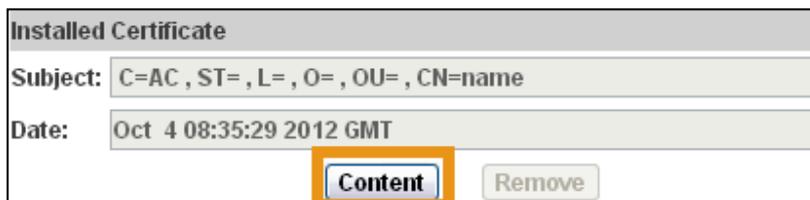

To use Https to access the camera, open your browser, and key-in **https:// (IP address)/** in the address bar.

Now your data will be transmitted via encrypted communications. The browser will check your certificate status. It might show the following warning message:



Meaning that certificate is self-signed or signed by a distrusted institution. Click **Proceed anyway** for continuing to the camera page.

SNMP (Simple Network Management Protocol)

SNMP	
SNMP Setting	
<input type="checkbox"/> SNMPv1	<input checked="" type="checkbox"/> SNMPv2c
Write Community:	<input type="text" value="write"/>
Read Community:	<input type="text" value="public"/>

- SNMPv1 or SNMPv2: write the name of both Write Community and Read Community.
- **SNMPv3**: Set the Security Name, Authentication Type, Authentication Password, Encryption Type, Encryption Password of Write mode and Read mode.

SNMPv3

Write Security Name:

Authentication Type: MD5 SHA

Authentication Password:

Encryption Type: DES AES

Encryption Password:

Read Security Name:

Authentication Type: MD5 SHA

Authentication Password:

Encryption Type: DES AES

Encryption Password:

Enable **SNMPv1/SNMPv2 Trap** for detecting the Trap server. Please set what event needs to be detected.

SNMPv1/v2c Trap

Trap Address:

Trap Community:

Trap Event:

- Cold Start
- Setting Changed
- Network Disconnected
- V3 Authentication Failed
- SDCard Insert/Remove

- **Cold Start**: The camera starts up or reboots.
- **Settings Changed**: The SNMP settings have been changed.
- **Network Disconnected**: The network connection was broken down (The camera will send trap messages after the network is connected again).
- **V3 Authentication Failed**: A SNMPv3 user account tries to get authentication but failed. (Due to incorrect password or community)
- **SD Card Insert / Remove**: A Micro SD card is inserted or removed.

Access List

Enable **IP address filter** to allow/reject some IP address a network access. There are two options: **single** and **range**.

IP FILTER

IP ADDRESS FILTER Setting

Enable ip address filter

IPv4 Setting:

allow deny

address:

IPv4 List:

No.	IP Address	Filter	Action
1			<input type="button" value="remove"/>
2			<input type="button" value="remove"/>
3			<input type="button" value="remove"/>
4			<input type="button" value="remove"/>
5			<input type="button" value="remove"/>
6			<input type="button" value="remove"/>
7			<input type="button" value="remove"/>
8			<input type="button" value="remove"/>
9			<input type="button" value="remove"/>
10			<input type="button" value="remove"/>

Allow admin ip address always access this device

Admin ip address:

QoS/DSCP

(Quality of Server/Differentiated Services Code-point)

DSCP specifies a simple mechanism for classifying and managing network traffic; and provide QoS on IP networks. DSCP is a 6-bit in the IP header for packet classification purpose. Please define it for **Live Stream, Event / Alarm and Management**.

QoS/DSCP

QoS/DSCP Setting

Enable QoS/DSCP

Live Stream: (0-63)

Event / Alarm: (0-63)

Management: (0-63)

IEEE 802.1x

It is an IEEE standard for port-based Network Access Control. It provides an authentication mechanism to a device on LAN/WLAN.

IEEE 802.1x/EAP-TLS

IEEE 802.1x Setting

Enable IEEE 802.1x

Eapol version: v1 v2

Identity:

Private key password:

CA certificate:

Status:


Client certificate:

Status:

Client private key:

Status:

The EAPOL protocol supports service identification and optional point to point encryption over the local LAN segment.

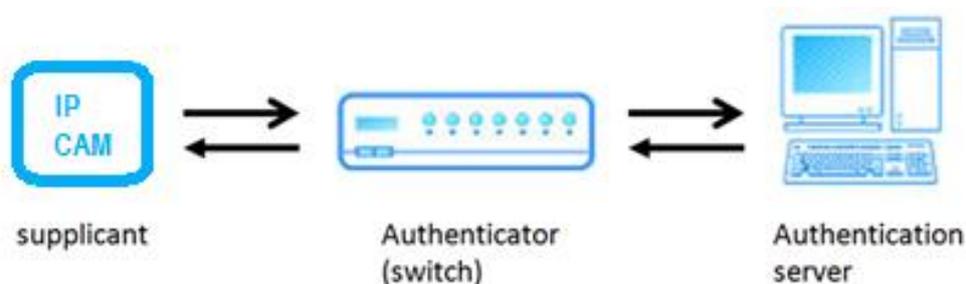

Please check what version supports the authenticator and authentication server. This camera supports EAP-TLS method. Enter the ID, password issued by the CA, then upload related certificates.

PPPoE & DDNS

PPPoE & DDNS	
PPPoE Setting	
<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled	
Username:	<input type="text"/>
Password:	<input type="text"/>
Send mail after PPPoE dialed	
<input type="checkbox"/> Enabled	
Subject:	<input type="text" value="PPPoE From IP Camera"/>
DDNS Setting	
<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled	
Provider:	<input type="text" value="dyndns.org"/>
Hostname:	<input type="text"/>
Username:	<input type="text"/>
Password:	<input type="text"/>
Schedule Update:	<input type="text" value="30"/> Minutes
State	
<input type="text" value="Idle"/>	
Note:	
1. Schedule Update: Depends on the input time of Schedule Update, it will update DDNS's web site automatically. The time range is from 5 to 5000 minutes. *0: It will not update.	
2. dyndns.org & 3322.org: Update once per day is recommended (1440 minutes per day). If updated too frequently, it will be blocked.	
<input type="button" value="Apply"/>	

PPPoE Setting

PPPoE Setting	
<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled	
Username:	<input type="text"/>
Password:	<input type="text"/>


Select **Enabled** to use PPPoE. Key-in the the Username and password for ADSL connection.

Send mail after PPPoE dialed

Send mail after PPPoE dialed	
<input type="checkbox"/> Enabled	
Subject:	<input type="text" value="PPPoE From IP Camera"/>


When connected to the internet, the camera will send a mail to a specific mail account.

DDNS Setting

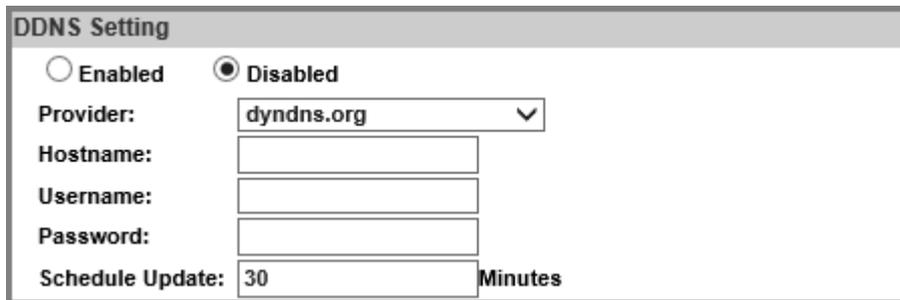

camddns as an example: Enable this service→Input username→IP schedule update→Default: 5 minutes→Click **Apply**
Check results from the message presented inside the **State** field.

State

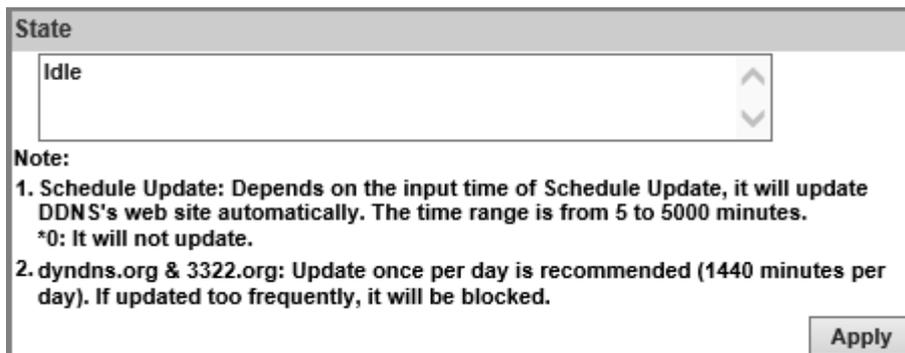

(1) **Updating:** Information update

(2) **Idle:** Stop service

(3) **DDNS registration successful, can now log by**
<http://<username>.ddns.camddns.com>: Register successfully.


(4) **Update Failed, the name is already registered:** The user name has already been used. Please change it.

(5) **Update Failed; please check your internet connection:** Network connection failed.


(6) **Update Failed, please check the account information you provided:** The server, user name, and password may be wrong.

Server Settings

There are several server types available. Select the item to display detailed configuration options. You can configure either one or all of them.

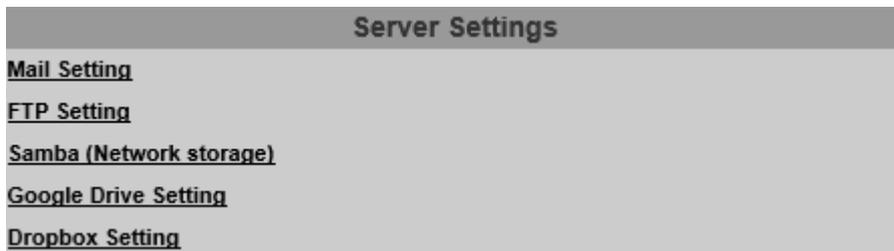


Click **Apply** to save settings at the bottom of **Server Settings**, then click **Test** icon to test the server connection. A message box will tell you **OK!** if it works, and a test document will be created in the location.

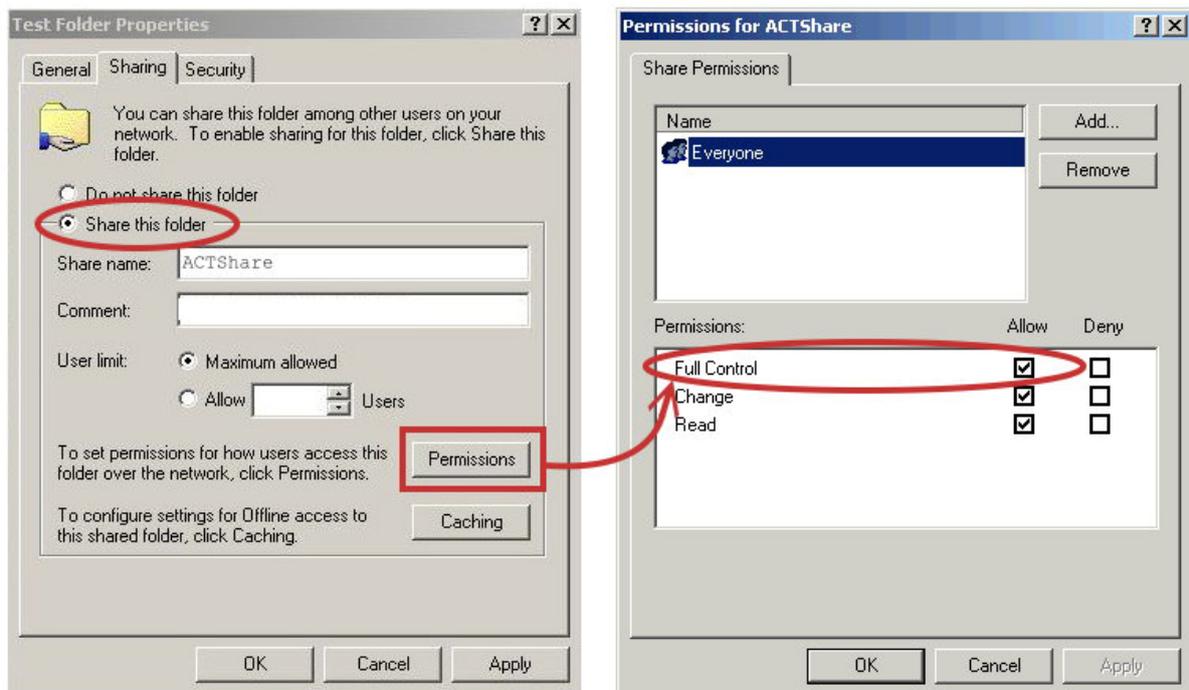

If the testing fails, check the sharing setting of your location folder. The folder properties must be **shared** and the permissions must be **Full Control**.

Mail Setting

To send out the video via mail of FTP, set up the configuration first.

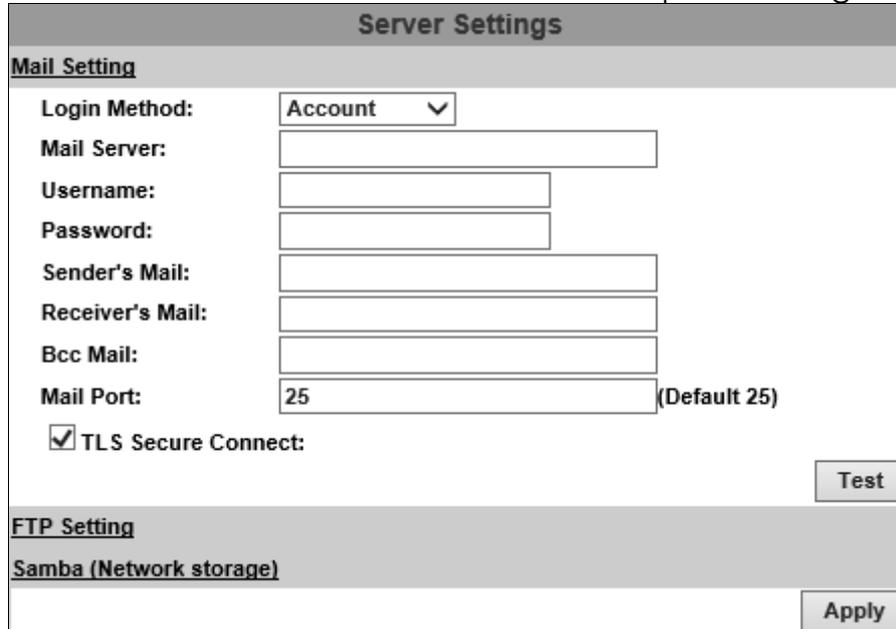

The screenshot shows the 'Mail Setting' section of the 'Server Settings' interface. It includes the following fields and options:


- Login Method:** Account (dropdown)
- Mail Server:** [Text input field]
- Username:** [Text input field]
- Password:** [Text input field]
- Sender's Mail:** [Text input field]
- Receiver's Mail:** [Text input field]
- Bcc Mail:** [Text input field]
- Mail Port:** 25 (Default 25)
- TLS Secure Connect:**

A **Test** button is located at the bottom right of the Mail Setting section. Below this section is the **FTP Setting** section, which is currently empty, with an **Apply** button at the bottom right.

Click **Apply** to confirm settings at the bottom of **Server Settings**, then click **Test** icon to test the server connection.

FTP Setting

To send out the video via mail of FTP, please set up the configuration.

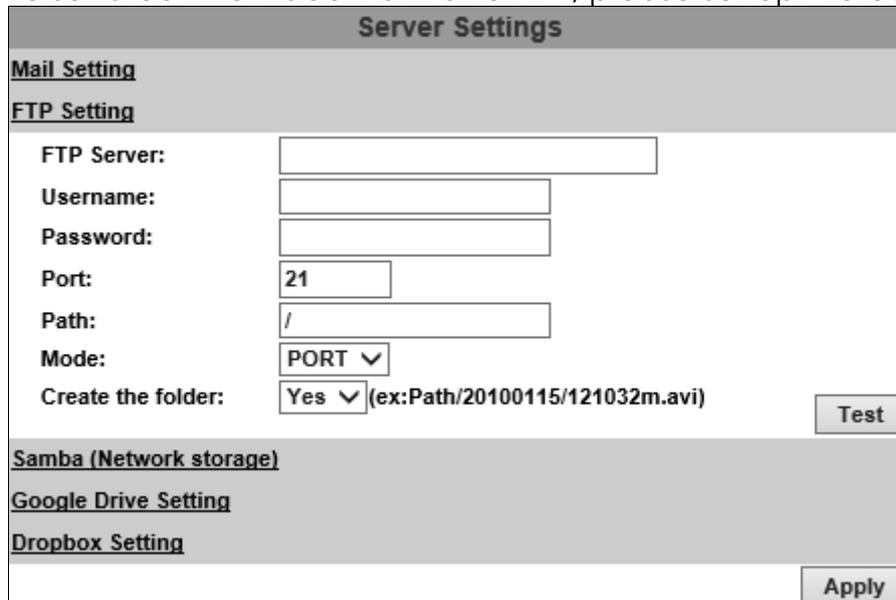

The screenshot shows the 'FTP Setting' section of the 'Server Settings' interface. It includes the following fields and options:


- FTP Server:** [Text input field]
- Username:** [Text input field]
- Password:** [Text input field]
- Port:** 21
- Path:** /
- Mode:** PORT (dropdown)
- Create the folder:** Yes (dropdown) (ex:Path/20100115/121032m.avi)

A **Test** button is located at the bottom right of the FTP Setting section. Below this section are the **Samba (Network storage)**, **Google Drive Setting**, and **Dropbox Setting** sections, which are currently empty, with an **Apply** button at the bottom right.

Click **Apply** to confirm settings at the bottom of **Server Settings**, then click **Test** icon to test the server connection.

Samba (Network Storage)

Select this option to send the media files via a neighbor network when an event is triggered.

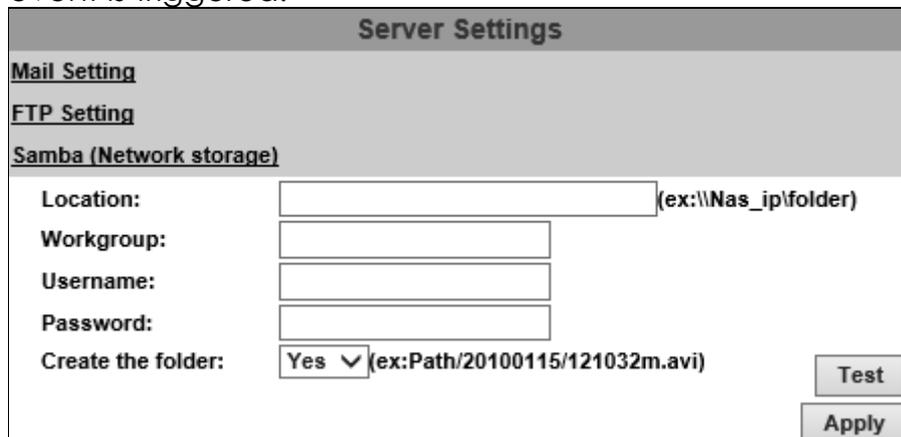


The screenshot shows the 'Server Settings' window with the 'Samba (Network storage)' section selected. The form includes the following fields and controls:

- Location:** Text input field with a placeholder example: (ex:\\Nas_ip\folder)
- Workgroup:** Text input field
- Username:** Text input field
- Password:** Text input field
- Create the folder:** A dropdown menu set to 'Yes' with a placeholder example: (ex:Path/20100115/121032m.avi)
- Buttons:** 'Test' and 'Apply' buttons are located at the bottom right of the form.

Click **Apply** to confirm settings at the bottom of **Server Settings**, then click **Test** icon to test the server connection.

Google Drive Setting

Select this option to send the media files unto the cloud server Google Drive whenever an event is triggered.

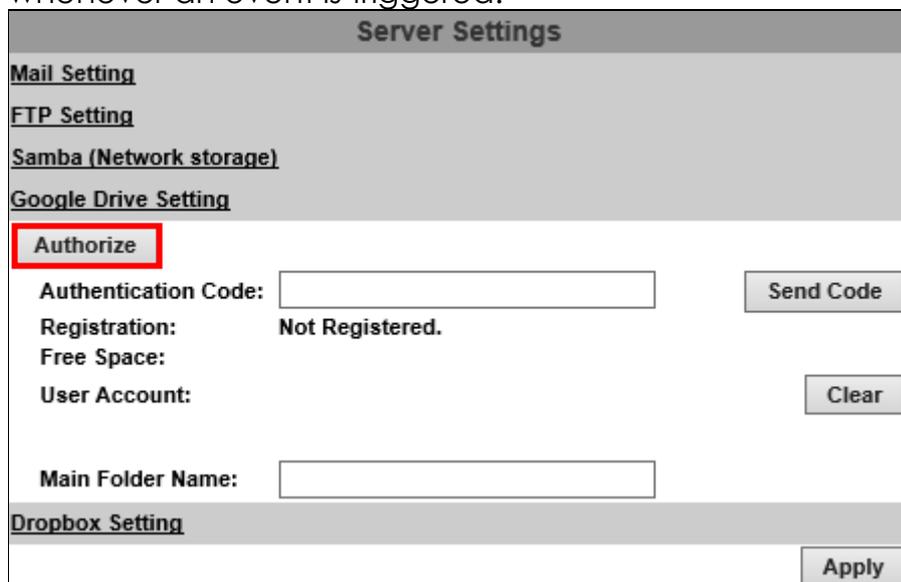


The screenshot shows the 'Server Settings' window with the 'Google Drive Setting' section selected. The 'Authorize' button is highlighted with a red box. The form includes the following fields and controls:

- Authentication Code:** Text input field with a 'Send Code' button to its right.
- Registration:** Text label showing 'Not Registered.'
- Free Space:** Text label
- User Account:** Text label with a 'Clear' button to its right.
- Main Folder Name:** Text input field
- Buttons:** 'Apply' button is located at the bottom right of the form.

You will have to sign in to the [Google Drive](#) network before you start the operation. If you have not yet been a Google user, the [online registration](#) will be required, and you will need to [sign in](#) first as a Google account user.


Below are the steps:

- i. Click **Authorize** to begin the online-registration operation. A window will pop up and require you to sign in for a Surveillance Client account directed by Google Drive server.

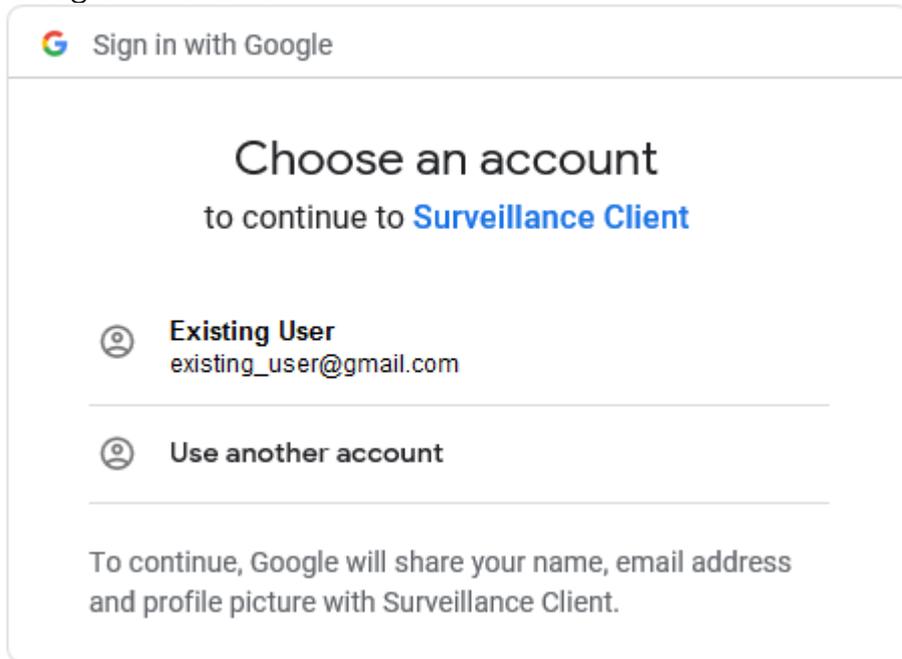


The screenshot shows a 'Sign in with Google' dialog box. At the top, it says 'Sign in with Google'. Below that, the main heading is 'Choose an account to continue to Surveillance Client'. There are two options: 'Existing User' with the email 'existing_user@gmail.com' and 'Use another account'. At the bottom, a note states: 'To continue, Google will share your name, email address and profile picture with Surveillance Client.'

- ii. Choose **Existing User** to continue the operation if you have already owned a Google Drive account. Otherwise, you may choose **Use another account** and sign in as another Google account user.

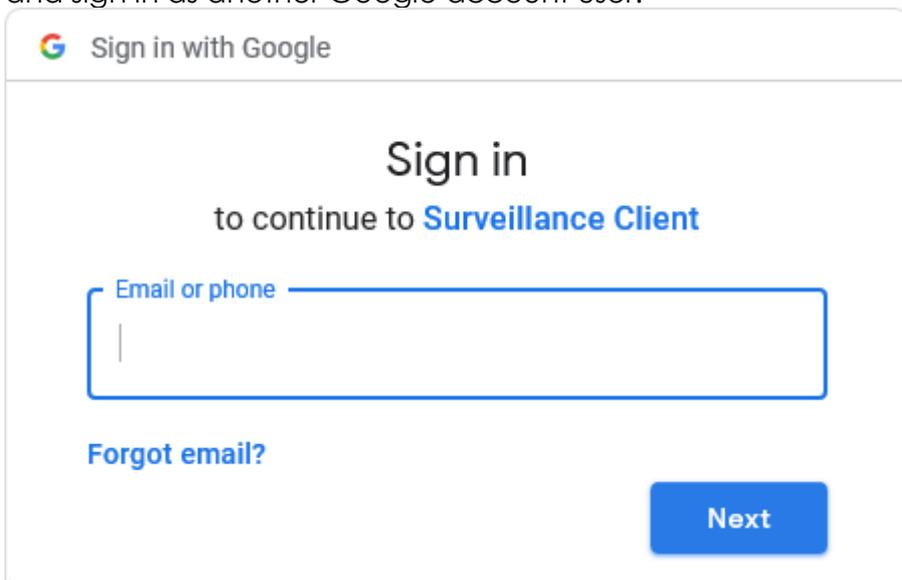


The screenshot shows a 'Sign in with Google' dialog box. At the top, it says 'Sign in with Google'. Below that, the main heading is 'Sign in to continue to Surveillance Client'. There is a text input field labeled 'Email or phone' with a vertical cursor. Below the input field is a link that says 'Forgot email?'. At the bottom right, there is a blue button labeled 'Next'.

iii. Enter the password and click **Next**.

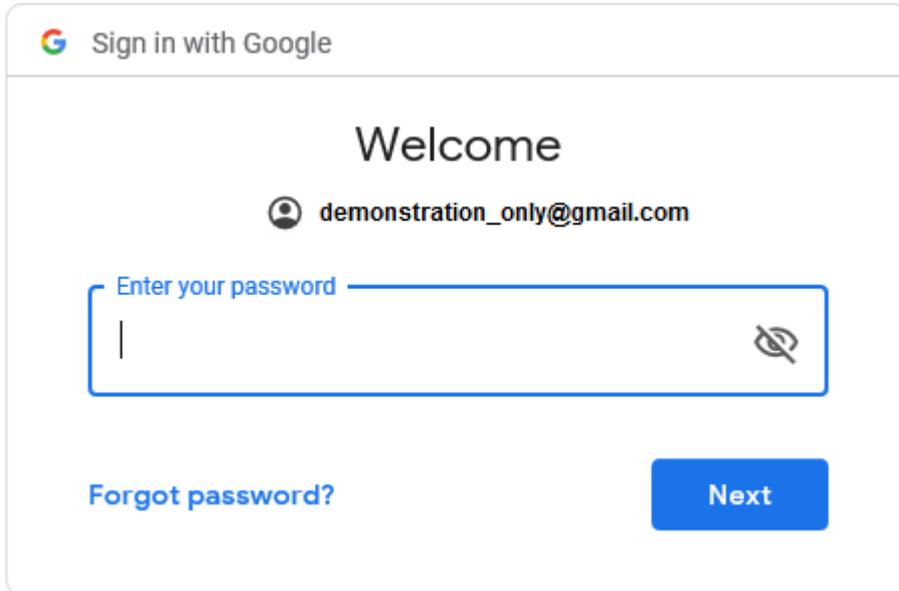


The screenshot shows the Google sign-in interface. At the top, it says "Sign in with Google". Below that, it says "Welcome" followed by the email address "demonstration_only@gmail.com". There is a password input field with the placeholder text "Enter your password" and a toggle icon for visibility. At the bottom, there is a link for "Forgot password?" and a blue "Next" button.

iv. Click **Allow**.

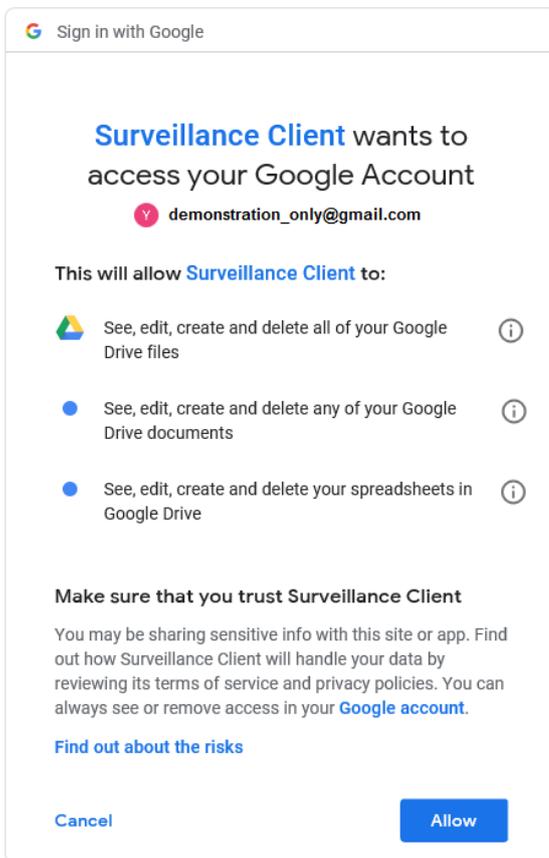


The screenshot shows a Google account access request dialog. It says "Sign in with Google" at the top. The main heading is "Surveillance Client wants to access your Google Account" with the email "demonstration_only@gmail.com" below it. Under "This will allow Surveillance Client to:", there are three permissions listed: "See, edit, create and delete all of your Google Drive files", "See, edit, create and delete any of your Google Drive documents", and "See, edit, create and delete your spreadsheets in Google Drive". Each permission has an information icon. Below this, it says "Make sure that you trust Surveillance Client" and provides a warning about sensitive information, with a link to "Find out about the risks". At the bottom, there are "Cancel" and "Allow" buttons.


- v. **Authentication Code** will be generated by Google server.

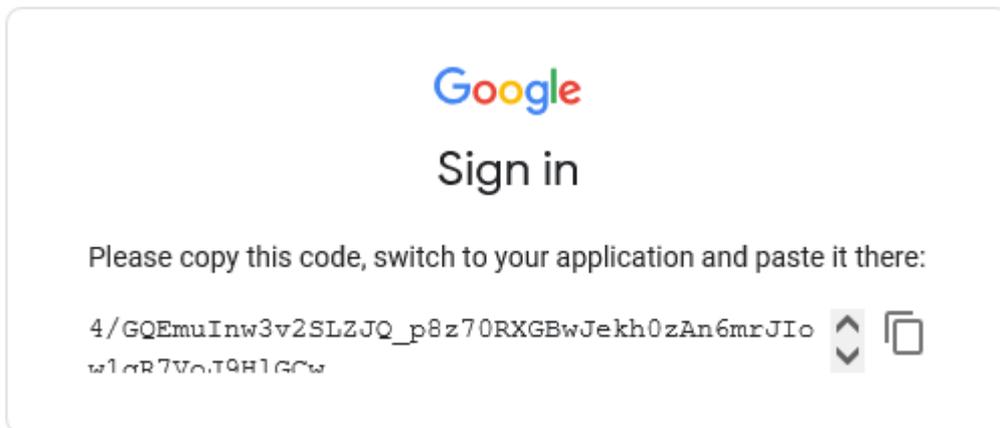


- vi. Paste the **Authentication Code** acquired from Google server in the required field, input the **Main Folder Name** of your preference and click **Send Code**.

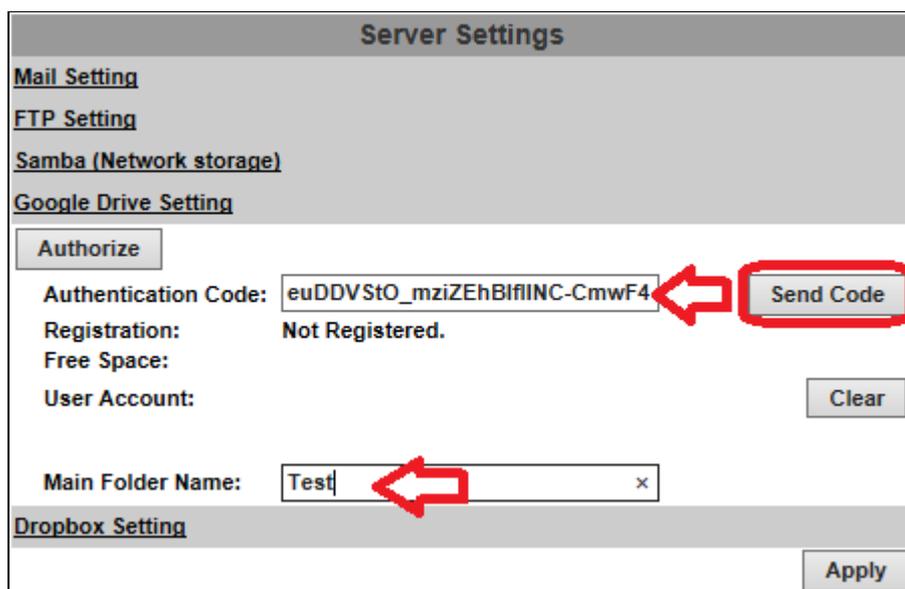

- vii. Please wait for around 15 seconds before clicking OK.

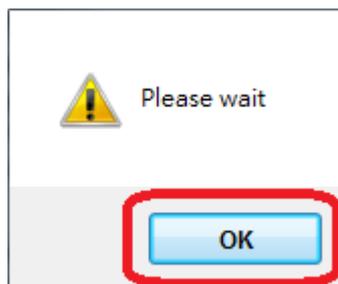

- viii. If the application is successful, you will be able to see a list of status displayed, as circled in red in the demonstration image.

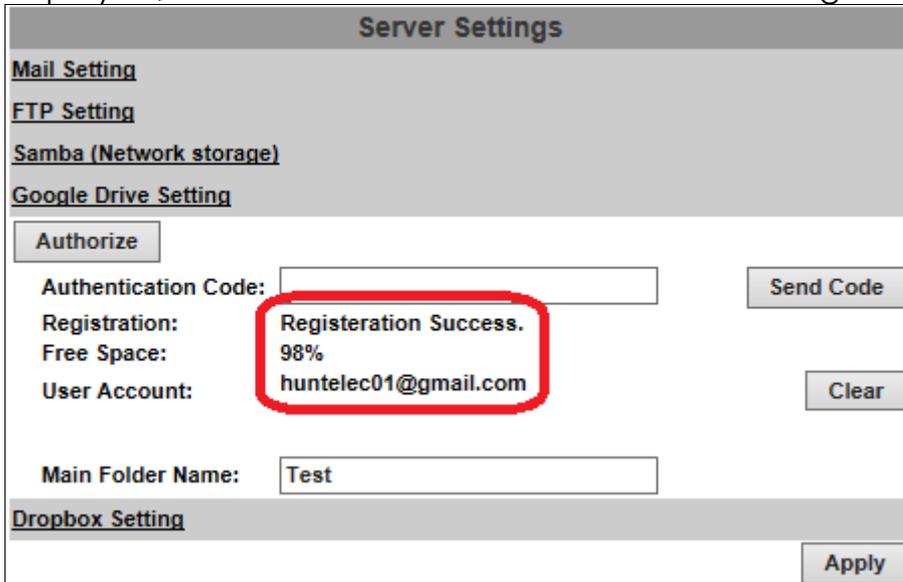


The screenshot shows the 'Server Settings' window with several sections: 'Mail Setting', 'FTP Setting', 'Samba (Network storage)', and 'Google Drive Setting'. Under 'Google Drive Setting', there is an 'Authorize' button, an 'Authentication Code' input field, and a 'Send Code' button. Below these, the registration status is displayed as 'Registration Success. 98%' and the 'User Account' is 'huntelec01@gmail.com'. This status information is circled in red. At the bottom of the Google Drive section, there is a 'Clear' button. Below the Google Drive section, there is a 'Main Folder Name' input field with the value 'Test'. At the bottom of the entire 'Server Settings' window, there is an 'Apply' button.

Click **Apply** to confirm settings at the bottom of **Server Settings**. Click **Clear** to delete the current account registered for this server.

Dropbox Setting

Select this option to send the media files unto the cloud server Dropbox whenever an event is triggered.

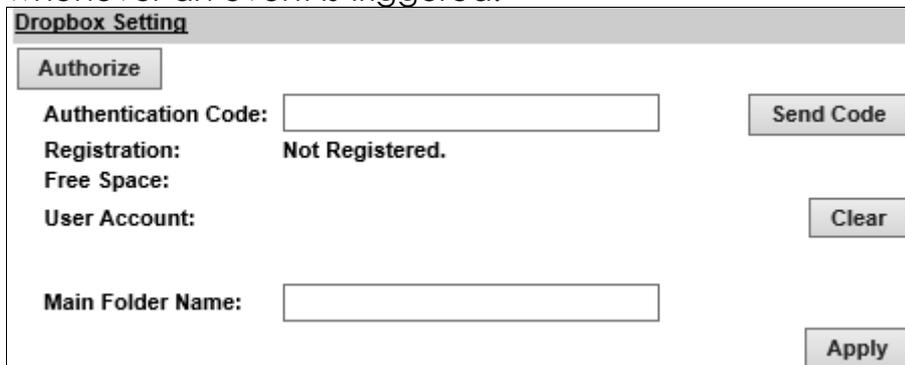

The screenshot shows the 'Dropbox Setting' window. It features an 'Authorize' button, an 'Authentication Code' input field, and a 'Send Code' button. The registration status is 'Not Registered.'. Below this, there is a 'Free Space' label, a 'User Account' label, and a 'Clear' button. At the bottom, there is a 'Main Folder Name' input field and an 'Apply' button.

You will have to sign in to [Dropbox](#) network first. If you do not own an account, you will need to register one for free. If you have already created a Dropbox account, click **Authorize** to start the operation.

A window from the Dropbox server will open to ask you for signing-in. Enter **Authentication Code** in the required field and click **Send Code**. Click **Clear** to delete the current account registered for this server. Click **Apply** to confirm settings at the bottom of **Server Settings**.

Wireless Setting

(Optional, support 802.11 b/g/n)

For setting up the IP camera via wireless network, first, use the Ethernet cable to connect the camera.

Wireless Setting			
Status of Wireless Networks			
SSID	Mode	Security	Signal Strength
H	Infrastructure	WPA2PSK/AES	86
IPCAM	Infrastructure	WPA2PSK/AES	45
000000000000	Infrastructure	WPA2PSK/AES	26
R	Infrastructure	WPA1WPA2PSK/AES	57
T	Infrastructure	WPA2PSK/AES	26
TEST	Infrastructure	WPA1WPA2PSK/TKIPAES	44
e	Infrastructure	WPA1WPA2PSK/TKIPAES	26
G	Infrastructure	WPA2PSK/TKIPAES	26
D	Infrastructure	WPA1WPA2PSK/TKIPAES	26

After finishing & saving the wireless settings, remove the Ethernet cable.

Note: The IP address is the same under both wireless and wired network. If the Ethernet cable is plugged in the camera, the IP camera will use it to link to the Internet instead of the wireless router.

Status of Networks in Wireless Setting

The camera scans and shows the SSID, Mode, Security, and Signal strength of the wireless network.

Wireless Setting	
MAC Address:	00:0D:F0:64:27:AC
Mode:	Ad-hoc
Operation Mode:	Auto
SSID:	Default
Domain:	FCC (1~11Ch)
Channel:	6
Security:	None

Mode: Infrastructure mode is used to link to the wireless router.

Ad-hoc mode is used to link to the PC directly.

Domain and **Channel** options appear only in the Ad-hoc mode.


Ad-hoc is a short term derived from wireless ad hoc network, known as **WANET**. This type of network is only established temporarily, and does not rely on a pre-existing network through a router or Wireless Access Point.

Connecting to an ad-hoc Wi-Fi network


To make the Ad-hoc mode available, follow the steps below.

This demonstration is done manually and specifically applied to Windows 8.1 since Windows 8.1 no longer shows Ad-hoc network in the Wi-Fi list.


The following example is based on another type of IP camera. Go to "Control Panel", then "Network and Internet".

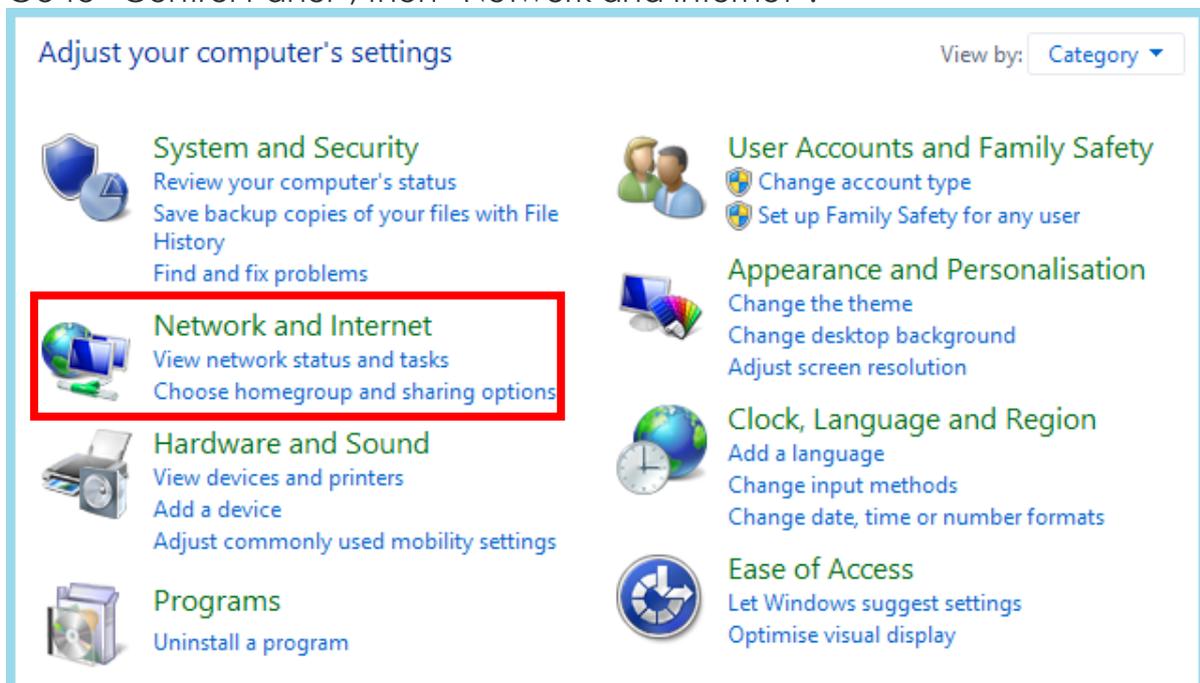


Click "Network and Sharing Center".

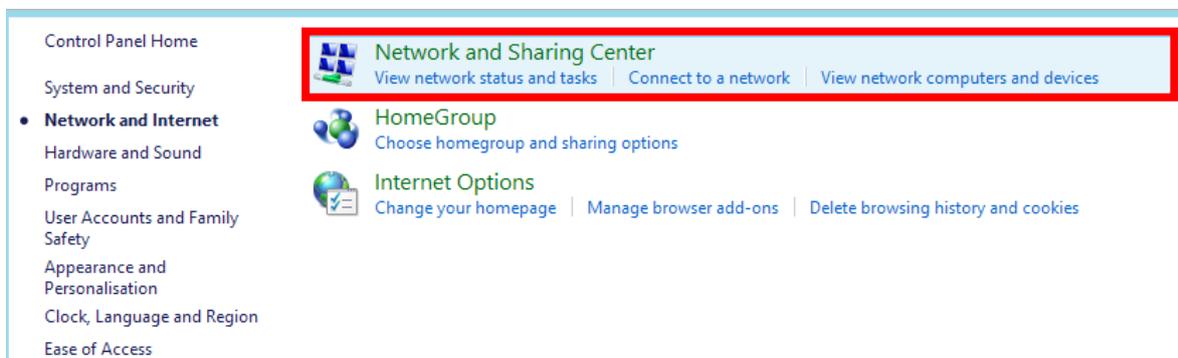


Click "Set up a new connection or network".

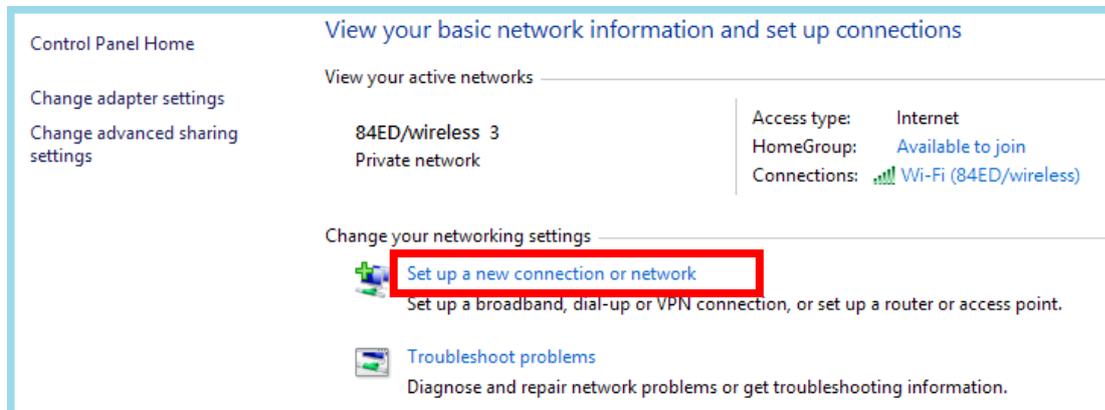

Double click "Manually connect to a wireless network".

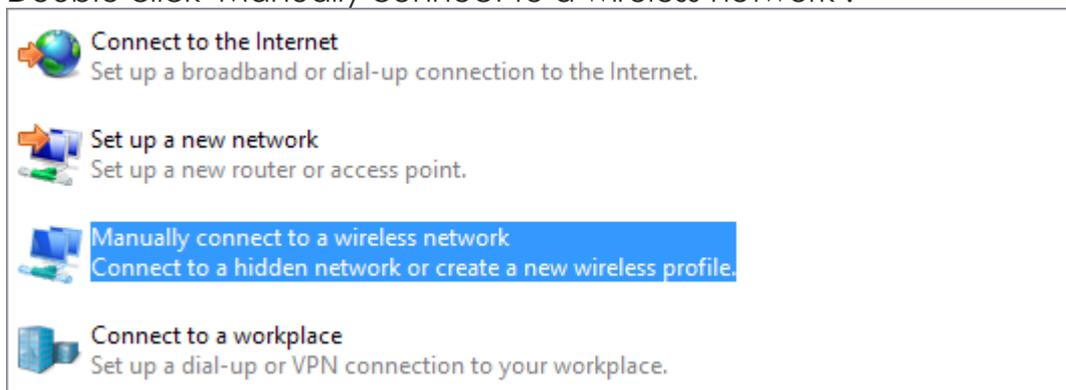


Enter the SSID of the ad-hoc network (as shown by "netsh wlan show networks") into the "Network name" field. Configure security settings accordingly.

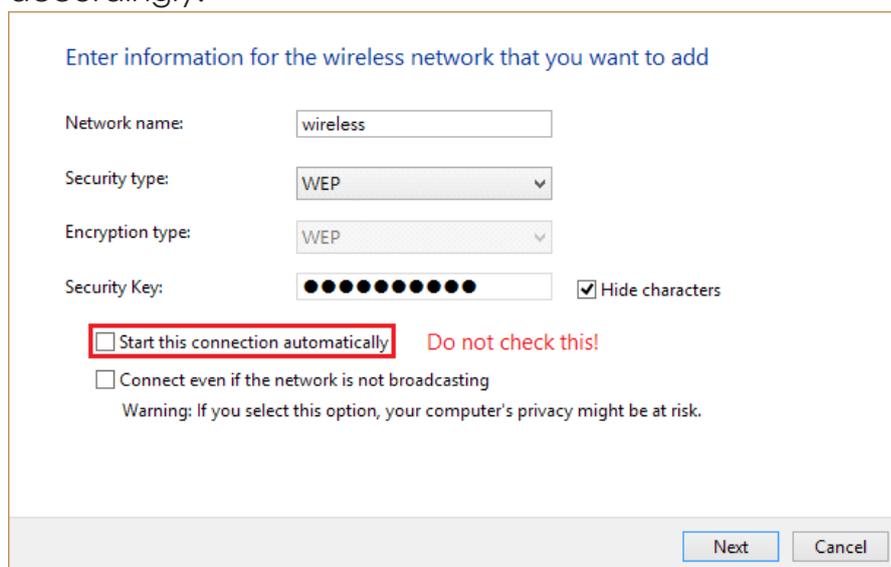


Make sure that "Start this connection automatically" is unchecked, click "Next", then "Close"

Open the search window (Windows key+Q) and search for "cmd"

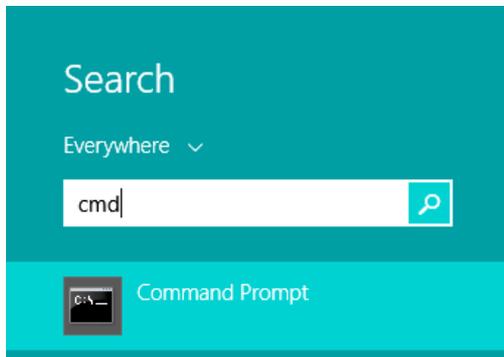


Run the command to open up a new window.

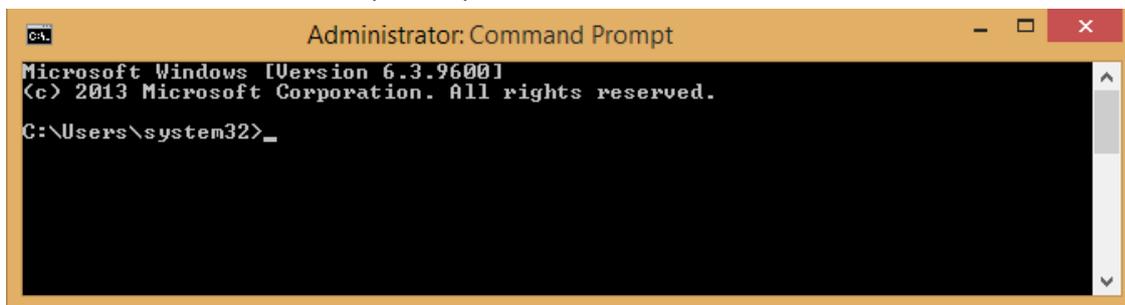


Enter the messages below.

(1) > netsh wlan set profileparameter <ssid> connectiontype=ibss

(2) > netsh wlan connect <ssid>

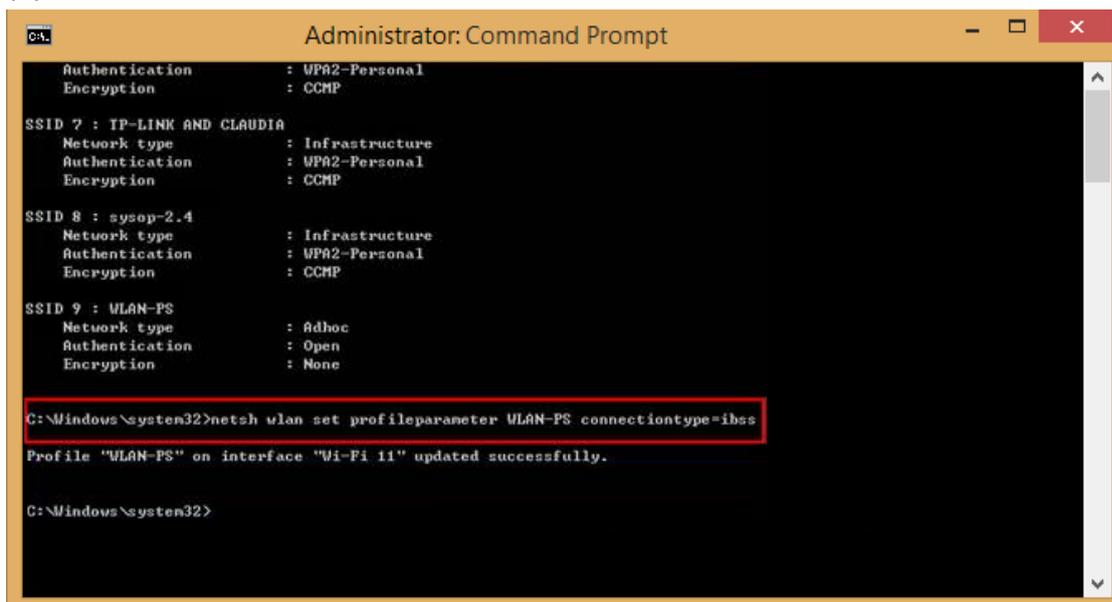

Now **Ad-hoc** mode is available after the IP settings completion.

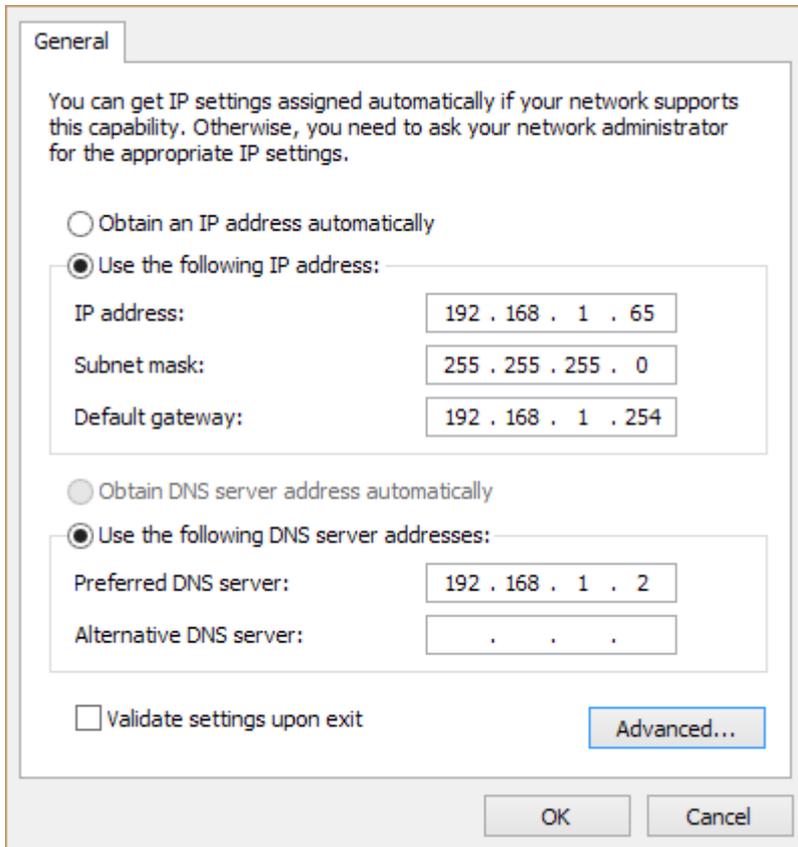

The screenshot shows a 'General' tab in a settings window. It contains a text box with instructions: 'You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.' Below this are two radio button options: 'Obtain an IP address automatically' (unselected) and 'Use the following IP address:' (selected). The selected option has three input fields: 'IP address:' with '192 . 168 . 1 . 65', 'Subnet mask:' with '255 . 255 . 255 . 0', and 'Default gateway:' with '192 . 168 . 1 . 254'. Below these are two more radio button options: 'Obtain DNS server address automatically' (unselected) and 'Use the following DNS server addresses:' (selected). The selected option has two input fields: 'Preferred DNS server:' with '192 . 168 . 1 . 2' and 'Alternative DNS server:' with '. . .'. At the bottom left is a checkbox 'Validate settings upon exit' (unchecked). At the bottom right is a button 'Advanced...'. At the very bottom are 'OK' and 'Cancel' buttons.

- **SSID:** The ID of the wireless network service.
- **Domain:** The wireless network standards are different in each region. Please select the wireless standard of your location. FCC is the American standard. ETSI is the European standard. JP is the Japanese standard.
- **Channel:** Assign a channel for the camera in order to avoid interference.
- **Security:** Select WEP, WPA-PSK, or WPA2-PSK according to your wireless router settings.

WEP Setting

WEP Setting	
Authentication:	Shared Key ▾
Encryption:	64 bit ▾
Key Type:	HEX ▾ (10 character max)
Key 1:	<input type="radio"/> <input type="text"/>
Key 2:	<input checked="" type="radio"/> <input type="text"/>
Key 3:	<input type="radio"/> <input type="text"/>
Key 4:	<input type="radio"/> <input type="text"/>

- **Authentication:** Open System or Shared Key, according to your wireless router.
- **Encryption:** The option determines the length of the key password. In **HEX** type, 10 characters are allowed if you select 64 bit; 26 characters are allowed if you select 128bit; In **ASCII** type, 5 characters are allowed if you select 64 bit; 13 characters are allowed if you select 128bit.
- **Key Type:** In **HEX** type, the key password can only be hexadecimal numbers. In **ASCII** type, the key password can be any letter and number. (Capital and lowercase letters are regarded as different.)
- **Key 1~4:** Key in the key password according to your wireless router setting. The length and type must be consistent with the settings above.

WPA-PSK/ WPA2-PSK Setting

WPA-PSK Setting	
Encryption	TKIP ▾
Pre-Shared Key:	<input type="text" value="23133690"/> (ASCII format, 8~63)

- **Encryption:** TKIP or AES, according to your wireless router.
- **Pre-Shared Key:** Key-in the key password according to your wireless router settings. Any letters and numbers are allowed. (Capital and lowercase letters are regarded as different.)


A/V Settings



Click  to get into the administration page.



Click  to go back to the live video page.

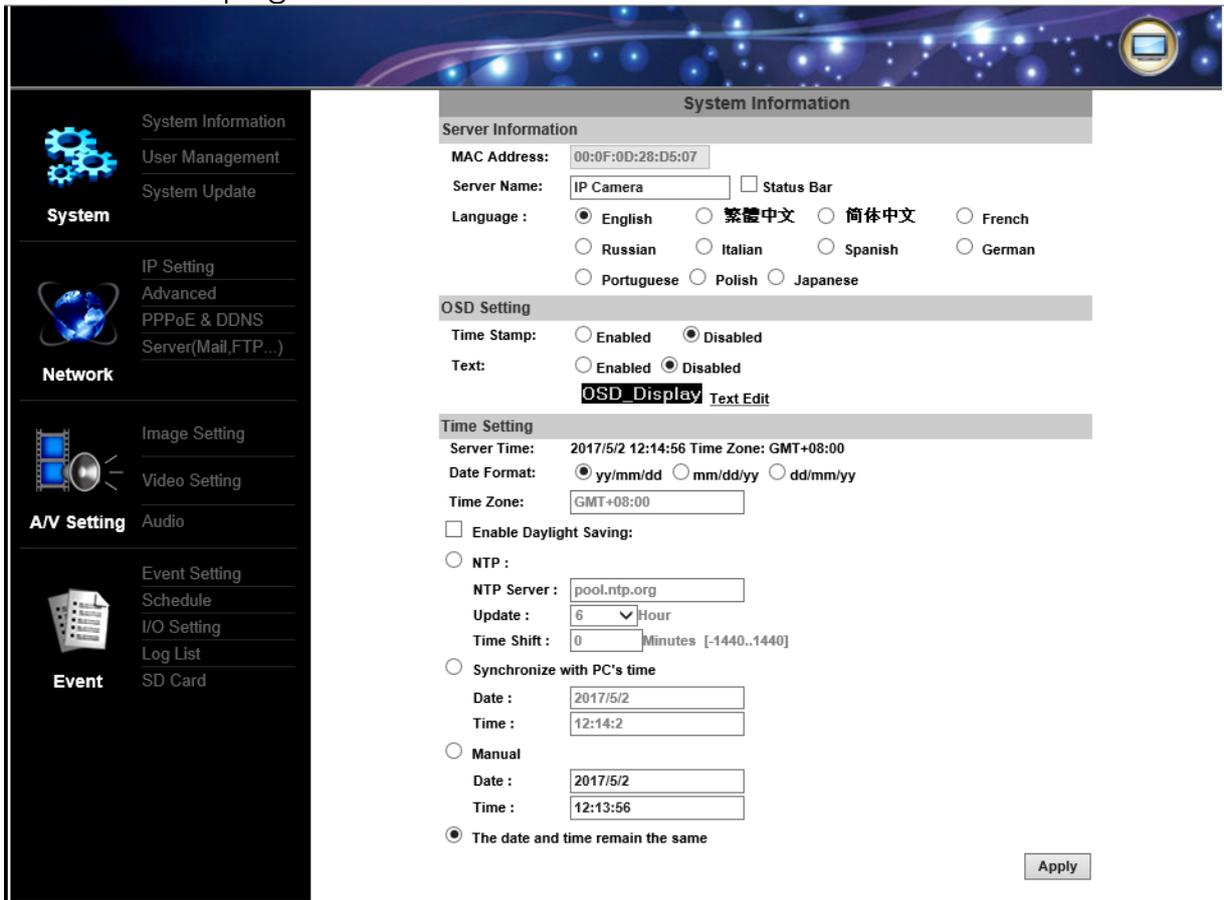

The screenshot displays the 'System Information' page of an IP camera's web interface. The left sidebar contains navigation menus for System, Network, A/V Setting, and Event. The main content area is titled 'System Information' and is divided into several sections:

- Server Information:**
 - MAC Address: 00:0F:0D:28:D5:07
 - Server Name: IP Camera Status Bar
 - Language: English 繁體中文 简体中文 French Russian Italian Spanish German Portuguese Polish Japanese
- OSD Setting:**
 - Time Stamp: Enabled Disabled
 - Text: Enabled Disabled
 - OSD Display** | Text Edit
- Time Setting:**
 - Server Time: 2017/5/2 12:14:56 Time Zone: GMT+08:00
 - Date Format: yy/mm/dd mm/dd/yy dd/mm/yy
 - Time Zone: GMT+08:00
 - Enable Daylight Saving:
 - NTP :
 - NTP Server: pool.ntp.org
 - Update: 6 Hour
 - Time Shift: 0 Minutes [-1440..1440]
 - Synchronize with PC's time
 - Date: 2017/5/2
 - Time: 12:14:2
 - Manual
 - Date: 2017/5/2
 - Time: 12:13:56
 - The date and time remain the same


An 'Apply' button is located at the bottom right of the settings area.

Image Setting


Camera

Previewing the result of the settings made in [Image Setting](#).

Privacy Mask

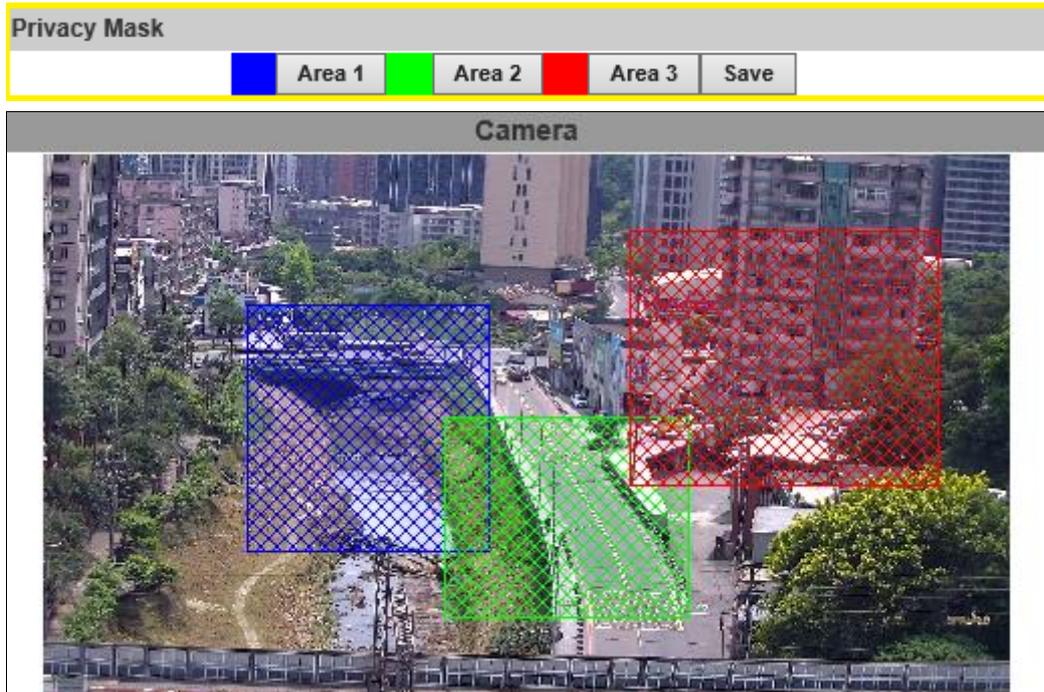

An area on the monitoring screen can be masked as a block of particular color only in [live view](#) for security and privacy purposes, but will not be visible in the video recorded. You can create up to 3 privacy masks.

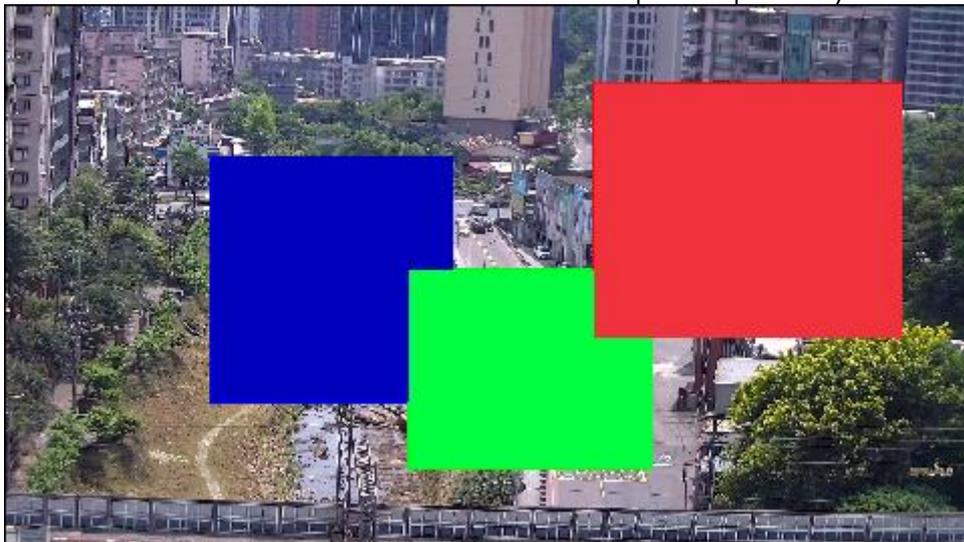

Click any **Area 1/2/3** button first, and then draw an area on the preview image screen with mouse. Click **Save** to apply settings and create the mask. You can discard the masked area previously set by clicking **Area 1/2/3** button again. Click **Save** to confirm all the adjustments.

Image Setting


DAY PROFILE & NIGHT PROFILE

Settings can be adjusted under **Day Profile & Night Profile** drop-down lists. Activate these profiles by enabling **Times Mode** from **Day & Night**, the configurations from both **Day & Night Profiles** will be automatically adjusted between daytime and nighttime.

Day Profile	Night Profile
0	0
0	0
0	0
0	0
1 (Low)	1 (Low)
2	2
1	1
64x	64x
Outdoor	Outdoor

D-WDR & TRUE-WDR FEATURES

Click Video Setting from **AV Settings** menu first.

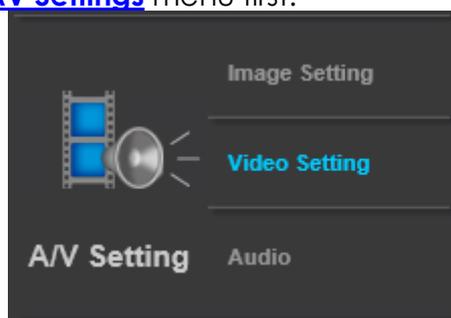

There are two types of **Image Setting** to switch with depending on what **Input Resolution** from **Video Setting** you have applied to the camera.

Input Resolution **without WDR** features = **D-WDR**


Video Setting	
Input Resolution:	2592x1520 @ 25fps

Input Resolution **with WDR** features = **True WDR**

Video Setting	
Input Resolution:	2592x1520_WDR @ 25fps

Click **Apply** to assign an input resolution for captured video files. Features vary in FPS (frames-per-second) and options will be modified in [Image Setting](#).

Go back to [Image Setting](#) where you can operate a different set of settings.

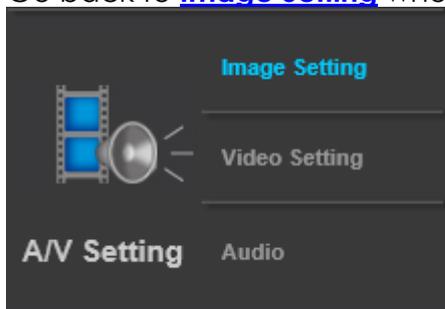

D-WDR enables the camera to reduce the contrast in the view to avoid dark zones as a result of over & under exposure.

Image Setting	Day Profile	Night Profile
Brightness:	0 ▾	0 ▾
Contrast:	0 ▾	0 ▾
Hue:	0 ▾	0 ▾
Sharpness:	0 ▾	0 ▾
D-WDR:	2 ▾	2 ▾
Denoise 3D:	3 ▾	3 ▾
Denoise 2D:	2 ▾	2 ▾
Shutter Time:	Outdoor ▾	Outdoor ▾
Sense-Up:	1/30 ▾	
AE Compensation:	0 ▾	0 ▾
AE Strategymode:	Lowlight priority ▾	

True-WDR enables the camera to combine the over & under exposures to smooth out dark zones for best image quality.

Image Setting	Day Profile	Night Profile
Brightness:	0 ▾	0 ▾
Contrast:	0 ▾	0 ▾
Hue:	0 ▾	0 ▾
Sharpness:	0 ▾	0 ▾
True WDR:	4 ▾	4 ▾
Denoise 3D:	3 ▾	3 ▾
Denoise 2D:	2 ▾	2 ▾
Shutter Time:	Outdoor ▾	Outdoor ▾
Sense-Up:	1/30 ▾	
AE Compensation:	0 ▾	0 ▾
AE Strategymode:	Lowlight priority ▾	

DENOISE 3D & 2D

Filter the noise and blur from the image and show a clearer view. You can set the values for 3D & 2D filters.

SHUTTER TIME

Choose the location of your camera or a fixed shutter time. The shorter the shutter time is the less light the camera receives and the image becomes darker. Note: When you select a number in Shutter Time, the shutter time will vary in a range and be controlled by camera automatically. The following table shows the shutter time options and corresponding range.

SENSE-UP

Increases the sensitivity of camera to get brighter image at night. The smaller value you select, the slower shutter speed becomes. So that the image will get brighter, and moving subjects might be blurred.

AE COMPENSATION

Assign levels of exposure to help lighten or darken the camera view. Assigning a bigger/smaller number creates a lighter/darker image.

AE STRATEGYMODE

Select **Lowlight Priority** or **Highlight Priority** to adjust the view in preference of lightening or darkening the contrast.

Saturation:	0	▼
AGC:	40x	▼
Low Lux Auto-adjust:	<input checked="" type="checkbox"/>	
Anti Fog:	<input type="checkbox"/>	Enable
Lens Distortion Correction:	Off	▼
Video Orientation:	<input type="checkbox"/>	Flip <input type="checkbox"/> Mirror

SATURATION

Adjust the saturation values here.

AGC

The sensitivity of the camera can be adjusted according to its environmental lighting. Enable this function to get brighter images on low light, but the level of noise may also increase.

LOW LUX AUTO-ADJUST

Click to enable the camera to adjust its low lux level automatically in different lighting environments.

ANTI FOG

Improve the image clarity on environments presenting high levels of fog or smoke.

LENS DISTORTION CORRECTION

Straighten the curves in the borders of the image caused by the lens angles.

VIDEO ORIENTATION

Flip or mirror the image.

DAY & NIGHT

Select a mode from its drop-down menu and adjust the camera to detect the light level for different environments. Settings vary when modes are shifted. An extra sub-function may appear to be available after a setting is adjusted.

Day & Night:	<div style="border: 1px solid black; padding: 2px;"> <div style="background-color: #0070C0; color: white; padding: 2px;">Light Sensor Mode</div> <div style="padding: 2px;">Color Mode(Day)</div> <div style="padding: 2px;">B/W Mode(Night)</div> <div style="padding: 2px;">Times Mode</div> <div style="padding: 2px;">Synchronize with DI input</div> </div>
--------------	--

Light Sensor Mode

Automatically adjust itself depending on the light of the monitored area.


Day & Night:	Light Sensor Mode ▼	
Night to Day Interval:	6 ▼ (second)	Day to Night Interval: 6 ▼ (second)
Night to Day Lux:	7 lux ▼ (about)	Day to Night Lux: 3 lux ▼ (about)
Current Lux:	41 lux (about)	
Day/Night Auto Focus:	<input type="radio"/> ON <input checked="" type="radio"/> OFF	
Auto Focus on Reboot:	<input type="radio"/> ON <input checked="" type="radio"/> OFF	
IR Intensity:	Far ▼	
White Balance:	Auto ▼	
Red Gain:	0 ▼	Blue Gain: 0 ▼
Outdoor Threshold:	0 ▼	Indoor
		Default

- **Night to Day Interval & Day to Night Interval:** Set up the duration of how long before the **Day time** shifts to **Night time** (or the other way around).
- **Day to Night Lux & Night to Day Lux:** Appoint desired lux values as a standard for switching **Night to Day Interval & Day to Night Interval**.
- **Current Lux:** Provided as a reference to adjust the **Day to Night Lux & Night to Day Lux**.
- **Day/Night Auto Focus:** Select **ON** to enable the camera to automatically adjust its focus to maintain a clear video image during the day / night time.
- **Auto Focus on Reboot:** Select **ON** to enable the camera to automatically execute the Day/Night adjustment after rebooting.

- **IR Intensity:** Adjust the IR intensity level as **Far**, **Middle** or **Near**.
- **White Balance:** Apart from **AUTO**, which continuously adjusts image color balance according to any change of lightings in various scenes, the other 5 modes are designed for specific lighting conditions such as **Tungsten Lamp**, **Fluorescent Lamp**, **Sunlight**, **Cloudy**, and **Cloudy Days**.
- **Red & Blue Gain:** Adjust levels in red & blue contrasts in the image. Be aware that when these levels are increased, the image quality will become sharper to a point that noise of the image will also be increased.
- **Outdoor Threshold:** Values applied for this feature will define how sensitive the motion detection is triggered for outdoor scenes. The lower the number, the less motion will be conditioned for triggering.
- **Indoor:** Click to enable operation for any indoor motion detections.
- **Default:** Click on button to restore the default settings.

Color Mode (Day)

Recommended to use for day time.

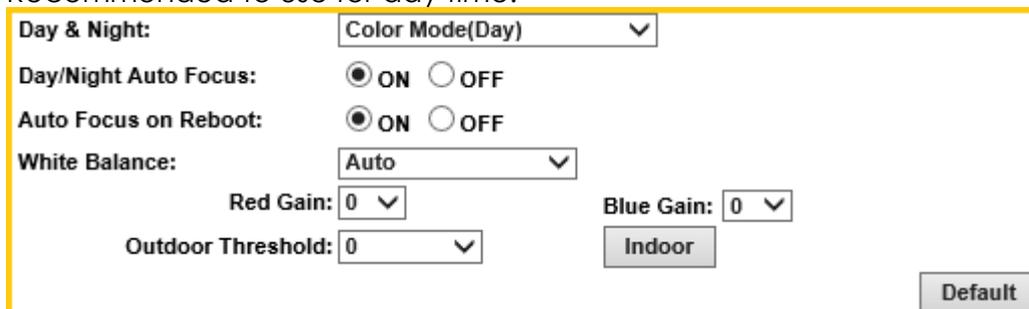

Day & Night:

Day/Night Auto Focus: ON OFF

Auto Focus on Reboot: ON OFF

White Balance:


Red Gain: Blue Gain:

Outdoor Threshold:

Please refer to [Light Sensor Mode](#) for repeated functions.

B/W Mode (Night)

Recommended to use for night time.

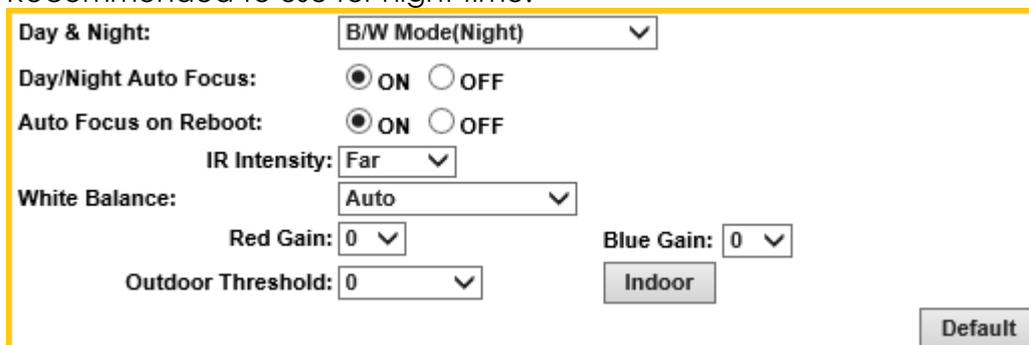

Day & Night:

Day/Night Auto Focus: ON OFF

Auto Focus on Reboot: ON OFF

IR Intensity:

White Balance:


Red Gain: Blue Gain:

Outdoor Threshold:

Please refer to [Light Sensor Mode](#) for repeated functions.

Times Mode

Set the values in **Brightness, Contrast, Sharpness, and Denoise (3D&2D)** for both [Day Profile](#) & [Night Profile](#) to be performed according to the **Time** arranged from **Day** to **Night**.

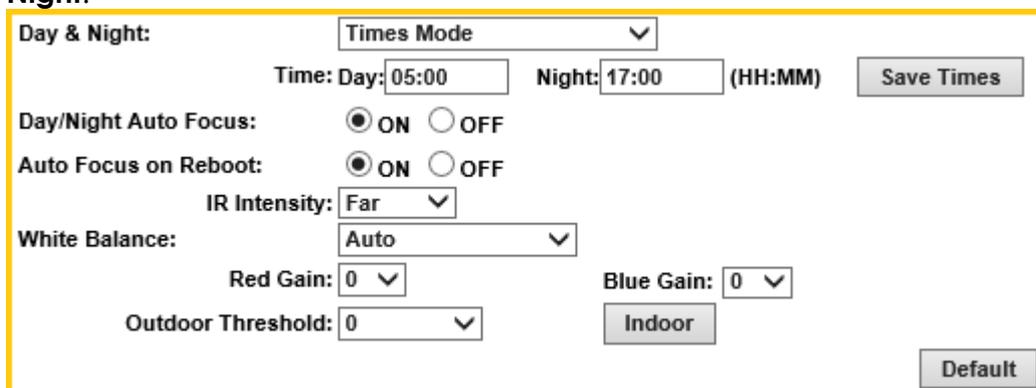

- **Time:** The user can define when the daytime (**Day**) starts by filling in the digits such as 05:00 or 12:35. (Hours range: 0~23, minutes range: 0~59)

Here is an example: Time: Day: Night: (HH:MM)


If the time range is inaccurate, a window will pop up to remind you. Same way applies to filling the nighttime (**Night**).

Click when settings are completed.

Please refer to [Light Sensor Mode](#) for repeated functions.

Synchronize with DI input

Settings are adjusted according to the **DI input** functions.

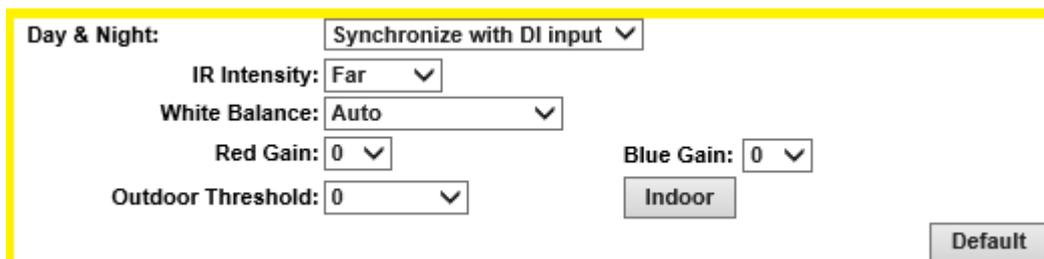

Please refer to [Light Sensor Mode](#) for repeated functions.

Video Setting

Video System

INPUT RESOLUTION

Click to assign input resolution for captured video files. Features vary in FPS and will modify the options from [Image Setting](#).


Input Resolution without WDR features

Video Setting	
Input Resolution:	2592x1520 @ 25fps ▾
Video System:	NTSC ▾
TV Output:	Auto ▾ (Auto : Based on the Video System)
Corridor Mode:	none ▾

Input Resolution with WDR features

Video Setting	
Input Resolution:	2592x1520_WDR @ 25fps ▾
Video System:	NTSC ▾
TV Output:	Auto ▾ (Auto : Based on the Video System)
Corridor Mode:	none ▾

Please refer to [D-WDR & TRUE-WDR FEATURES](#) for information.

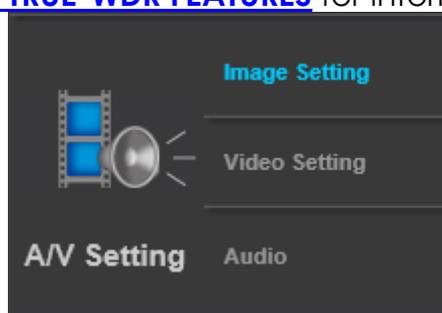

VIDEO SYSTEM

Choose from **NTSC** or **PAL** for video signal.



TV OUTPUT

Choose **Auto** or select between **NTSC** and **PAL** signal. (Note: **Video Output** should be used for [Live View](#) only. For recording, please use the standard RJ54 output.)

CORRIDOR MODE

When camera is set in various angles in a site for monitoring purpose, it may result in relation of the image being displayed in different angles. Therefore we may need the **CORRIDOR MODE** to pre-adjust its angle.





When Corridor mode is set to None

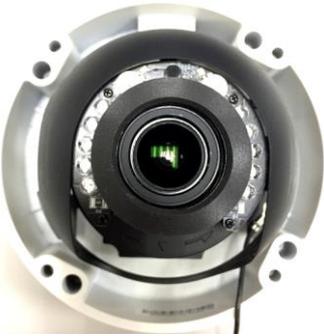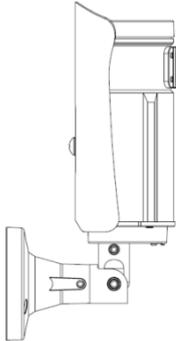		0 degrees	
Image			
Position			
		90 degrees	
Image			
Position			

	270 degrees	
Image		
Position		

When Corridor mode is set to 90 or 270 degrees


	0 degrees	
Image		
Position		

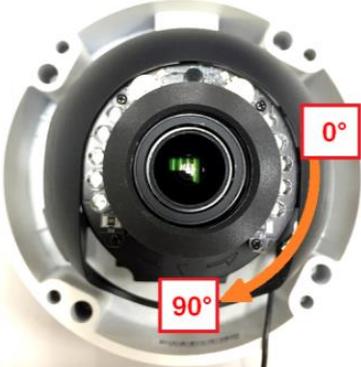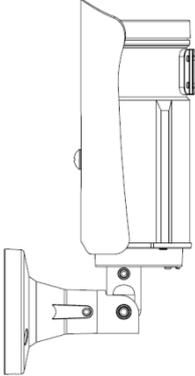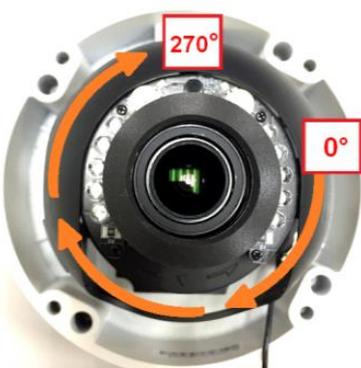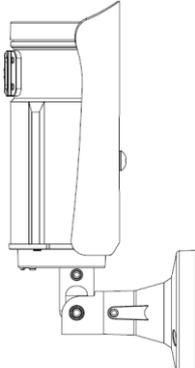	90 degrees	
Image		
Position		
	270 degrees	
Image		
Position		

Streaming Settings

Resolution range varies depending on different **Streaming Modes**.

BASIC MODE

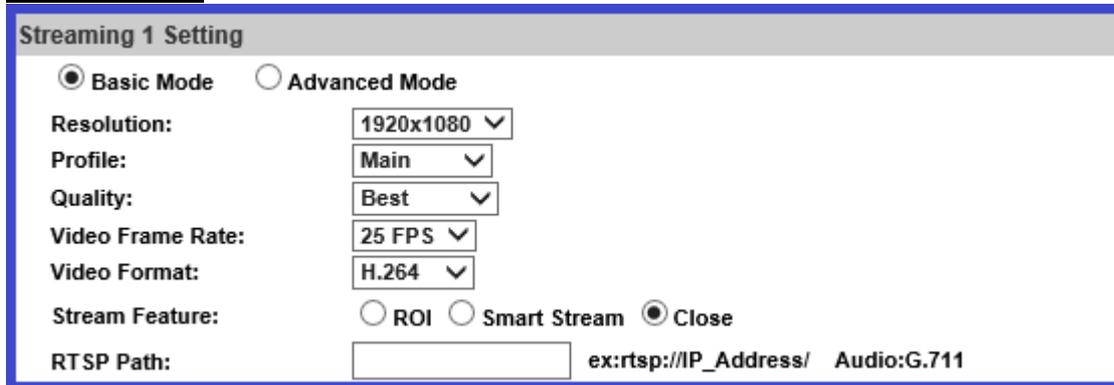

Streaming 1 Setting

Basic Mode Advanced Mode

Resolution: 1920x1080 ▾

Profile: Main ▾

Quality: Best ▾

Video Frame Rate: 25 FPS ▾

Video Format: H.264 ▾

Stream Feature: ROI Smart Stream Close

RTSP Path: ex:rtsp://IP_Address/ Audio:G.711

Resolution

Choose a set for the camera resolution from **2592x1520@25fps**, **1920x1080@30fps**, **1280x720@30fps**, **640x360@30fps**

Profile

Select from **Main** or **Baseline** based on bandwidth consumption of the recorded video to be replayed for different applications.

Quality

Levels vary from **Best**, **High**, **Standard**, **Medium** to **Low**. The higher the quality, the bigger the file size. Not ideal for internet transmission.

Video Frame Rate


Adjust the video refreshing rate for each second.

Video Format

Select from **H.264+**, **H.264** or **JPEG**

Stream Feature

Select from the options for operating different features.

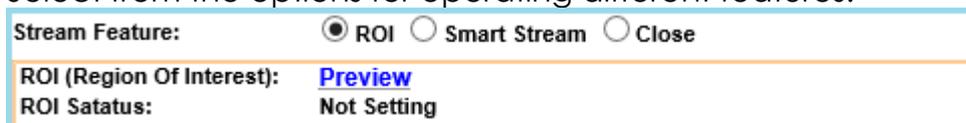

Stream Feature: ROI Smart Stream Close

ROI (Region Of Interest): [Preview](#)

ROI Status: Not Setting


Note: You MUST click at the bottom after selecting the feature to enable either ROI or Smart Stream.

- **ROI (Region of Interest)**

This function helps refine any specific part of the monitoring area which can be dragged out with the mouse at a time, improving efficiency in image observation and management in video compression rate.

Click [Preview](#) to enable ROI the function. Click on any of the colors in **Area Setting** to draw an ROI area on the preview screen by dragging your mouse. You can set up to approximately 3 ROI areas.

ROI (Region Of Interest): ON OFF [Preview](#)

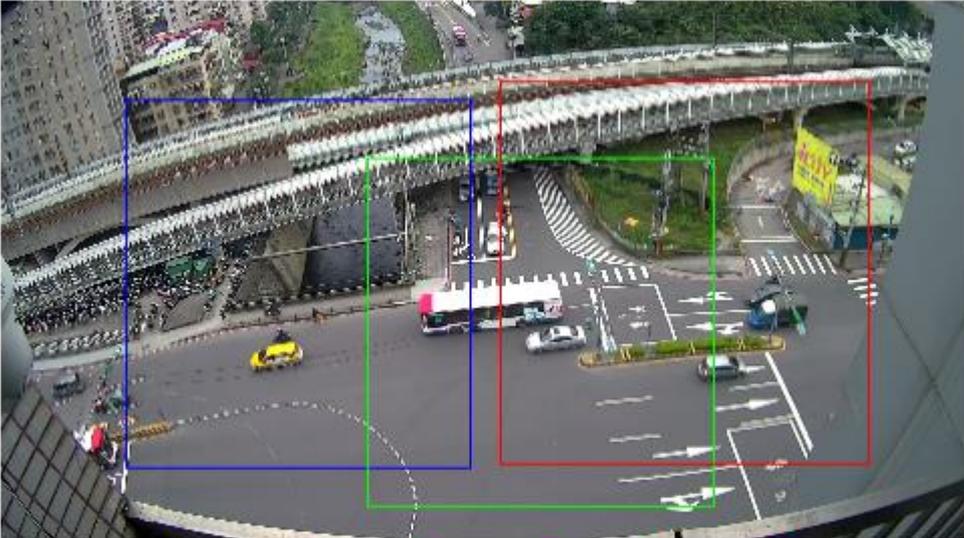

Area Setting: Area 1 Area 2 Area 3 Save

ROI Area Quality: 5 5 5

FPS of None ROI: 25 FPS (ROI FPS equals to Video Frame Rate)

Adjust the **ROI Area Quality** and **FPS of None ROI** values of each area from each drop down list. You can see the **ROI Status** once **ROI** is activated.

Stream Feature: ROI Smart Stream Close

ROI (Region Of Interest): [Preview](#)

ROI Satatus: Area1_ON,Area2_ON,Area3_ON,FPS of None ROI=5,ROI Area Quality=Best

- **Smart Stream**

Enable this mode, set the range of FPS and Bitrate to limit its stream capacity, in order to preserve a better performance of image quality and save more bandwidth.

Stream Feature: ROI Smart Stream Close

Smart Stream FPS: 3 FPS

Smart Stream Bitrate: 512Kbps

RTSP Path

Offers the RTSP output connecting path.

ADVANCED MODE

Streaming 1 Setting

Basic Mode Advanced Mode

Resolution: ▾

Profile: ▾

Bitrate Control Mode: CBR CVBR

Video Quantitative: ▾

Video Bitrate Limit: ▾

Video Frame Rate: ▾

GOP Size: ▾ GOP = 25

Video Format: ▾

Stream Feature: ROI Smart Stream Close

RTSP Path: ex:rtsp://IP_Address/ Audio:G.711

[Resolution](#)

[Profile](#)

[Bitrate Control Mode](#)

There are **CBR (Constant Bit Rate)** and **CVBR (Constrained Variable Bit Rate)** modes.

- **CBR**
Video Bitrate Limit: (32Kbps~8Mbps) The higher the CBR is, the better the video quality is.
- **CVBR**
Video Quantitative: 1(Low) ~10(High)
The higher the compression rate, the lower the picture quality is; vice versa.
Avoid image breaking up or lagging by setting the bandwidth limit for CVBR streaming.

[Video Frame Rate](#)

[GOP Size](#)

It means "Group of Pictures". The higher the GOP is, the better the quality is.

[Video Format](#)


[Stream Feature](#)

- [ROI \(Region of Interest\)](#)
- [Smart Stream](#)

[RTSP Path](#)

3GPP Streaming Setting


TV output will be shut down during this mode.

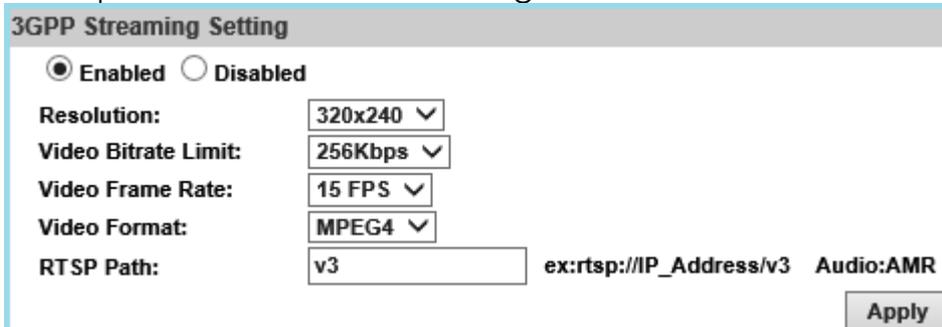

- **Resolution:** 640x480@15fps, 320x240@15fps
- **Video Bitrate:** The higher Video Bitrate, the better the video quality is.
- **Video Frame Rate:** The video refreshing rate per second.
- **Video Format:** H.264+, H.264
- **RTSP Path:** Offers the RTSP output connecting path.

Please click on the button to keep the changes when all the settings are completed and confirmed.

Audio

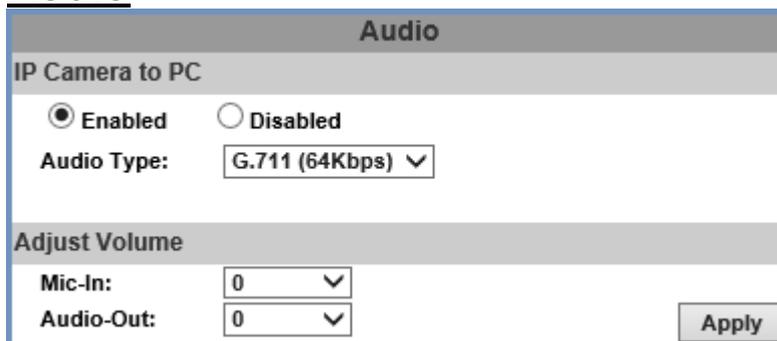

The user can send audio from the IP Camera built-in microphone to the remote PC and audio from remote PC to IP Camera's external speaker.

IP Camera to PC

Select **Enabled** to start and select the audio type. Tick **chatting** in the live browser to enable **PC to IP Camera** audio function.


The Audio may not be smooth when the SD card is recording.

' and 'Online Visitor : 1'." data-bbox="120 849 422 870"/>

Adjust Volume

Select the volume of both **Mic-in** & **Audio-out**. Click on the **Apply** button to keep all the changes.

Sound Detection

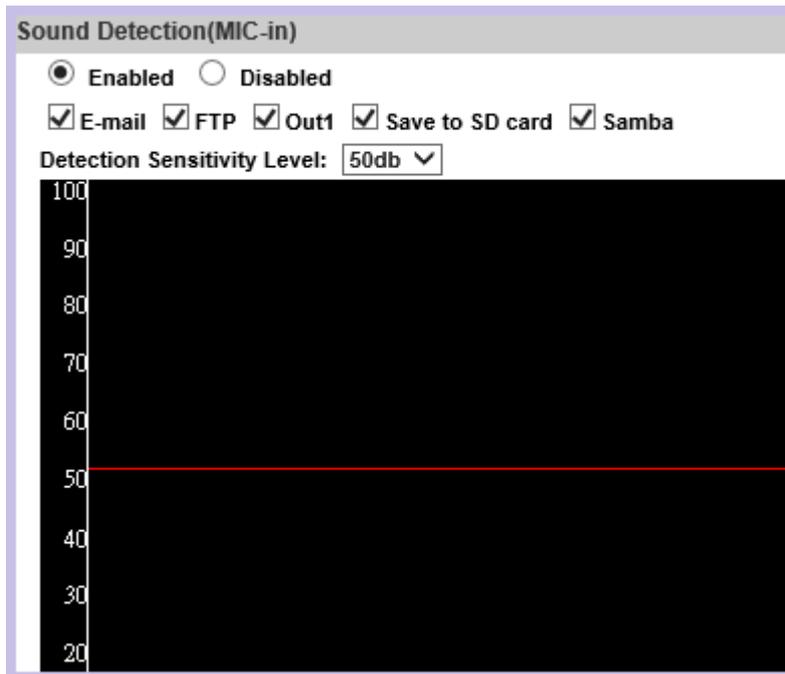

Sound Detection(MIC-in)

Enabled Disabled

E-mail FTP Out1 Save to SD card Samba

Detection Sensitivity Level: 50db

100
90
80
70
60
50
40
30
20

Test the audio volume and sound quality first by selecting **Enabled**. Tick the output destination of the audio file recorded. Adjust the **Detection Sensitivity Level** from 40~90db to display the audio frequency level in the analytical graph below.


Event List



Click  to get into the administration page.



Click  to go back to the live video page.

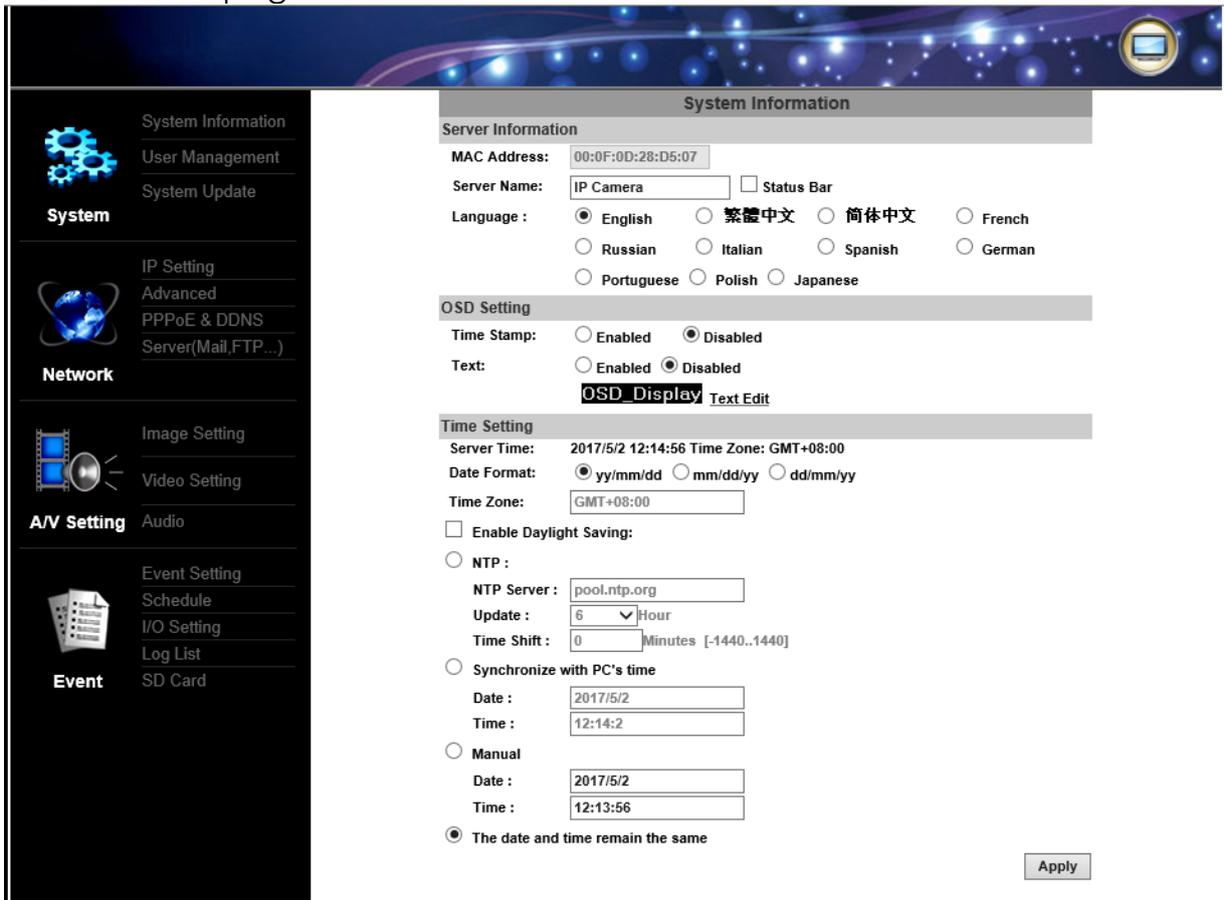

The screenshot displays the administration interface for an IP camera. On the left is a navigation menu with categories: System (System Information, User Management, System Update), Network (IP Setting, Advanced, PPPoE & DDNS, Server(Mail,FTP...)), A/V Setting (Image Setting, Video Setting, Audio), and Event (Event Setting, Schedule, I/O Setting, Log List, SD Card). The main content area is titled 'System Information' and contains several sections: 'Server Information' with fields for MAC Address (00:0F:0D:28:D5:07), Server Name (IP Camera), and Language (English selected); 'OSD Setting' with Time Stamp and Text options (both Disabled); 'Time Setting' with Server Time (2017/5/2 12:14:56), Date Format (yy/mm/dd selected), Time Zone (GMT+08:00), and NTP settings (pool.ntp.org, 6 hours update, 0 minutes shift); and 'Synchronize with PC's time' (2017/5/2, 12:14:2) and 'Manual' (2017/5/2, 12:13:56) options. An 'Apply' button is at the bottom right.

The IP Camera provides multiple event settings.

Event Setting

Please change default password is a sign which appears on the preview screen as a reminder, to suggest you change login settings in [System](#) to secure your account privacy.

Motion Detection

A motion detection operation allows user to define a certain area which detects anything moving or changing its position within. It helps user to target on details inside a smaller picture, and effectively identify various surroundings of the monitored environment.


Whenever a motion is detected inside the framed area, the word **Motion** will appear on live screen and the data of notification can be sent to assigned directory for remote user.

MOTION DETECTION OPERATION



- **Area Setting:** Click any of the    icons to start drawing 3 areas on the preview screen with your mouse in 3 different colors. Click any **Area** icon again to discard the motion area which has been made.

- **Sensitivity:** Adjust the level of the responsiveness defined as motion detection. The higher number assigned, the more sensitive, vice versa.
- **Activate motion time:** Assign the duration defined as motion activity.
- **Preview:** Click [Preview](#) to open the analytical graph which reveals the Trigger Level of the motion activity in each motion area you have made.

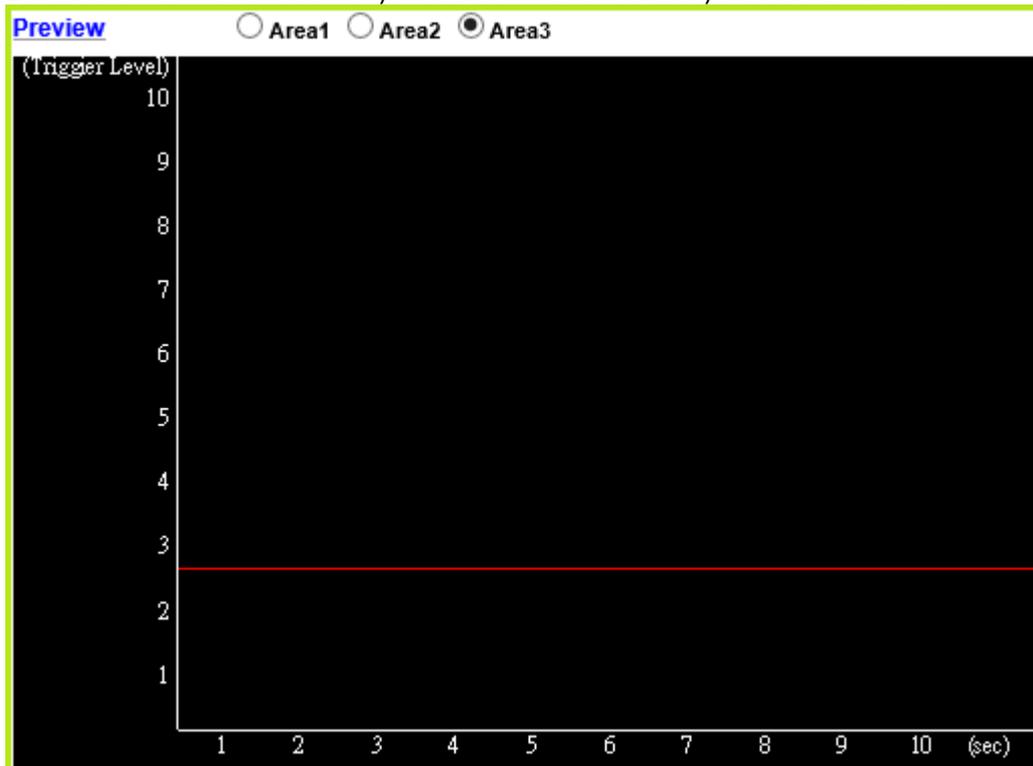

- **Area 1/2/3:** Data of events triggered within the motion area can be assigned by marking the checkboxes of the source and destination.

<input checked="" type="checkbox"/> Area 1:	<input checked="" type="checkbox"/> E-mail	<input type="checkbox"/> FTP	<input type="checkbox"/> Out1	<input type="checkbox"/> Save to SD card	<input type="checkbox"/> Samba	<input type="checkbox"/> Google Drive	<input checked="" type="checkbox"/> Dropbox
<input type="checkbox"/> Area 2:	<input type="checkbox"/> E-mail	<input checked="" type="checkbox"/> FTP	<input checked="" type="checkbox"/> Out1	<input type="checkbox"/> Save to SD card	<input type="checkbox"/> Samba	<input checked="" type="checkbox"/> Google Drive	<input type="checkbox"/> Dropbox
<input type="checkbox"/> Area 3:	<input type="checkbox"/> E-mail	<input type="checkbox"/> FTP	<input checked="" type="checkbox"/> Out1	<input checked="" type="checkbox"/> Save to SD card	<input checked="" type="checkbox"/> Samba	<input type="checkbox"/> Google Drive	<input type="checkbox"/> Dropbox
Log :	<input checked="" type="checkbox"/> E-mail	<input checked="" type="checkbox"/> FTP	<input checked="" type="checkbox"/> Samba				
Subject:	<input type="text" value="IP Camera Warning!"/>						
Interval:	<input type="text" value="10 sec"/> a period of time between every two motions detected.						
<input checked="" type="checkbox"/> Based on the schedule							

For example, if you mark the **Save to SD card** checkbox from **Area 3**, the video or snapshot triggered in **Area 3** motion area will be saved to the **Micro SD card**.

- **Log:** Popped up after **Save to SD card** checkbox is ticked by your mouse. Check **E-mail/ FTP/ Samba** checkboxes on the **Log** option to send the motion detection log to **E-mail/ FTP/ Samba** simultaneously.
- **Subject:** Type in the message you would receive when motion is detected. The default message is “**IP Camera Warning!**”.
- **Interval:** For example, when selecting **10 sec**, once the motion is detected and the action is triggered, it cannot be triggered again within 10 seconds.
- **Based on the schedule:** Assign the timetable managed from [Schedule](#) to enable [Motion Detection](#) after the option checkbox is ticked.

OBJECT MOTION OPERATION

Object Motion ▼

Motion Detection



Basic Mode **Advanced Mode**

Area Setting: Rectangle ▼ Area

Stay Sec: (0~30)

Object WxH: (5~100) Setting

Area:
 E-mail
 FTP
 Out1
 Save to SD card
 Samba
 Google Drive
 Dropbox


Subject:

Interval: 10 sec ▼ a period of time between every two motions detected.

Based on the schedule

- **Area Setting:** Before clicking on Area icon, select from **Rectangle** or **Polygon** to apply the method of zoning the area on the preview screen with your mouse. Click the icon again to discard the motion area you have made.

Rectangle: Move the green points around to define the motion area.

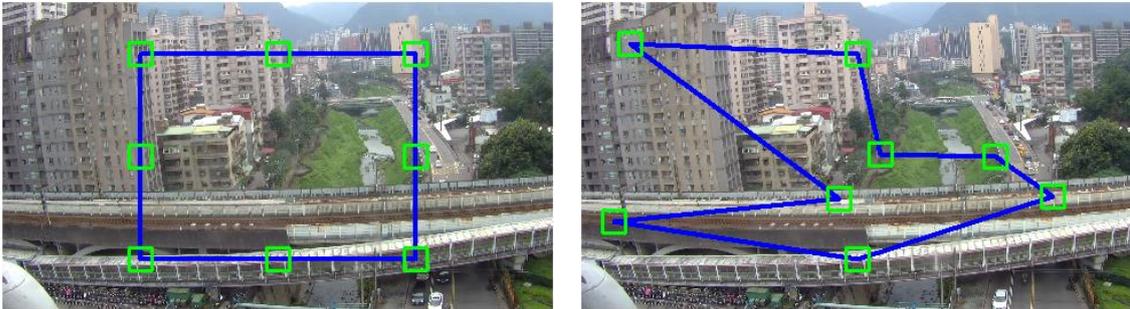

Polygon: Draw the motion area with 19 continuous lines in any directions.



- **Stay Sec:** Assign the duration defined as motion activity.
- **Object WxH:** Assign the width & height (ranged from **5~100**) as triggering conditions for any element which happens to be inside the motion area.

For example, input **50** and **80** in the fields, and then click **Setting** to generate a frame, which initiates from top-left corner of the preview screen as demonstrated below.



Only objects **bigger than the frame** that causes movement within the motion area will be identified as a motion trigger event.

- **Area:** The camera will also send video or snapshot to specific **E-mail** addresses, trigger the output device, or save recorded data to **FTP/ Micro SD card/ Samba / Google Drive / Dropbox**. You can set up those paths from [Network](#) operations.

Subject:	<input type="text" value="IP Camera Warning!"/>
Interval:	<input type="text" value="10 sec"/> a period of time between every two motions detected.
<input checked="" type="checkbox"/>	Based on the schedule
Schedule Profile:	<input type="text" value="Profile1"/>

- **Subject:** Type in the message you would receive when motion is detected. The default message is “**IP Camera Warning!**”.
- **Interval:** For example, when selecting **10 sec**, once the motion is detected and the action is triggered, it cannot be triggered again within 10 seconds.
- **Based on the schedule:** Assign the timetable managed from [Schedule](#) to enable motion detection after the option checkbox is ticked.

Record File

Record File	
File Format:	<input type="text" value="AVI File(with Record Time Setting)"/>

When an event occurs, the camera will record a video clip or take snapshot, and then send to **mail/ FTP/ Samba**. Select the file format to be saved.

- **AVI File (with Record Time Setting):** Save AVI video file. The video length is according to the value set in Record Time Setting.
- **JPEG Files (with Record Time Setting)*Only Streaming 1 with JPEG file format.:** Only when selecting "JPEG" in streaming 1 video format of Video Setting, this option can be enabled. Select this option to save several JPEG picture files. The successive picture files cover a period of time according to the value set in Record Time Setting.
- **JPEG File (Single File with Interval Setting):** Save single JPEG picture file when the event occurs.

Record Time Setting

Record Time Setting			
Pre Alarm:	<input type="text" value="5 sec"/>	Post Alarm:	<input type="text" value="5 sec"/>

When an event occurs, the IP camera can record a video clip or take a snapshot, and then send it via mail/ FTP/ Samba. Select the video recording length before and after the event is detected.

Motion Detection

Area 3: E-mail FTP Out1 Save to SD card Samba Google Drive Dropbox

Subject: IP Camera Warning!

Interval: 10 sec a period of time between every two motions detected.

Based on the schedule

Record File

File Format: AVI File(with Record Time Setting)

Record Time Setting

Pre Alarm: 5 sec Post Alarm: 5 sec

Record 5 sec. before motion and 5 sec. after motion to SD card

This motion will not be recorded because it's in the interval

Record 5 sec. before motion and 5 sec. after motion to SD card

Network IP Check

Network IP Check

IP Check: Enabled Disabled

IP Address: www.google.com

Interval: 30 sec

Check failed: Connection failed four times. Reboot IP Camera.
 Save to SD card

(When Schedule Record Enable, it'll stop saving to SD card)
 (When IP check failed, first step will save to SD card, continuing other saving storage)

Apply

After enabling IP Check, the IP camera can check if the network server is connecting. If the checking fails for 4 times, the camera will reboot.

Click **Apply** to update all the settings adjusted.

Schedule

Schedule

Tick the grids on the calendar to manage your schedule time.

Schedule
Profile1

All	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	
Mon.																									
Tue.																									
Wed.																									
Thu.																									
Fri.																									
Sat.																									
Sun.																									

With schedule setup.

Profile: ▼

Profile1 Name:

- **Profile:** Select a Profile from the drop down list.
- **Profile(1,2,3) Name:** Input & assign a profile name for each profile.

Schedule
Profile2

All	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	
Mon.																									
Tue.																									
Wed.																									
Thu.																									
Fri.																									
Sat.																									
Sun.																									

With schedule setup.

Profile: ▼

Profile2 Name:

Schedule
Profile3

All	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	
Mon.																									
Tue.																									
Wed.																									
Thu.																									
Fri.																									
Sat.																									
Sun.																									


With schedule setup.

Profile: ▼

Profile3 Name:

Snapshot & Record


- **Record:** After completing the **Schedule**, the camera data will be recorded according to the schedule made from the calendar.

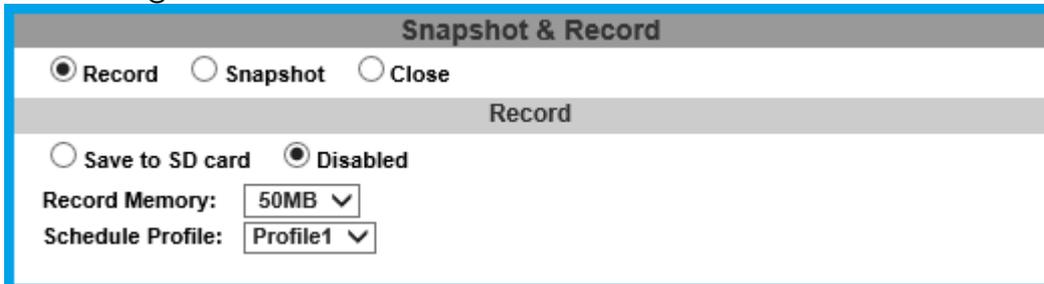

The screenshot shows the 'Snapshot & Record' configuration window. The 'Record' tab is selected. The 'Record' sub-tab is active. The 'Save to SD card' option is disabled, and 'Disabled' is selected. The 'Record Memory' is set to 50MB, and the 'Schedule Profile' is set to Profile1.

Beware that SD cards may fail for being recorded for a long period of time. You may set up how much you would like the SD card memory to be used in order to estimate the right time to swap a new one. Assign the **Schedule Profile** time selected from the drop-down list first.

- **Snapshot:** After enabling the snapshot function; the user can select the storage position, interval time and reserved file name of the snapshot. Assign the **Schedule Profile** time selected from the drop-down list first.

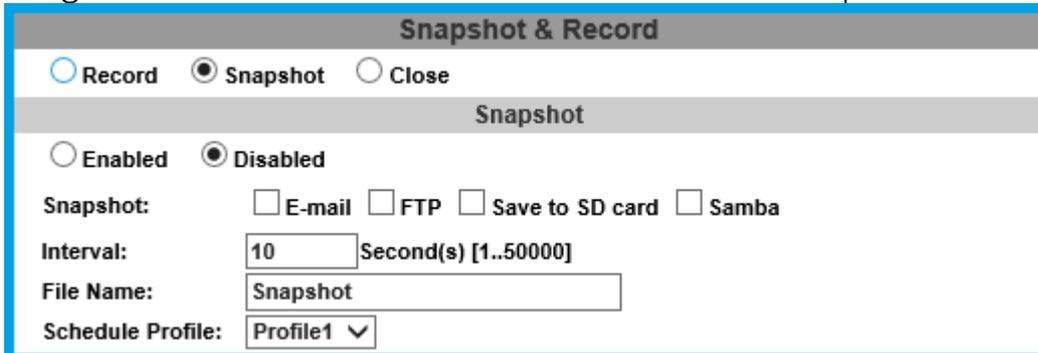


The screenshot shows the 'Snapshot & Record' configuration window. The 'Snapshot' tab is selected. The 'Snapshot' sub-tab is active. The 'Enabled' option is disabled, and 'Disabled' is selected. The 'Snapshot' options are: E-mail, FTP, Save to SD card, and Samba. The 'Interval' is set to 10 seconds, and the 'File Name' is set to Snapshot. The 'Schedule Profile' is set to Profile1.

Interval: Users can set the interval between two snapshots.

File Name: Enter the file name of your snapshot file.

- **Restart IP Camera Automatically:** Set up the time for IP camera to restart automatically after ticking **Restart** to enable access.

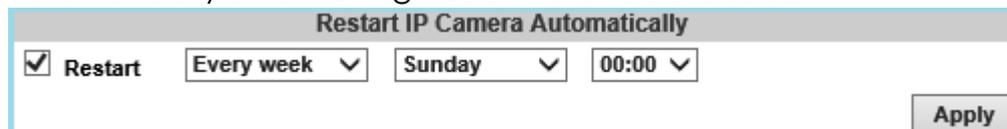


The screenshot shows the 'Restart IP Camera Automatically' configuration window. The 'Restart' checkbox is checked. The 'Every week' dropdown is selected, and the 'Sunday' dropdown is selected. The '00:00' dropdown is selected. An 'Apply' button is visible.

Click **Apply** to update all the settings adjusted.

I/O Setting

Please connect the GND & DO pin to the external relay (buzzer) device first.

I/O Configuration

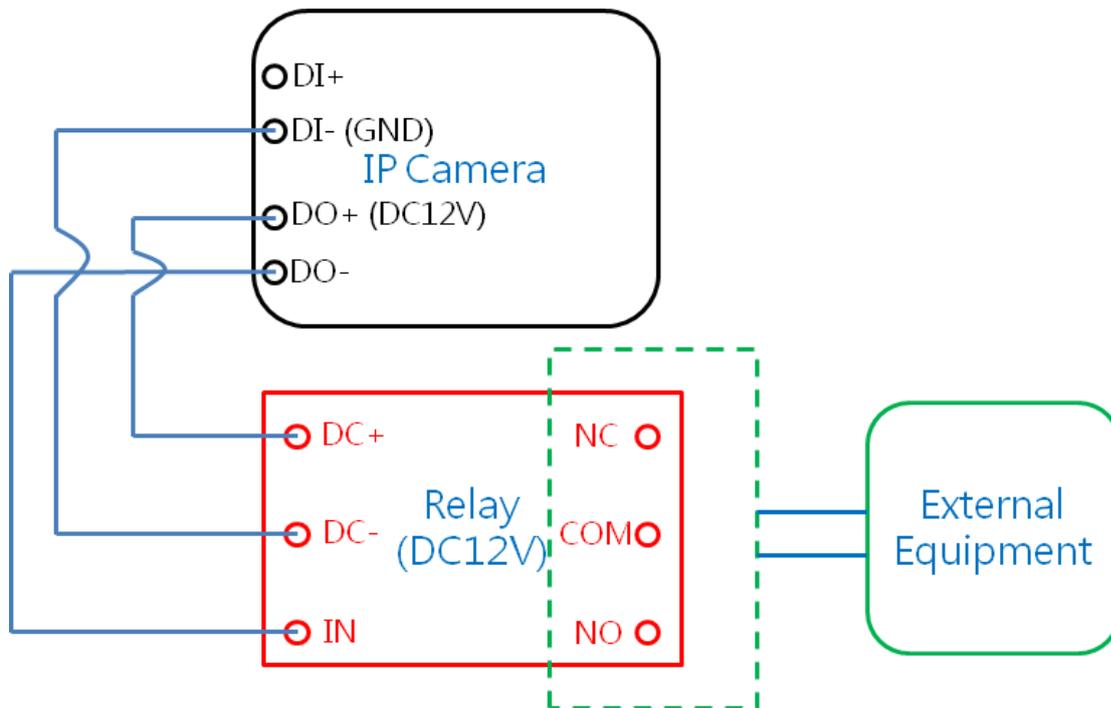


- a. Connect the GND & DO pin to the external relay (buzzer) device.
- b. Connect the GND & DI pin to the external trigger device.

c. I/O PIN Definition

- ✧ GND (Ground): Initial state is LOW
- ✧ DO (Digital Output): Max. 50mA ,.DC 12V
- ✧ DI (Digital Input): Max. DC 6V

I/O Setup

Enter **I/O Setting** via internet browser & check **Out1** to enable I/O signal.

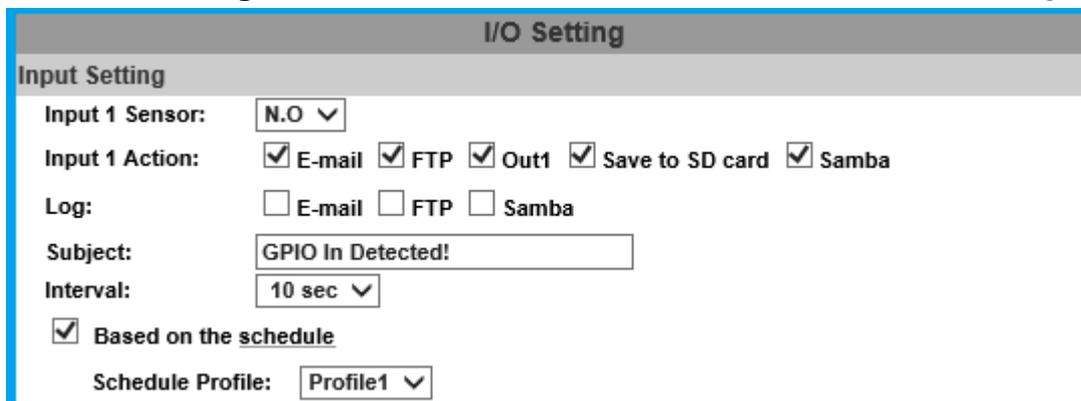


INPUT SETTING

The IP Cam supports both input and output operations. When the input condition is triggered, the relay will be also triggered & a notification will be sent depending what checkboxes are ticked.

- **Log:** Tick **Save to SD card** checkbox to enable **Log** which you would like to save data with.
- **Subject:** Input or edit the message you would like to receive for triggered alarm.
- **Interval:** If you select "10 sec" here, once the motion is detected and action is triggered, it cannot be triggered again within 10 seconds.
- **Based on the schedule:** Tick its checkbox to assign the timetable from **Schedule** of the **Event** Menu. Please refer to **Schedule** from **Event List**.
Click on the underlined **schedule** title to enter to the schedule setup menu.

OUTPUT SETTING

The output mode affects the DO or relay out duration.

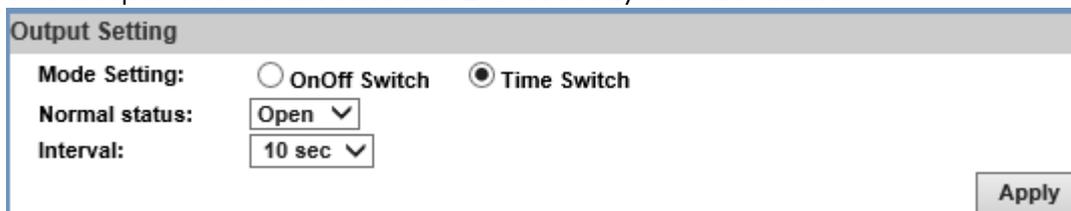

- **Mode Setting**

ON/Off Switch: The camera triggers the external device and lasts for 10 seconds. While in **Output Setting**, enable the **OnOff Switch** by clicking beside the title. You

can turn off the alarm manually by clicking “off” at the right bottom of the live video page.



Select **Open** (N.O) or **Close** (N.C) for its sensor from **Normal Status**.

Time Switch: The camera triggers the external device and lasts for certain time according to the internal setting, and the user is not allowed to break off the alarm manually.

While in **Output Setting**, enable the **Time Switch** by clicking beside the title, and then adjust the **Normal Status** & **Interval** to your desired level.

Click on the button to keep all the changes.

Log List

Log List	
System Logs	Logs
Motion Detection Logs	Logs
I/O Logs	Logs
All Logs	Logs

The log keeps data for user to check through events which have occurred during the monitoring operation. Click each **Logs** to open different log data.


All Log	
<System>	[2017/11/23 15:17:39] Language changed to Trad. Chinese.
<System>	[2017/11/23 15:17:21] 220.135.138.67 login by admin.
<System>	[2017/11/23 15:12:20] 220.135.138.67 login by admin.
<System>	[2017/11/23 15:12:15] 220.135.138.67 login by Anonymous.
<System>	[2017/11/23 15:12:15] 220.135.138.67 login by Anonymous.

System Logs won't lose data due to power failure. Choose **All Logs** to list out all the events from **Motion Detection Logs** to **I/O Logs**.

SD Card

Playback

Insert Micro SD card into the card slot thoroughly before starting this operation. Click the date under **Playback** title & a list of files will pop up.

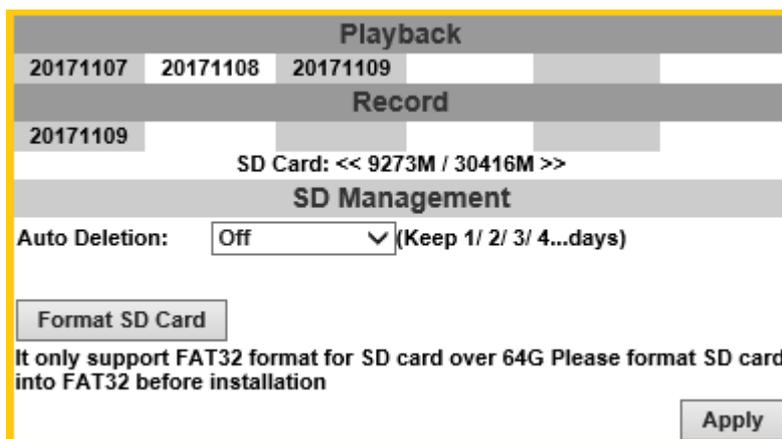


For example, if the date **2017/11/07** is clicked, all the events happened within that time frame will then appear in a list like the one below.

2017/11/07			Del
Time	Video	Event Type	<input type="checkbox"/>
21:46:01	214601m.avi	Motion Detection	<input type="checkbox"/>
21:46:24	214624m.avi	Motion Detection	<input type="checkbox"/>
21:47:14	214714m.avi	Motion Detection	<input type="checkbox"/>
21:55:15	215515m.avi	Motion Detection	<input type="checkbox"/>
21:55:27	215527m.avi	Motion Detection	<input type="checkbox"/>
21:56:13	215613m.avi	Motion Detection	<input type="checkbox"/>
21:56:24	215624m.avi	Motion Detection	<input type="checkbox"/>
21:56:55	215655i	IVS	<input type="checkbox"/>
21 o'clock	21 o'clock	Schedule Snapshot	<input type="checkbox"/>
22:02:45	220245i	IVS	<input type="checkbox"/>

Files link daily.

The enlisted files under **Video** category are files representing an event. There are 3 types of file formats, and each is different for its own **Event Type**. Notice how the file name formations under the **Video** category represent the time when a file is created.

For instance, the file name "**214601m.avi**" means the video is recorded at **21:46:01** today, **m** means **Motion Detection**, and **avi** represents the file format. Click on the file name to open the file.

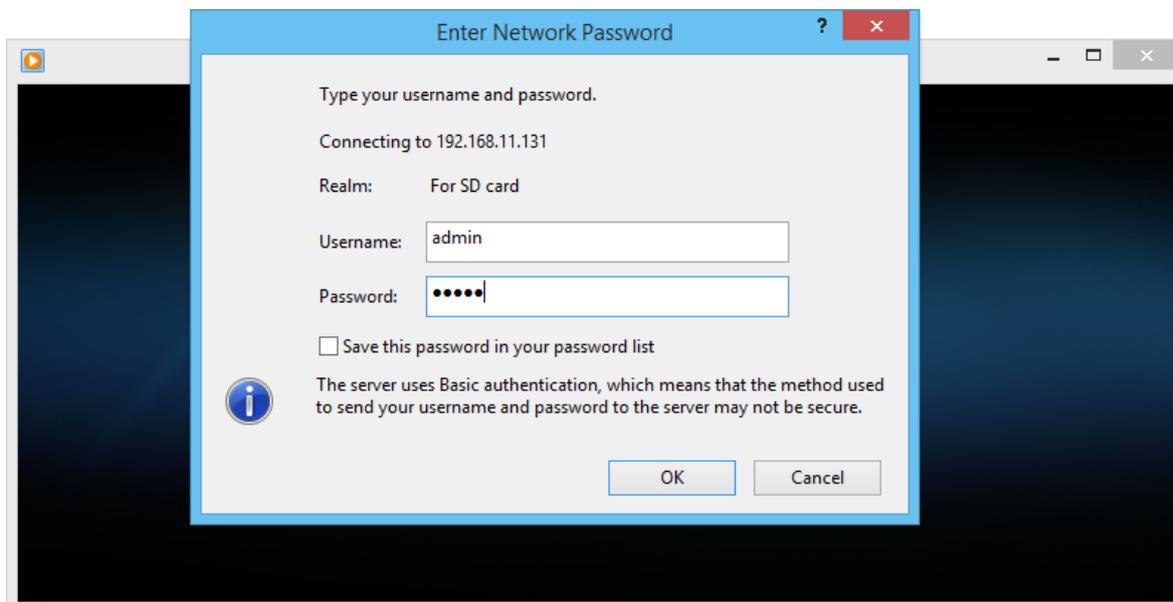


For **avi** files, you need Microsoft Media Player which is supposedly built-in in your PC. The default Username & Password for playing the video file are both **admin**.

Clicking on an **IVS** file (such as **215655i**) will bring out a pop-up window suggesting an **IVS** event captured as snapshots as the one below:



Clicking on any title that is labeled with “**time unit**” (such as **21 o'clock**) at the end will bring out a pop-up window indicating the snapshot taken as scheduled in **Schedule** mode and enabled in **Snapshot** mode.

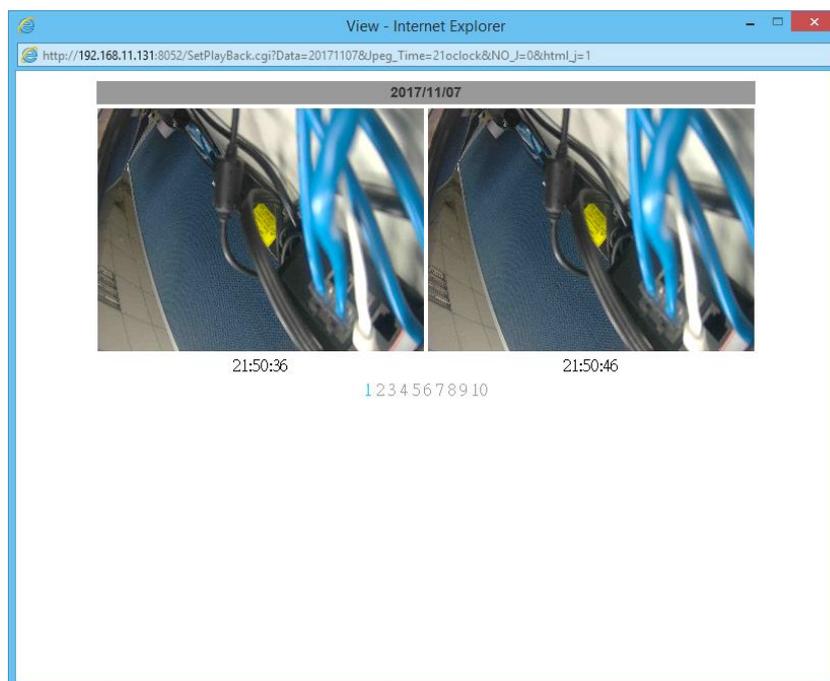

Click the  icon to delete any file by marking on the checkbox under the **Del** category with a mouse click.

Record

The recording mode is enabled after **Record** is set in **Schedule** mode. Take the schedule calendar below for example, the grids coloured in green between 3~12 are scheduled to start recording from 3 o'clock to 12 o'clock from Monday to Thursday.

Schedule																								
All	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Mon.																								
Tue.																								
Wed.																								
Thu.																								
Fri.																								
Sat.																								
Sun.																								

 With schedule setup.

Once the recording mode is on, the video data recorded will be found and labelled as **2017/11/09**.




Click on **2017/11/09** to enter the next page where all files recorded on that date are enlisted.

2017/11/09			Del
Time	Video	Event Type	<input type="checkbox"/>
03:00:00	030000r	Record	<input type="checkbox"/>
04:00:00	040000r	Record	<input type="checkbox"/>
05:00:00	050000r	Record	<input type="checkbox"/>
06:00:00	060000r	Record	<input type="checkbox"/>
07:00:00	070000r	Record	<input type="checkbox"/>
08:00:00	080000r	Record	<input type="checkbox"/>
09:00:00	090000r	Record	<input type="checkbox"/>
10:00:00	100000r	Record	<input type="checkbox"/>
11:00:00	110000r	Record	<input type="checkbox"/>
12:00:00	120000r	Record	<input type="checkbox"/>

1 2

Files link daily.

Click on any video title to open Microsoft Media Player (supposedly already built-in in your PC) and play the video file. Key-in **admin** for both Username & Password to get permission to view the video.

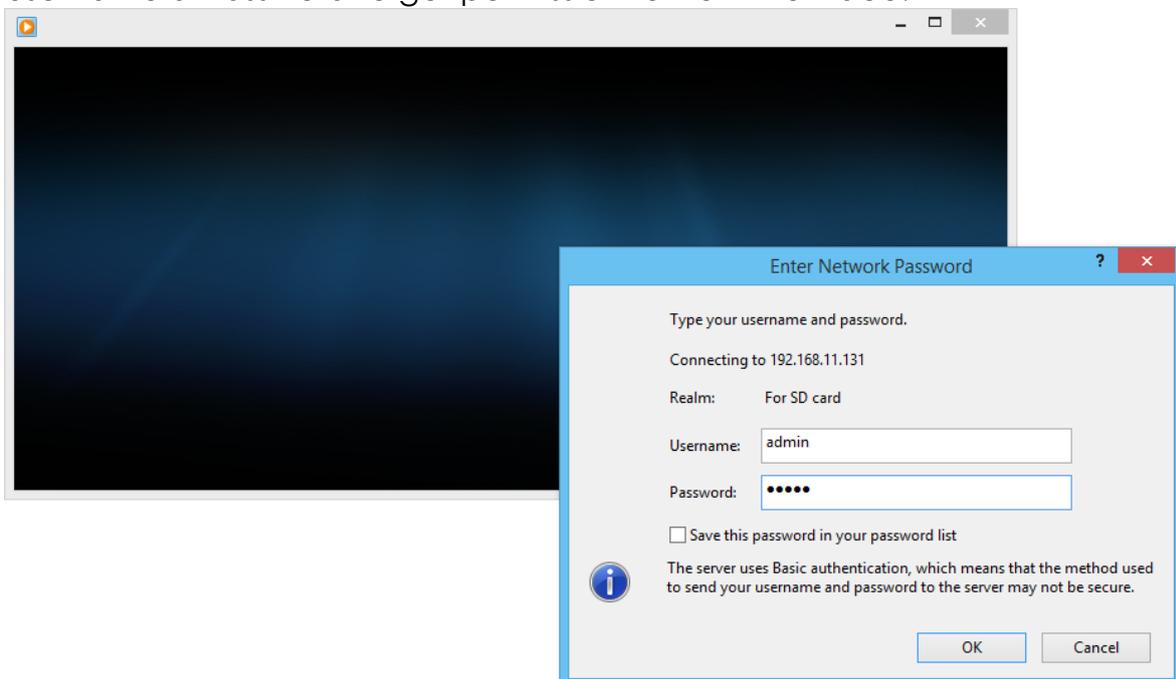

The number at the bottom indicates the distributive law of the current SD Card memory which is divided and assigned to different types of recording purposes. The left side shows how much memory is still available, and the right side shows how much the total memory is.




If the memory of the SD card is **over 128G**, **70%** of the memory will be used for scheduled recording, and **30%** will be used for event recording.

If the memory of the SD card is **below 128G**, **50%** of the memory will be used for scheduled recording, and **50%** will be used for event recording.


Click the  icon to delete any file with its checkbox checked under the Del category.

SD Management

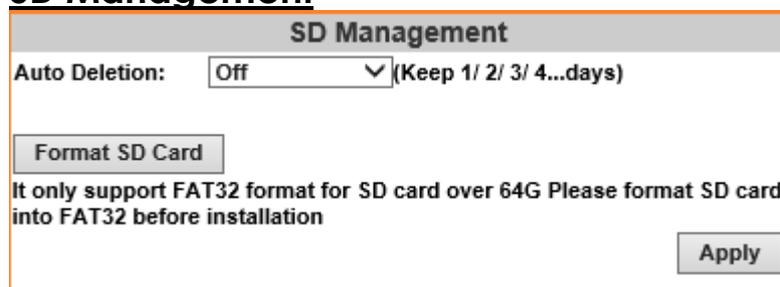


- **Auto Deletion:** Choosing “The 1st day” means the recording file will be kept for one day. Example: It is five o'clock now. Choose “The 1st day”. The files will be kept from five o'clock yesterday to five o'clock today. The oldest file will be deleted if the Micro SD card is full. **Note: The use of the SD card will slightly affect the operation of the IP Camera, such as affecting the frame rate of the video.**
- **Format SD Card:** Click the icon to process the SD Card formatting into FAT32 format. Be cautious that since it only supports FAT format for SD Card over 64G, please format SD Card into FAT32 before installation.

SD Card Files

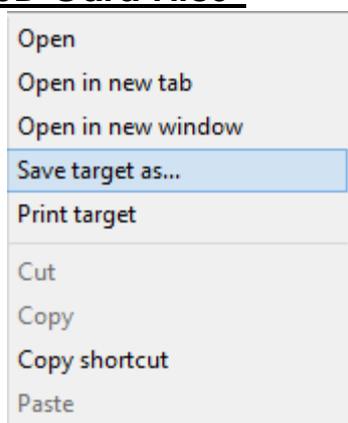

- **Downloading the Files:** For both **Playback** and **Record** mode, after entering a date data to see the **Video** and **Event Type**, right-click on a title under the **Video** list, and choose “**Save Target As...**” from its pop-up window to start downloading the file.
- **Linking the Files:** For both **Playback** and **Record** mode, find the **Files link daily.** link at the right corner of the bottom after entering a date data to see the **Video** and **Event Type**. Click on the link, a window will pop up.

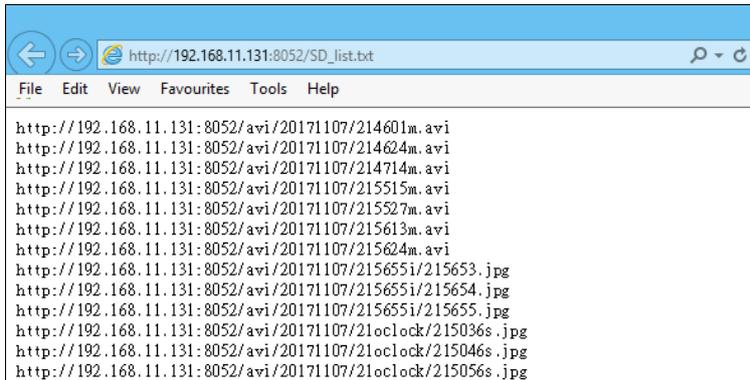

You may copy any of the protocol provided in the window and paste it on a web browser as a URL address to look at each file.


Copy to PC

You can insert the Micro SD card to the PC and read the files directly, or use FlashGet instead to download the files from the IP camera. (In this way you do not need to pull out the Micro SD card from the camera.) To use FlashGet for downloading image and video data from the Micro SD card, please follow the steps:


- i. Enter data list and right-click "Files link daily.", select "save target as..." then save the link list to PC.




- ii. Open FlashGet, select "File" → "Import" → "Import list", and find the link list file you just saved. The file name may be called "SD_list".

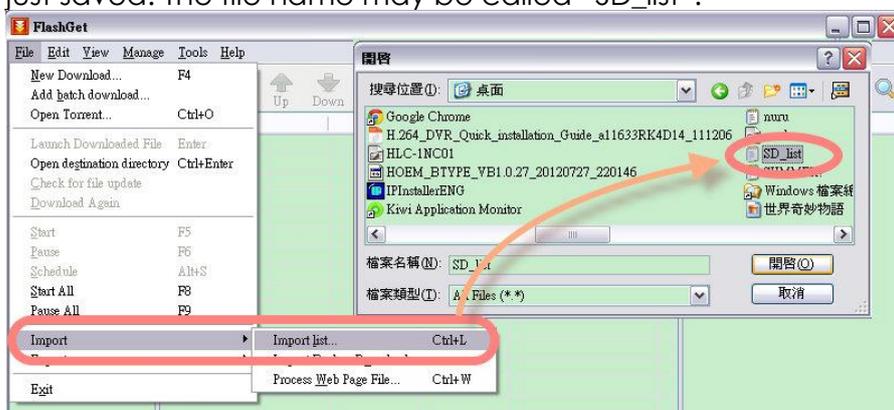

- iii. FlashGet will show you the link list, and you can tick the files you want to copy to your PC. Give the directory path in the new download window, and remember to enable "Login to Server": key in the IP Camera username and password.

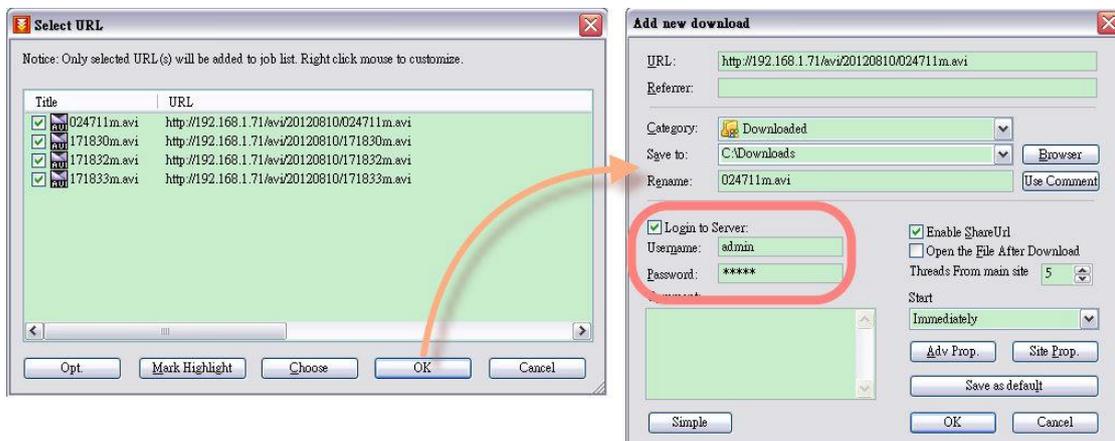


- iv. Click OK to start download.

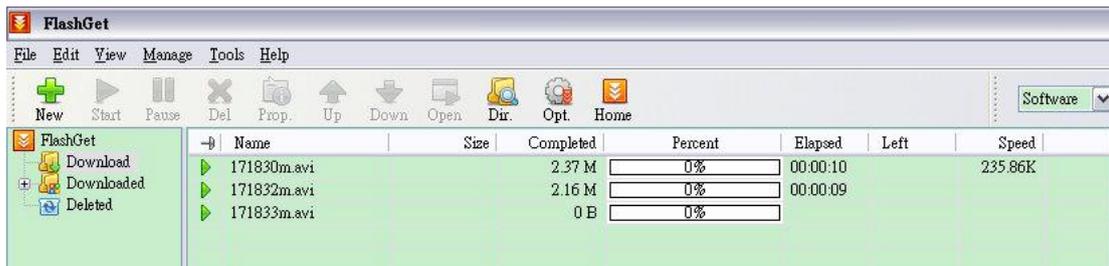

- FlashGet is free software that can be downloaded from [FlashGet](http://www.flashget.com/) official website. The example above is based on FlashGet ver.1.9.6.


NETWORK CONFIGURATION

Configuration I

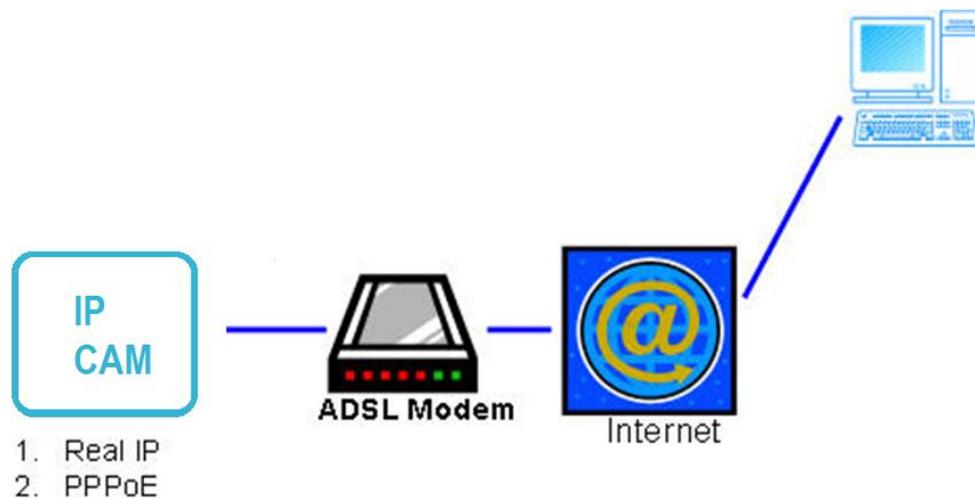

- Internet Access: ADSL or Cable Modem
- IP address: One real IP or one dynamic IP
- Only the IP Camera is connected to the internet
- For fixed real IP, set up the IP into IP Camera. For dynamic IP, start PPPoE.


Configuration II

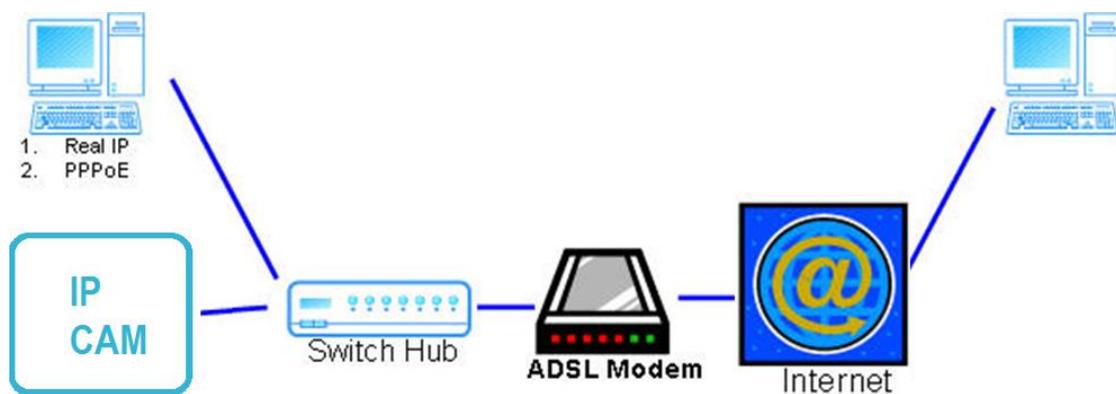

- Internet Access: ADSL or Cable Modem

- IP address: More than one real IP or one dynamic IP
- IP Camera and PC connect to the internet
- Device needed: Switch Hub.
- For fixed real IP, set up the IP into IP Camera and PC. For dynamic IP, start PPPoE.

Configuration III

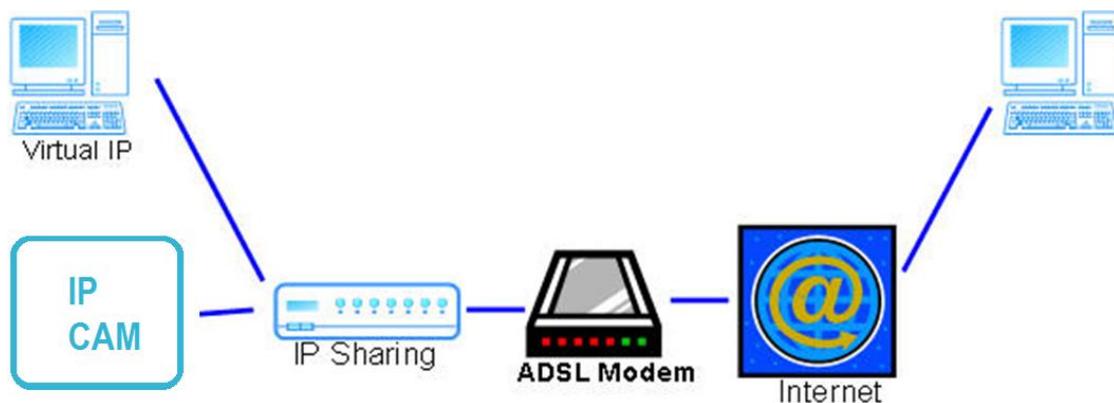

- Internet Access: ADSL or Cable Modem
- IP address: one real IP or one dynamic IP
- IP Camera and PC connect to the internet
- Device needed: IP sharing
- Use virtual IP, set up port forwarding in IP sharing


FACTORY DEFAULT

If you forget your password, please follow the steps below to restore its default settings.

Bullet & Vandal Dome

Remove the power and Ethernet cable.

Join **GND** & **Default** ports inside the terminal block with an electronic wire.

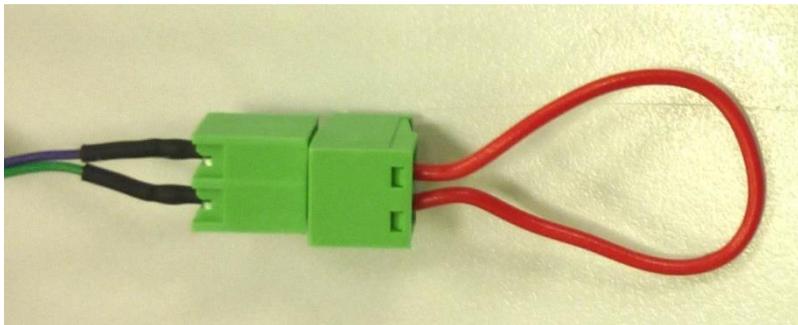


Connect the power for the camera to reboot for around 30 seconds.
Remove the wire in the terminal block after rebooting completes.

Dome

Remove the power and Ethernet cable.


Open the dome and press & hold the button as shown in the picture below.

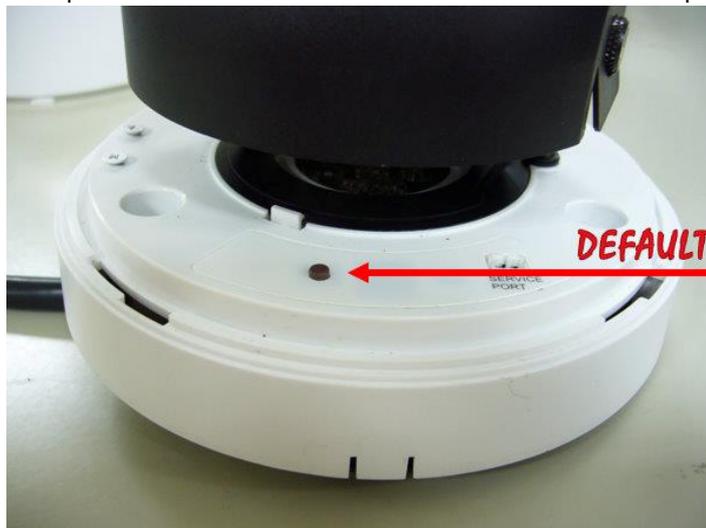

Connect the power back to the camera.
Do not release the button during the system booting.
It will take around 30 seconds to boot the camera.
Release the button when the camera finishes booting.

Box


Remove the power adapter and Ethernet cable from the camera.
Press & hold the **Default** button as circled in the picture. (Displayed in red)

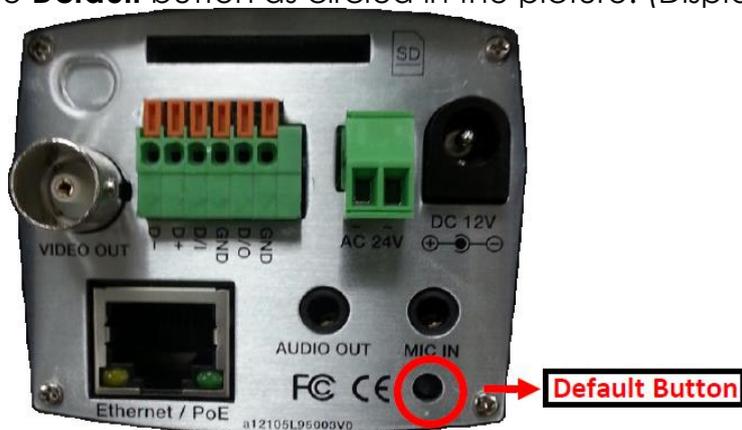

Connect back the power to the camera.
It will take around 30 seconds for the camera to boot.
Release the Default button.
Plug-in the Ethernet cable after the camera finishes rebooting.

Connect to Internet

- Open the internet browser using default IP (<http://192.168.1.200>)
- Input **admin** for both user name and password to log in.

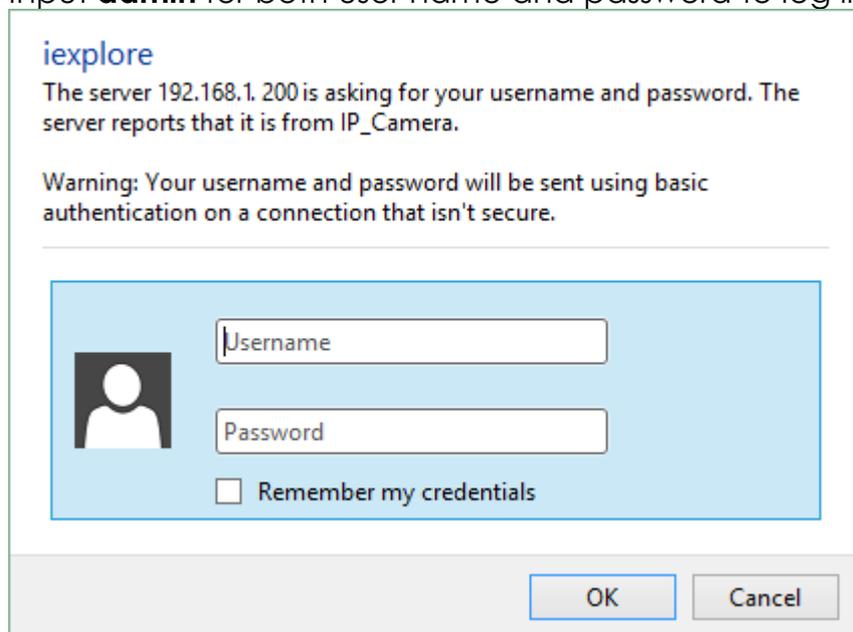The screenshot shows a web browser window displaying a login page. The page title is 'iexplore'. The main text reads: 'The server 192.168.1.200 is asking for your username and password. The server reports that it is from IP_Camera.' Below this is a warning: 'Warning: Your username and password will be sent using basic authentication on a connection that isn't secure.' The login form has a light blue background and contains a 'Username' field, a 'Password' field, and a checkbox labeled 'Remember my credentials'. At the bottom of the form are 'OK' and 'Cancel' buttons.

- ✧ You may also perform [Factory Default](#) through [System Update](#) when you operate the camera by remote. Please refer to [System](#) chapter for more instructions.

UNIVERSAL PASSWORD

If you forgot the password of your IP camera, you can reset the camera to factory default, or follow the procedure below to generate a universal password.

Note: Universal password will be valid only when you enable the function in [User Management](#).

First, you need to know the IP address and MAC address of your IP camera. You can use [IP Scanner](#) to scan the LAN, and see the IP address and MAC address on the side column.

Device Lists

Server Name	IP Address
IP_Camera	192.168.070.064
CHBA-16DE	192.168.021.069
79KQ-1F	192.168.001.072
S7CD_Meeting Room	192.168.099.101
S3CDH_Meeting Room	192.168.070.066
79HQ-1F	192.168.070.070
HLC-7BJDS	192.168.099.100
P2P Demo Site	192.168.040.173
IP_Camera	192.168.011.236
IP_Camera	192.168.001.200
IP_Camera	192.168.011.170
NVR	192.168.070.062
NVR-16	192.168.200.220
IP_Camera	192.168.066.220
IP_Camera	192.168.066.235
NVR-25	192.168.200.210
IP_Camera	192.168.040.112
2222	192.168.011.083

SCAN AND FIND THE CAMERA

Search Device

To Change Device Name, IP address, and Gateway:

1. Select the device on the left side.
2. Change network parameter on the right side.
3. Press Submit button.
4. Press Search Device to re-search again.
5. Double click the device to open it.

Submit

Exit

Static DHCP


IP ADDRESS

Name	IP_Camera
IP	192 168 1 200
Netmask	255 255 255 0
Gateway	192 168 1 254
DNS 1	168 95 1 1
DNS 2	168 95 192 1
Port1	80
MAC	00:0F:0D:11:22:33

MAC

Or else, if you already know the IP address of camera: Open the web browser, key in **http:// (IP address) /GetIPMAC.cgi** and press enter.


The IP address and MAC address will be displayed on browser.

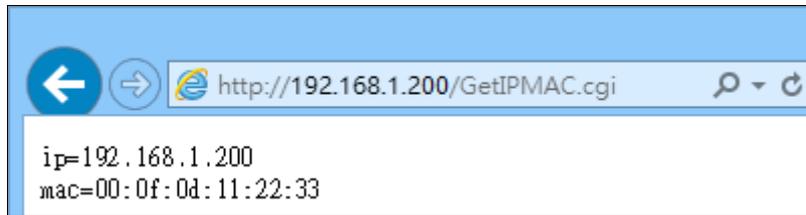

Locate the .html file named [Universal Password V1.1](#) in the [Universal Password](#) from the [Applications](#) folder in CD-ROM. Open it with a web browser.




The camera IP address and MAC address will be displayed automatically in both **IP Address** and **MAC** columns.

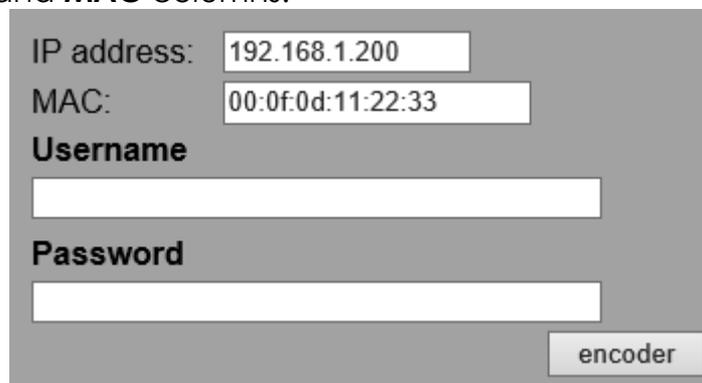


After clicking on **encoder**, a set of username and password will appear.

The universal username and password are generated from the IP address and MAC address you key-in, so if you change the camera IP address the universal password changes, too.

Use the generated username & password to log in the camera account.







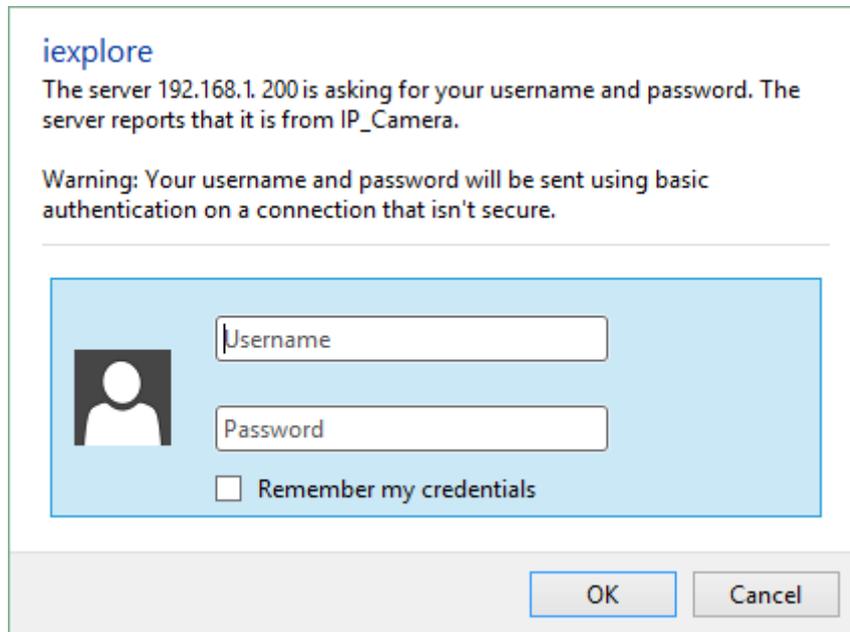


Now you can login as administrator. Turn to [User Management](#) page. The use of universal password does not affect the previous user setting, so the administrator account password does not change until you edit it. Please click **Edit** to give a new administrator password.







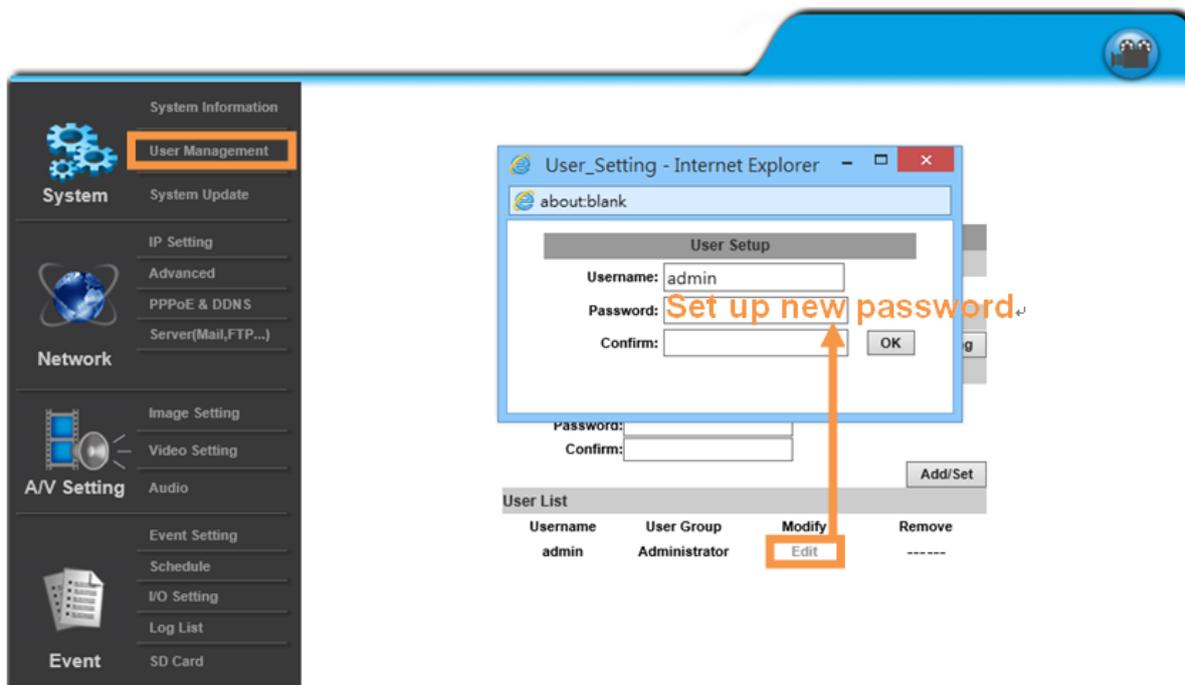


PACKAGE CONTENTS







Bullet

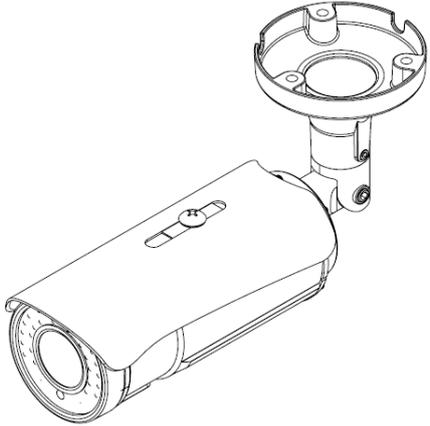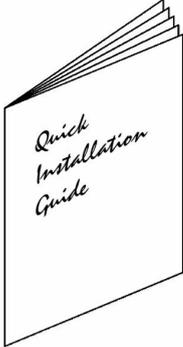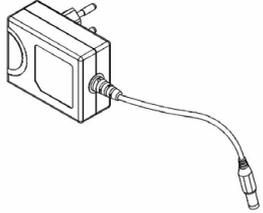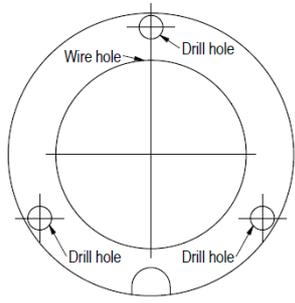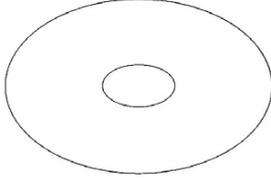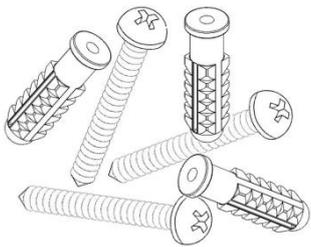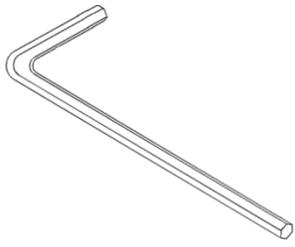IP Camera		Quick Installation Guide
		
Adaptor	Hole Pattern Sticker	CD
		
Screws Pack		Hex Wrench
		








Vandal Dome

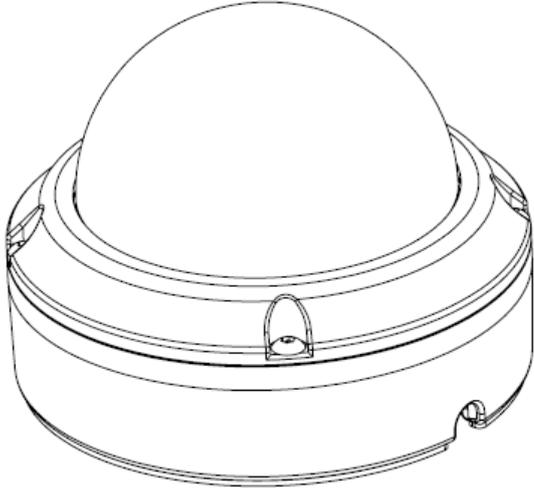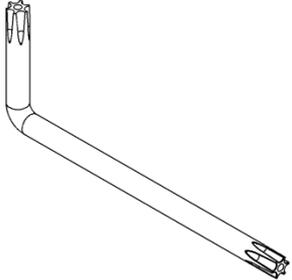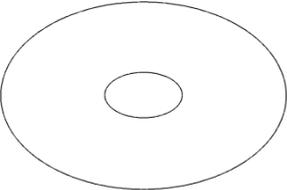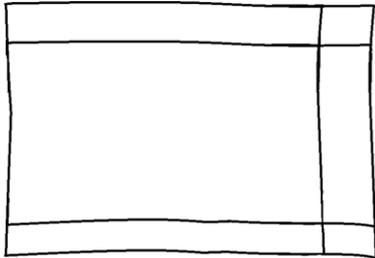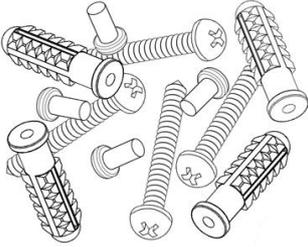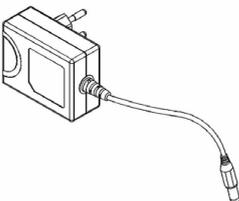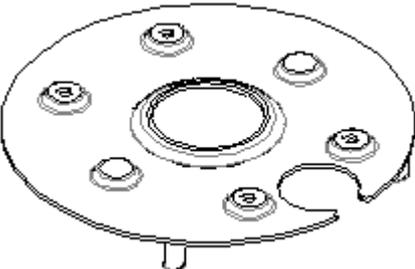IP Camera		Quick Installation Guide
		
Star Wrench	CD	Silica Gel Package
		
Screws Pack	Adaptor	Mount Plate
		

Dome
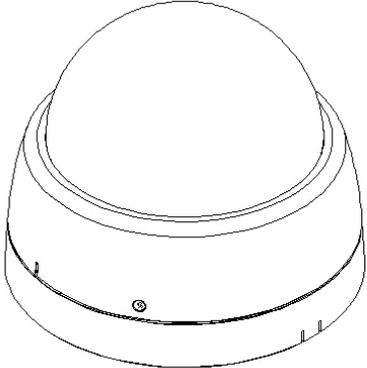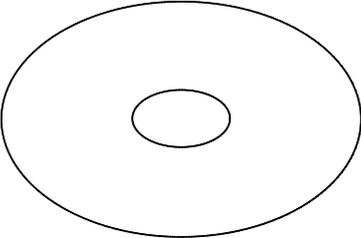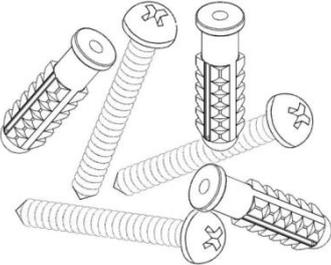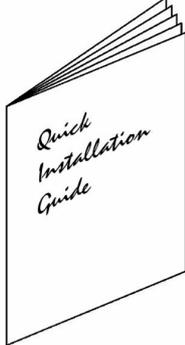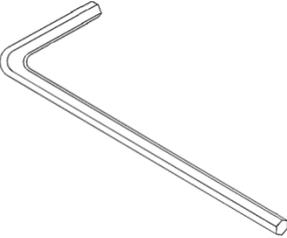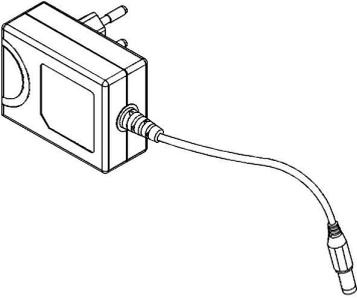
<p>IP Camera</p> 	<p>CD</p> 
<p>Screws Pack</p> 	<p>Quick Installation Guide</p> 
<p>Hex Wrench</p> 	<p>Adaptor</p> 

Box

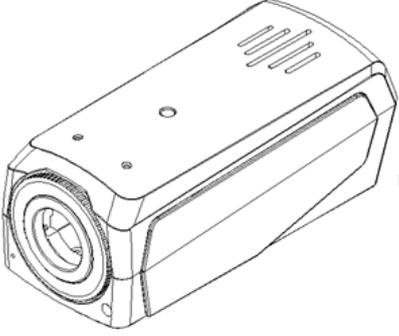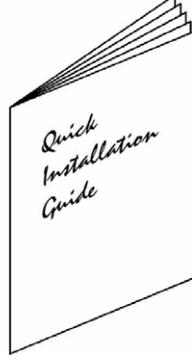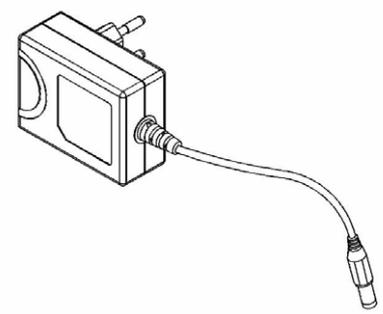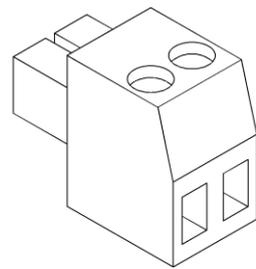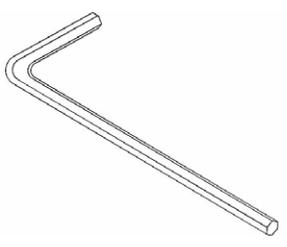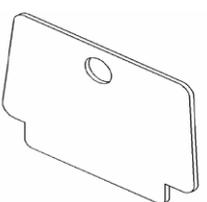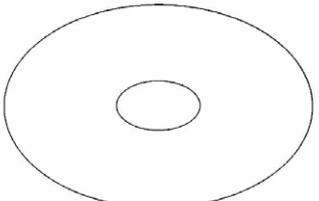IP Camera		Quick Installation Guide	
			
Adaptor		2P Terminal Block	
			
Hex Wrench	Plates for turning to CS ring	CD	
			

MICRO SD CARD COMPATIBILITY (OPTIONAL)

The following are the recommended Micro SD Cards:

Transcend	SDHC class4 16GB
	SD class4 16GB
	SDHC class4 32GB
	SD class4 32GB
	SD class6 4GB
	SDHC class6 4GB
	SD class6 8GB
	SDHC class6 8GB
	SD class6 16GB
	SDHC class6 16GB
	SDHC class10 4GB
	SDHC class10 8GB
	SDHC class10 16GB
	SDHC class 10 Max. 64GB
SanDisk	SDHC class4 8GB
	SDHC class4 16GB
	SDHC class4 32GB
	SDHC class10 Max. 128GB