



User Manual

OUTDOOR BULLET IP CAMERA

V1.0_20190923

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

DO NOT INSERT ANY METALLIC OBJECT THROUGH VENTILATION GRILLS.

CAUTION

	<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">RISK OF ELECTRIC SHOCK DO NOT OPEN</p>	
<p style="text-align: center;">CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		

COPYRIGHT

THE TRADEMARKS MENTIONED IN THE MANUAL ARE LEGALLY REGISTERED TO THEIR RESPECTIVE COMPANIES.



Table of Contents

1. PREFACE	1	PPPoE & DDNS	45
2. PRODUCT SPECIFICATIONS	1	PPPoE Setting	46
3. PRODUCT INSTALLATION	5	Send mail after PPPoE dialed	46
I. Monitor Settings	5	DDNS Setting	46
II. Hardware Installation	6	State	46
Connector Instruction	6	Server Settings	48
Wireless Antenna (Optional)	7	Mail Setting	49
PoE (Power Over Ethernet)	7	FTP Setting	49
III. IP Assignment	8	Samba (Network Storage)	50
IV. Install Active Control	12	Google Drive Setting	50
For users using IE 6.0 or above	12	Dropbox Setting	54
Another Method	14	Wireless Setting	55
For Non-IE Web Browser Users	15	Status of Networks in Wireless Setting	55
4. LIVE VIDEO	19	Connecting to an ad-hoc Wi-Fi network	56
I. Full Screen Mode	20	WEP Setting	60
II. Live Video Panel	20	WPA-PSK/ WPA2-PSK Setting	60
III. Submenu	21	III. A/V Settings	62
5. CAMERA CONFIGURATION	23	Image Setting	63
I. System	23	Camera	63
System Information	24	Privacy Mask	63
Server Information	24	Image Setting	64
OSD Setting	25	Video Setting	69
Time Setting	26	Video System	69
EasyLink (Optional)	26	Streaming Settings	72
User Management	28	Snapshot Setting	76
Anonymous User Login	28	3GPP Streaming Setting	76
Universal Password	28	Audio	77
Add User	28	IP Camera to PC	77
User List	29	Adjust Volume	77
Default Account	29	Sound Detection	77
System Update	30	IV. Event List	78
Firmware Upgrade	30	Event Setting	79
Reboot System	30	Motion Detection	79
Factory Default	30	Tampering Detection	80
Setting Management	30	Record File	82
II. Network	31	Record Time Setting	82
IP Settings	32	Network Dis-connected	83
IP Assignment	32	Network IP Check	83
IPv6 Assignment	32	Schedule	84
Port Assignment	33	Schedule	84
UPnP	33	Snapshot & Record	85
RTSP Setting	35	I/O Setting	86
Multicast Setting	36	Input Setting	86
ONVIF	36	Output Setting	87
Bonjour	37	Log List	88
LLTD	37	SD Card	89
Advanced	38	Playback	89
Https (Hypertext Transfer Protocol Secure)	38	Record	91
SNMP	41	SD Management	93
Access List	43	SD Card Files	93
QoS/DSCP	43	Copy to PC	94
IEEE 802.1x	44	6. NETWORK CONFIGURATION	96
		Configuration I	96
		Configuration II	96
		Configuration III	97



7. I/O CONFIGURATION	98	8. FACTORY DEFAULT	101
I. I/O Connection	98	9. UNIVERSAL PASSWORD	102
II. I/O Setup.....	99	10.PACKAGE CONTENTS	105
Input Setting	99	11.SD CARD COMPATIBILITY (OPTIONAL)	106
Output Setting	99		

1. Preface

This is a **1 / 2.8" Megapixel CMOS Starvis Sensor** IP camera with a built-in web server. The user can view real-time video via IE browser. It supports **H.264+**, **H.264** and **M-JPEG** video compression, providing smooth and high video quality. The video can be stored in Micro SD card and playback remotely.

With a user friendly interface, it is an easy-to-use IP camera for security applications.

2. Product Specifications

Main Features:

- 2 Megapixel Box IP Camera
- H.264+/ H.264/ M-JPEG Compression
- Bandwidth Savings up to 50%
- ROI Function
- Advanced Smart Stream
- Digital Noise Reduction
- Starvis Sensor
- True Wide Dynamic Range
- Day & Night Switch Time Control Manually
- IR-Cut Filter
- Power over Ethernet Available
- Video Output
- SD Card Backup (Optional)
- Support iPhone/iPad/Android
- Triple Streaming
- SDK for Software Integration
- Free Bundle 36 ch Recording Software

Hardware	
CPU	Multimedia SoC
RAM	256MB
Flash	128MB
Image Sensor	1/2.8" Sony Exmor-R CMOS Sensor
Lens Changeable	Yes, CS Mount (suggest 5-50mm)
Sensitivity	Color : 0.005 Lux (AGC ON) B / W : 0.001 Lux (AGC ON)
Support DC IRIS	Yes
Wide Dynamic Range	120dB
ICR	Mechanism IR cut Filter
I/O	1 DI / 1 DO
Video Output	Yes
RS-485	Yes
Audio	G.711(64K) and G.726(32K,24K) audio compression Input : Microphone built-in & 3.5 Ø stereo jack (auto switch) Output: 3.5mm phone jack, Support 2-way.
Power over Ethernet	Yes
Power Consumption	DC 12V : 1.84W PoE Max : 2.85W
Operating Temperature	-20°C ~ 70°C
True Wide Dynamic Range	120dB
S/N Ratio	65dB
Dimensions	65mm (W) x 58mm (H) x 132mm (L)
Weight	450 g
Network	
Ethernet	10/ 100 Base-T
Network Protocol	IPv6, IPv4, HTTP, HTTPS, SNMP, SSL, TLS , DNS , ICMP, IGMP, ARP, SNTP, QoS/DSCP, CoS, IEEE 802.1X,

	RTSP/RTP/RTCP, TCP/IP, UDP, SMTP, FTP, PPPoE, DHCP, DDNS, NTP, UPnP, SAMBA, Bonjour, Google drive, Drop box, Onvif profile S
Wireless (Optional)	
	Wireless 802.11b/g/n
	Security WEP,WPA-PSK,WPA2-PSK
System	
Video Resolution	1920x1080@30fps, 1280x720@30fps, 640x360@30fps
Video Adjust	Brightness, Contrast, Hue, Saturation, Sharpness, AGC, Night Mode, WDR, Flip, Mirror, Noise Reduction, Day&Night Adjustable
Features	ROI, Smart Stream, Advanced Smart Stream, Motion Detection, Privacy Mask, Anti Fog, Tampering Detection, Corridor Mode, Push Video , P2P(Optional)
Triple Streaming	Yes
Image Snapshot	Yes
Full Screen Monitoring	Yes
Privacy Mask	Yes, 3 different areas
Compression Format	H.264+/ H.264/ M-JPEG
Video Bitrates Adjust	CBR, VBR
Motion Detection	Yes, 3 different areas
Triggered Action	Mail, FTP, Save to SD card, DO, SAMBA, Dropbox , Google Drive
Pre/ Post Alarm	Yes, configurable
Security	Password protection, IP address filtering, HTTPS encrypted data transmission, 802.1X port-based authentication for network protection, QoS/DSCP
Firmware Upgrade	HTTP mode, can be upgraded remotely
Simultaneous Connection	Up to 10
SD Card Management (Optional)	
Recording Trigger	Motion Detection, IP check, Network break down

	(wire only), Schedule, DI
Video Format	AVI, JPEG
Video Playback	Yes
Delete Files	Yes
Remote Browsing Requirement	
OS	Windows 10 , Microsoft IE 11.0 or above
Hardware Suggested	Intel Dual Core 2.8G, RAM, 4GB, Graphic card: 128MB
Mobile Support	iOS 8 or above, Android 4.4.2 or above.

***SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTIFICATION.**

3. Product Installation


1. Monitor Settings

Caution: This setting only applies to Windows 7 system users.


- a. Right-Click on the desktop. Select **Properties**



- b. Change color quality to highest (**32bit**).

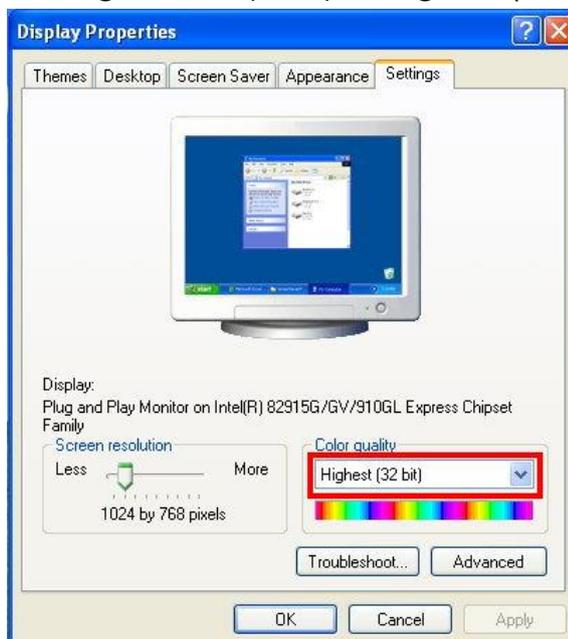


II. Hardware Installation

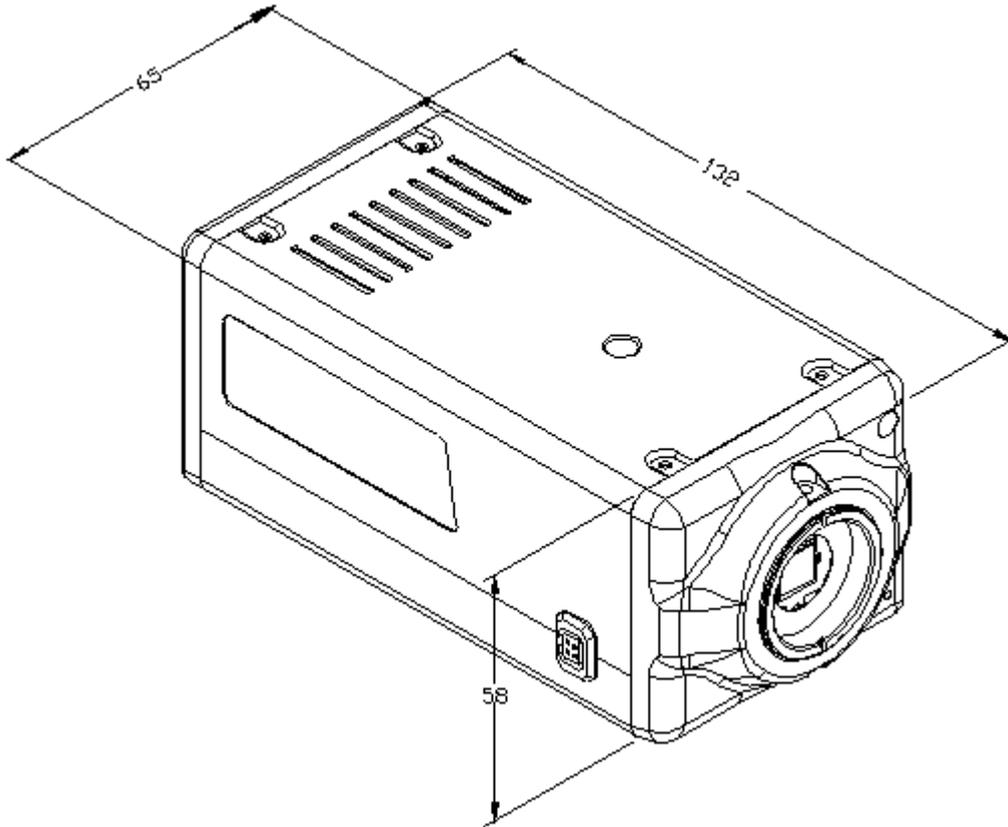

Connector Instruction

Set up configurations based on the network environment. For I/O setting, please refer to [I/O Configuration](#) chapter for more.

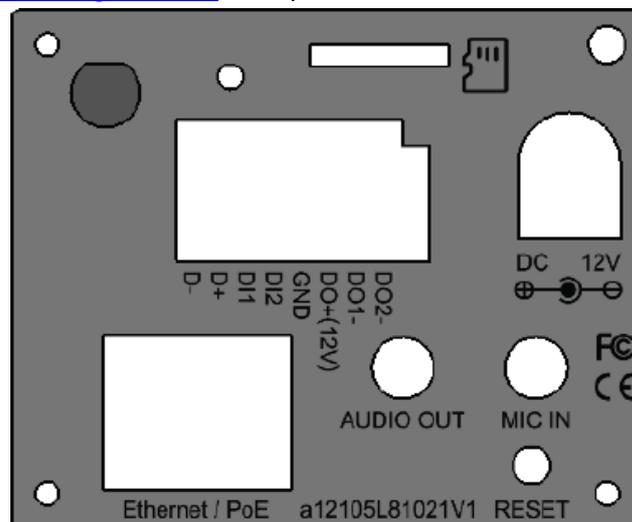

Wireless Antenna (Optional)

(Pictures based on another camera model)




- Plug the Antenna into the connector while holding the Antenna bar.
- Turn the lock nut to the right until it is totally locked.
- Do not bend or try to straight the antenna bar.

PoE (Power Over Ethernet)


802.3af, 15.4W PoE Switch is recommended (Optional)

Power over Ethernet (PoE) is a technology that integrates power into a standard LAN infrastructure. It allows providing power to a network device, such as an IP phone or a network camera, using the same cable for network connection. It eliminates the need for power outlets at the camera locations and enables easier application of uninterruptible power supplies (UPS) to ensure 24 hours a day, 7 days a week operation.

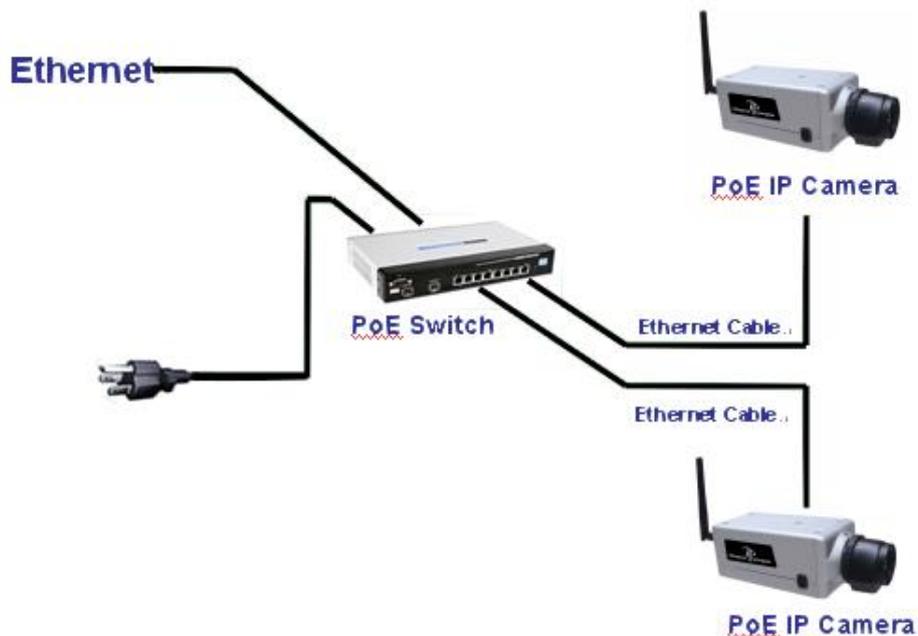


III. IP Assignment

- i. Open the software [IP Scanner](#) to assign the IP address of the IP Camera. Find it in [Applications](#) folder from the CD attached of the product package.
- ii. Execute the English version of **IP Scanner**: [IPScannerENG](#)
- iii. There are 3 kinds of IP configuration.
 - Fixed IP (Public IP or Virtual IP)
 - DHCP (Dynamic IP)
 - Dial-up (PPPoE)
- iv. For Windows XP SP2 or above, a Windows Security Alert may pop up. Choose the network type based on your surveillance environment, and click on **Allow access**.

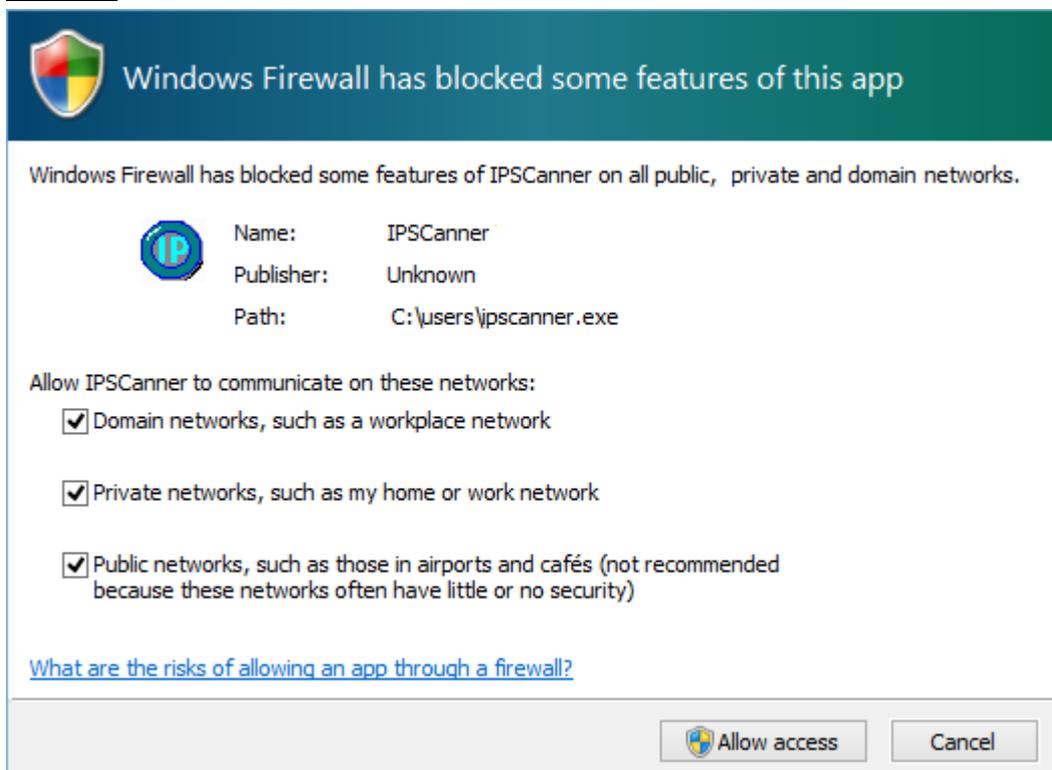

- v. **IP Scanner** will search for all the IP Cameras connected on the LAN. The user can click **Search IPCam** to search again.

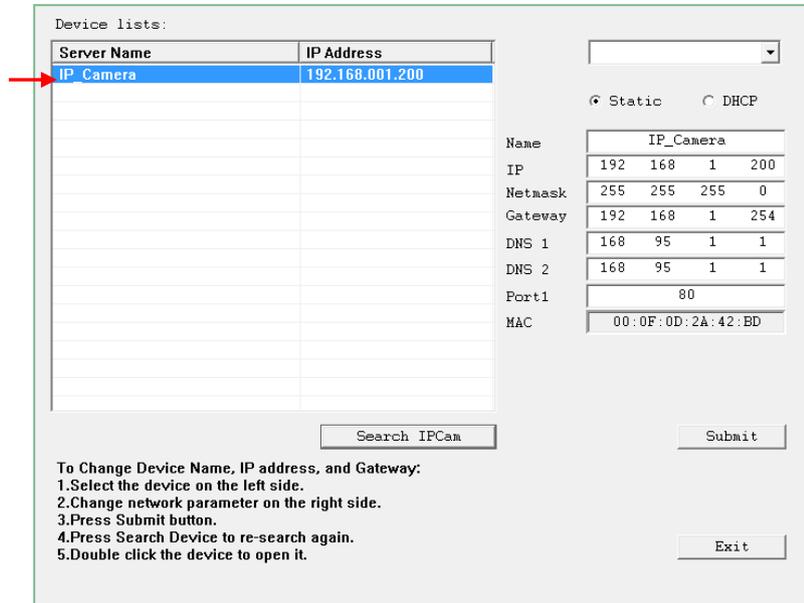

Device lists:

Server Name	IP Address
IP Camera	192.168.001.200

Static DHCP

Name: IP_Camera

IP: 192 168 1 200

Netmask: 255 255 255 0

Gateway: 192 168 1 254

DNS 1: 168 95 1 1

DNS 2: 168 95 1 1

Port1: 80


MAC: 00:0F:0D:2A:42:BD

Search IPCam Submit

To Change Device Name, IP address, and Gateway:
 1. Select the device on the left side.
 2. Change network parameter on the right side.
 3. Press Submit button.
 4. Press Search Device to re-search again.
 5. Double click the device to open it.

Exit

- vi. Click one of the IP Cameras listed on the left side. The network configuration of this IP camera will be shown on the right side once you highlight the device with your mouse. You can change the **name** of the IP Camera to your preference (e.g.: Office, warehouse). Change the parameters and click **Submit**.

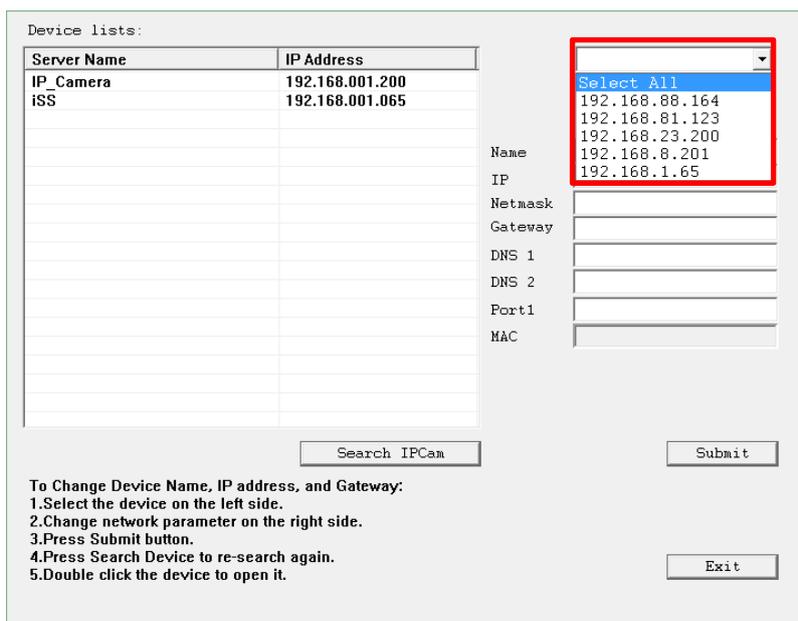

Device lists:

Server Name	IP Address
IP Camera	192.168.001.200
iSS	192.168.001.065

Name:

IP:

Netmask:

Gateway:

DNS 1:

DNS 2:

Port1:

MAC:

Search IPCam Submit

To Change Device Name, IP address, and Gateway:
 1. Select the device on the left side.
 2. Change network parameter on the right side.
 3. Press Submit button.
 4. Press Search Device to re-search again.
 5. Double click the device to open it.

Exit

You can select different network cards that you are currently connected to from the drop-down menu at the top right corner. You can also select the online device from a specific network card in **Device lists**, or choose **Select All** to include all network card devices in **Device lists**.

- vii. Please make sure the subnet of the PC IP address and the IP Camera IP address are the same.

The same Subnet

IP Camera IP address: 192.168.1.200

PC IP address: 192.168.1.100

Different Subnets


IP Camera IP address: 192.168.2.200

PC IP address: 192.168.1.100

To Change the PC IP address

Control Panel → Network Connections → Local Area Connection Properties → Internet Protocol (TCP/IP) → Properties

Make sure your IP Camera and PC are in the same Subnet. If not, change the IP Camera subnet or the PC IP subnet accordingly below.

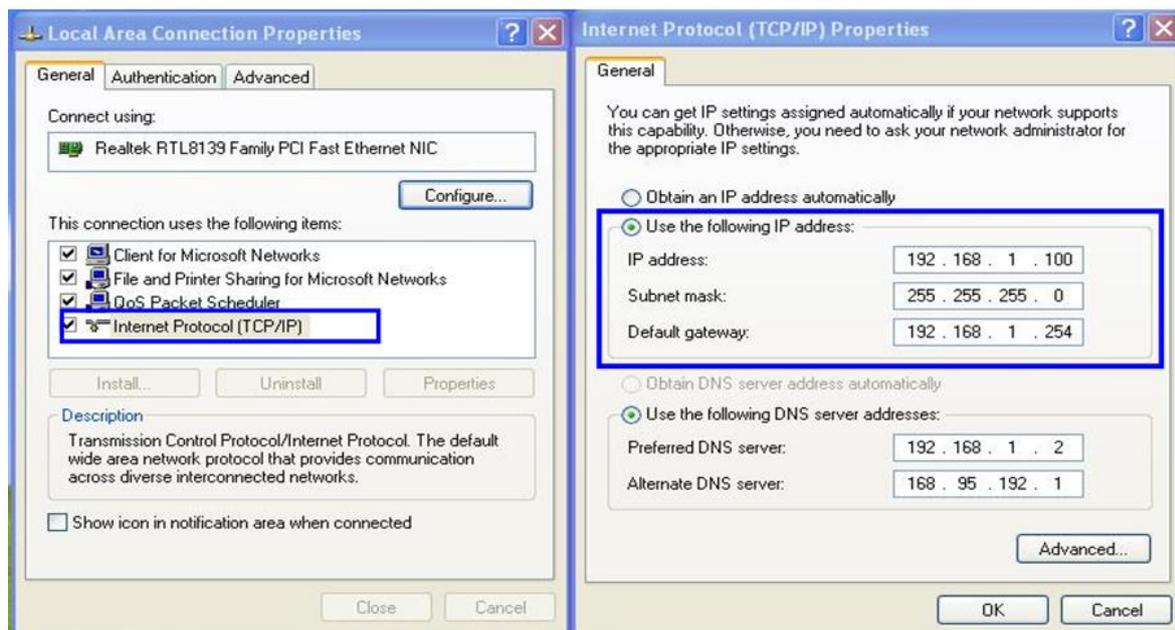


IV. Install Active Control

For users using IE 6.0 or above

When viewing the camera video for the first time via IE, the browser will ask you to install the **ActiveX** component.

Choose '**Allow**'

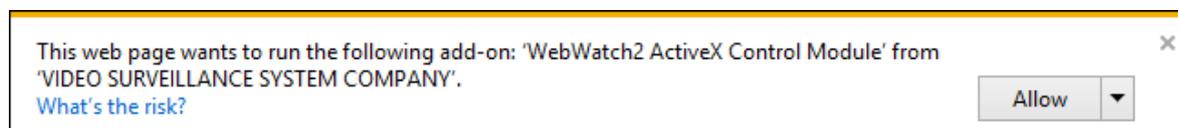

The ActiveX component should then be completed and user will be able to view the live video screen.


If the installation fails, please check the security settings in the IE browser.

Follow the steps below:


- 1) Go to **Start-Up Menu**  on the lower left corner of the **Windows**
- 2) Select **Control Panel** 
- 3) Double-click on  **Internet Options**.
- 4) You will then enter the page of **Internet Properties** settings.
- 5) Starting from **Internet Properties**, proceeding steps as below:

- Security → Custom Level → Security Settings → Download unsigned ActiveX controls → Enable or Prompt (recommended).
- Security → Custom Level → Security Settings → Initialize and script ActiveX controls not marked as safe → Enable or Prompt (recommended).


i

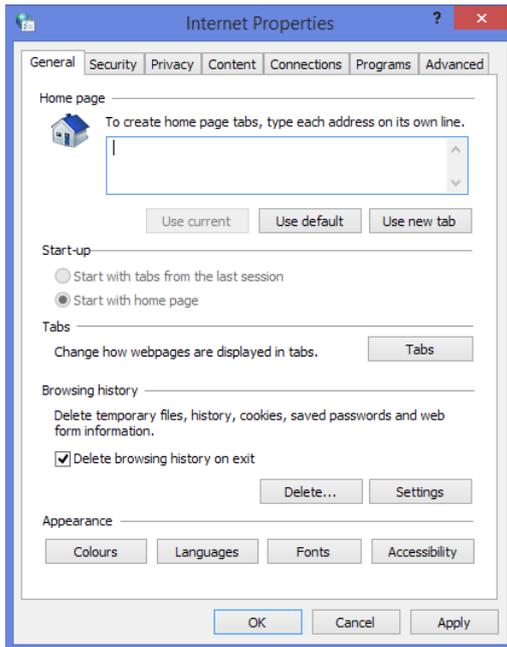


ii

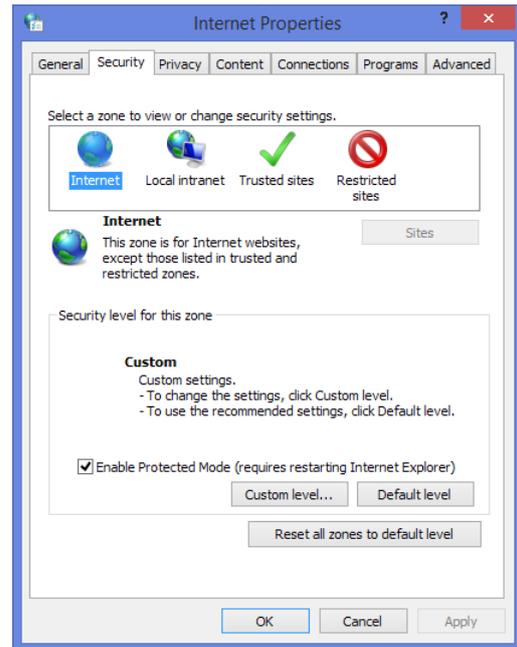

iii

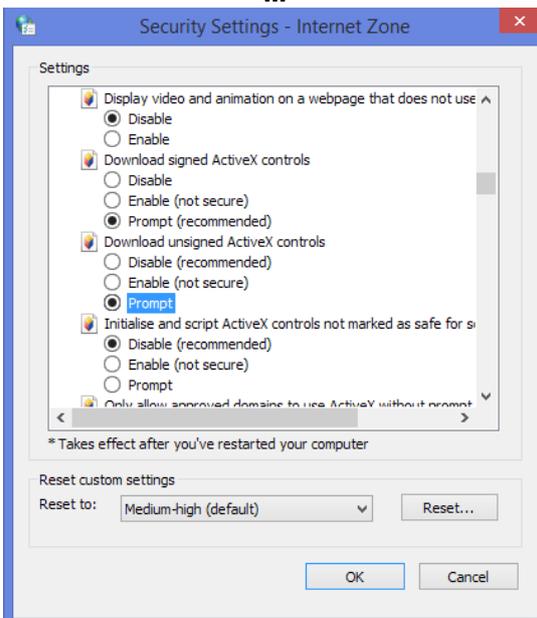


vi

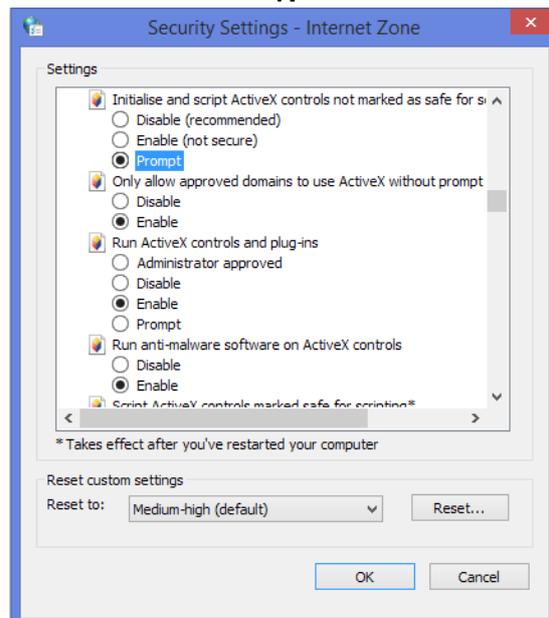


v

When popup the following dialogue box, click **Yes**.

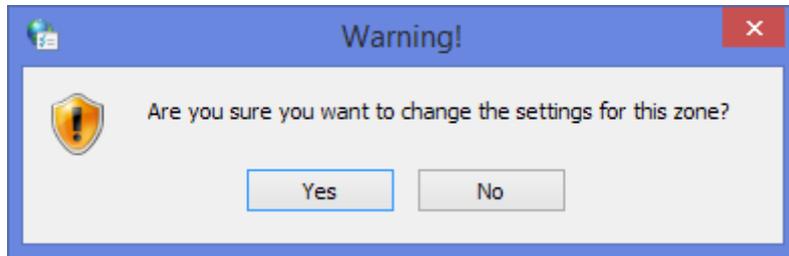

Another Method

Go to: IE→Tools → Internet Options... → Security Tab → Trusted sites → Add the IP address and click **OK**.

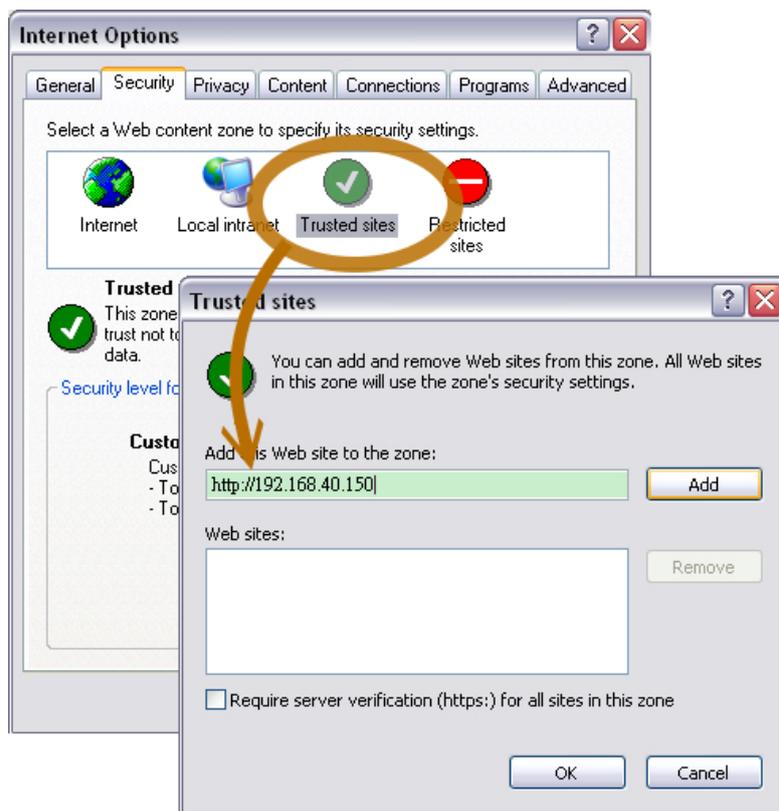


In the site list you can key in one single IP address or a LAN address. For example, if you add **192.168.21.***, all the IP address under **21.*** on the LAN will be regarded as trusted sites.


For Non-IE Web Browser Users

If you use Firefox or Google chrome to access the IP camera but fails to watch the live video, please follow the steps to install necessary tools: (The following pictures are based on chrome.)


- i. You may see the prompt message as the picture below. Click the **a** link: **Firstly, please install Microsoft Visual C++ 2010 Redistributable Package (x86).**

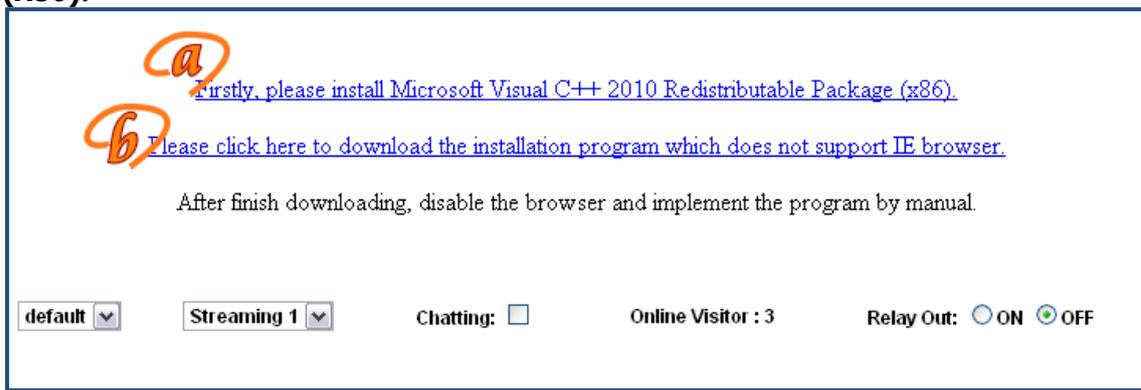

The link will conduct you to the Microsoft official site where you can download the tools. Please select the language and click **download**.

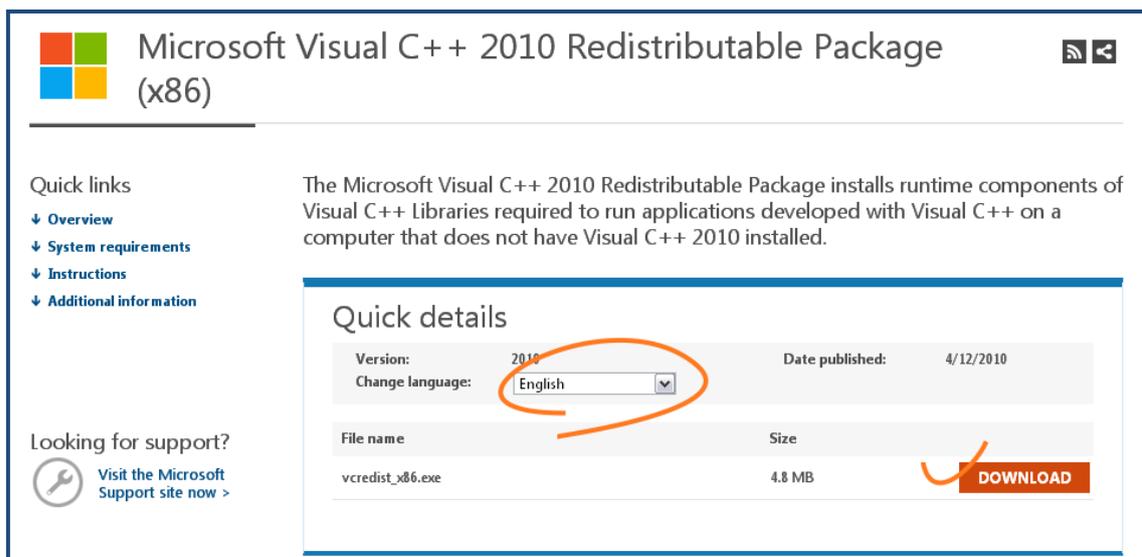


Tick the first and the third file in the pop-up window as the picture below.

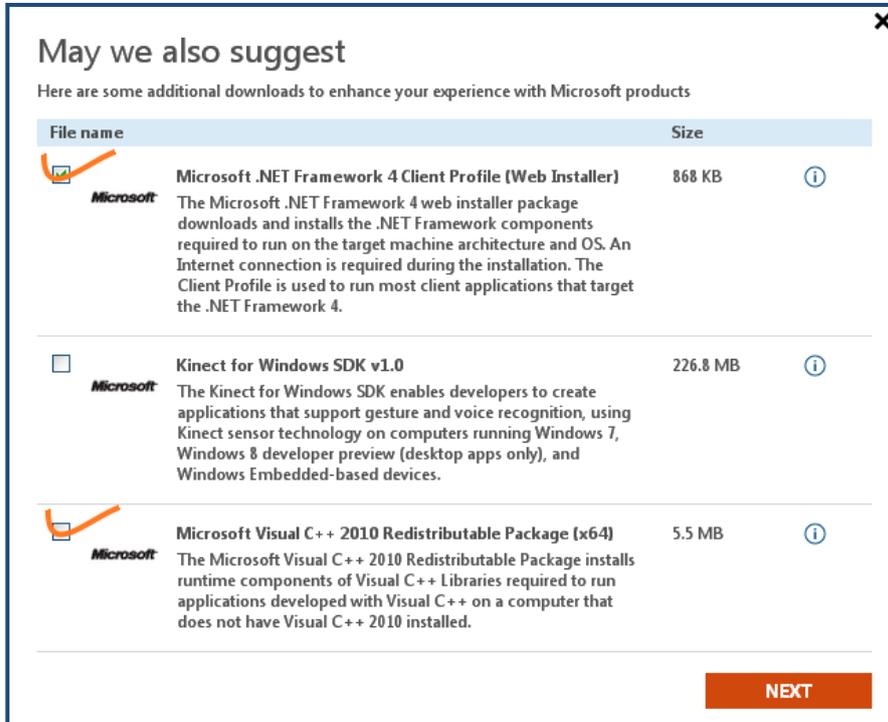


Click **Next** to download both **Microsoft .NET Framework 4 Client Profile (Web Installer)** and **Microsoft Visual C++ 2010 Redistributable Package (x64)**.

After finishing downloading, execute the two files respectively to install them. The windows may ask you to reboot the PC when the installation is finished.

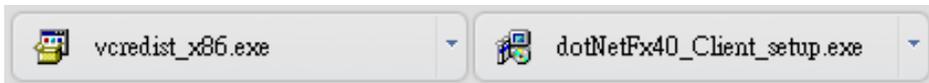


- ii. Then, click the second link **Please click here to download the installation program which does not support IE browser** to download Setup ActiveX.

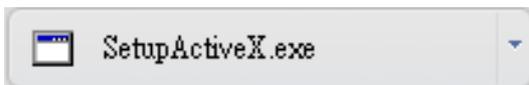


After finishing downloading, execute the files to install **ActiveX**. Then restart the browser.

- iii. If you execute the steps above but still cannot see live video normally, please try the following solution:

Search for the file **np_hoem_x.dll** in your system disk. For Windows XP users, please go to **Start** → **Search** → Search for **All files and folders** and key-in **np_hoem_x.dll**. For Windows 7 users, please use the search bar on the top-right of the Windows Explorer.

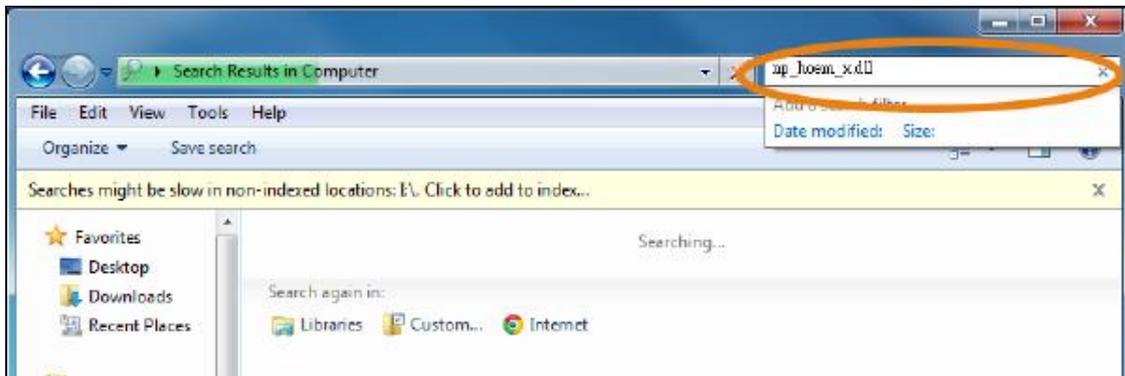

Delete all the files named **np_hoem_x.dll**. They're the **ActiveX** control tools installed in your computer, but the old version of **ActiveX** might not be compatible with the new version of the browser. Therefore, they need to be deleted in order to install the latest **ActiveX** control.

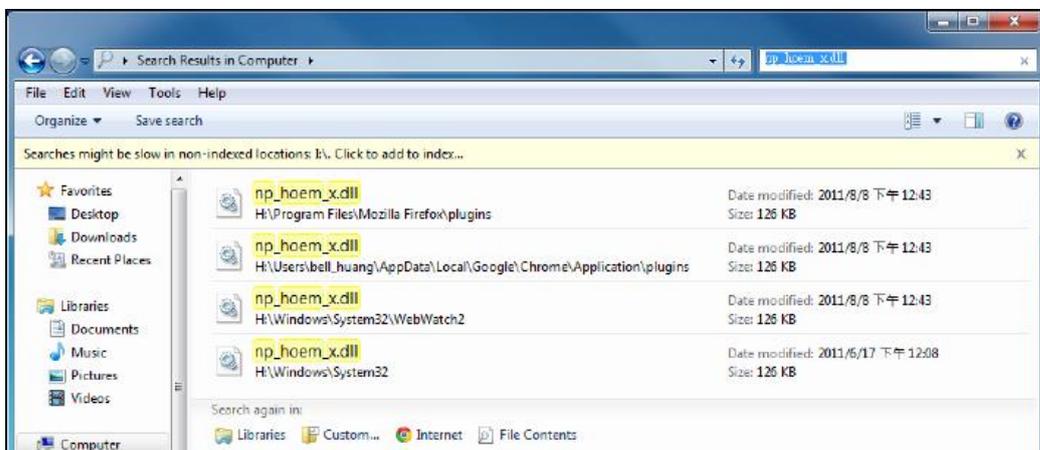

Start your web browser, and repeat the **step i: Download the installation program which does not support IE browser** to download and install **ActiveX**.

a [Firstly, please install Microsoft Visual C++ 2010 Redistributable Package \(x86\).](#)


b [Please click here to download the installation program which does not support IE browser.](#)

After finish downloading, disable the browser and implement the program by manual.

default ▾ Streaming 1 ▾ Chatting: Online Visitor : 3 Relay Out: ON OFF

4. Live Video

Start an IE browser, input IP address of the IP camera in the address field. A dialogue box will pop up as below. Log in username & password using **admin**.

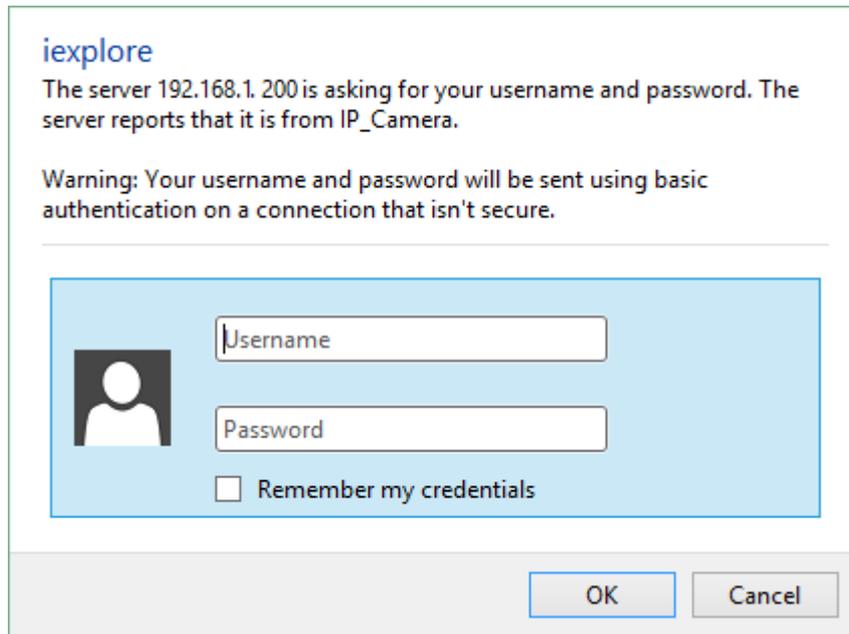

When IP Camera is successfully connected, the following interface appears.



I. Full Screen Mode

Double-clicking on the video screen will enter the full screen mode. Press “Esc” on your computer keyboard or double-click the video screen again for returning to normal screen mode.

II. Live Video Panel


- Click  - Get into the administration page.
- Click  - A snapshot preview window will appear.
Choose  to save the current snapshot or choose  to discard it.
- **DEMO SEP/17/2018 13:52:25 H.264+ Size:3840x2160**
Show the system time, video resolution, and other information.
- **default** ▾ - Adjust image size by its ratio of 1/2x(default), 1x, and 2x.
- **Streaming 1** ▾ - Select the video streaming source: If the streaming 2 is set closed in [Video Setting](#), this function will not be displayed.


The dialog box titled "Streaming 2 Setting" contains three radio button options: "Basic Mode", "Advanced Mode", and "Close". The "Close" option is selected.
- Tick on **Chatting** checkbox to enable two-way audio. You may adjust settings from [Audio Setting](#).
- **Online Visitor:** Shows how many people are connected to this device.
- **DO:** ON OFF controls the external output device or DO (digital output) connected to this camera.

Note: **Please change default password** is a sign which flickers on the live view screen as a reminder, to suggest the user to change the default password. You may configure the login settings in [System](#) to secure your account privacy.

III. Submenu


Right-Click the mouse on the live video screen, a pop-up menu will then appear as below.

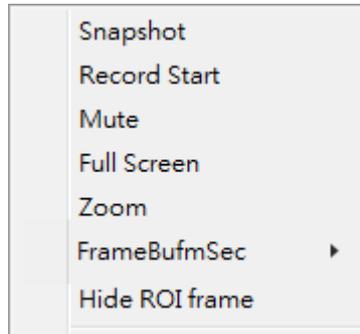

- i. **Snapshot**: Save a JPEG picture
- ii. **Record Start**: Record the video to the local PC. The video format is AVI and you will be asked to set up the directory for the video file. To stop recording, right-click again. Select “Record Stop”.
- iii. **Mute**: Click to turn off the audio. Click again to turn it on.
- iv. **Full Screen**: Full-screen mode.
- v. **Zoom**: Select “zoom” within the pop-up dialogue box and then drag and drop the bar to adjust the zoom factors.




- vi. **Frame Buffm Sec**: This function aims to build a temporary buffer to accumulate several video frames in a LAN network environment. It can make video streaming smooth when the network speed is slow.

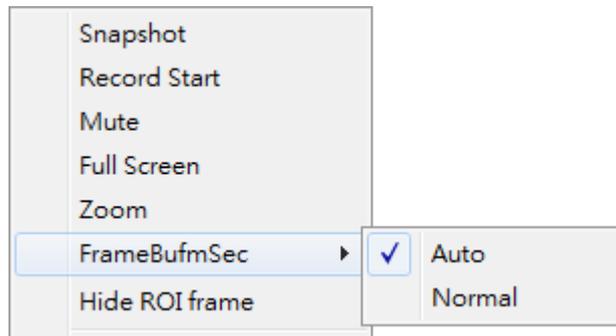

Select **Auto** to allow this function automatically help fix the streaming performance whenever the video happens to be lagging.

Select **Normal** to play the video data based on the current network streaming performance. (Note: the lagging of the video displayed will not be seen as a result of the actual video data)

- vii. **Hide / Show ROI frame:** Once the ROI frame has been set up from **AV Settings**, there will be frames in colors appearing on the live view. Choose to hide to make the frames invisible, or choose show to keep the frames.

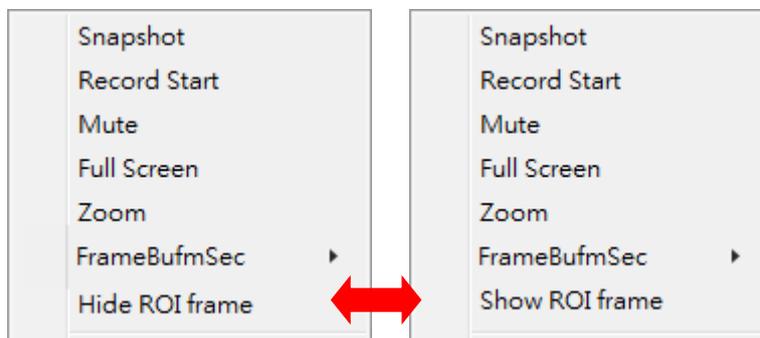

5. Camera Configuration

1. System




Click  to get into the administration page. Click



to go back

to the live video page.

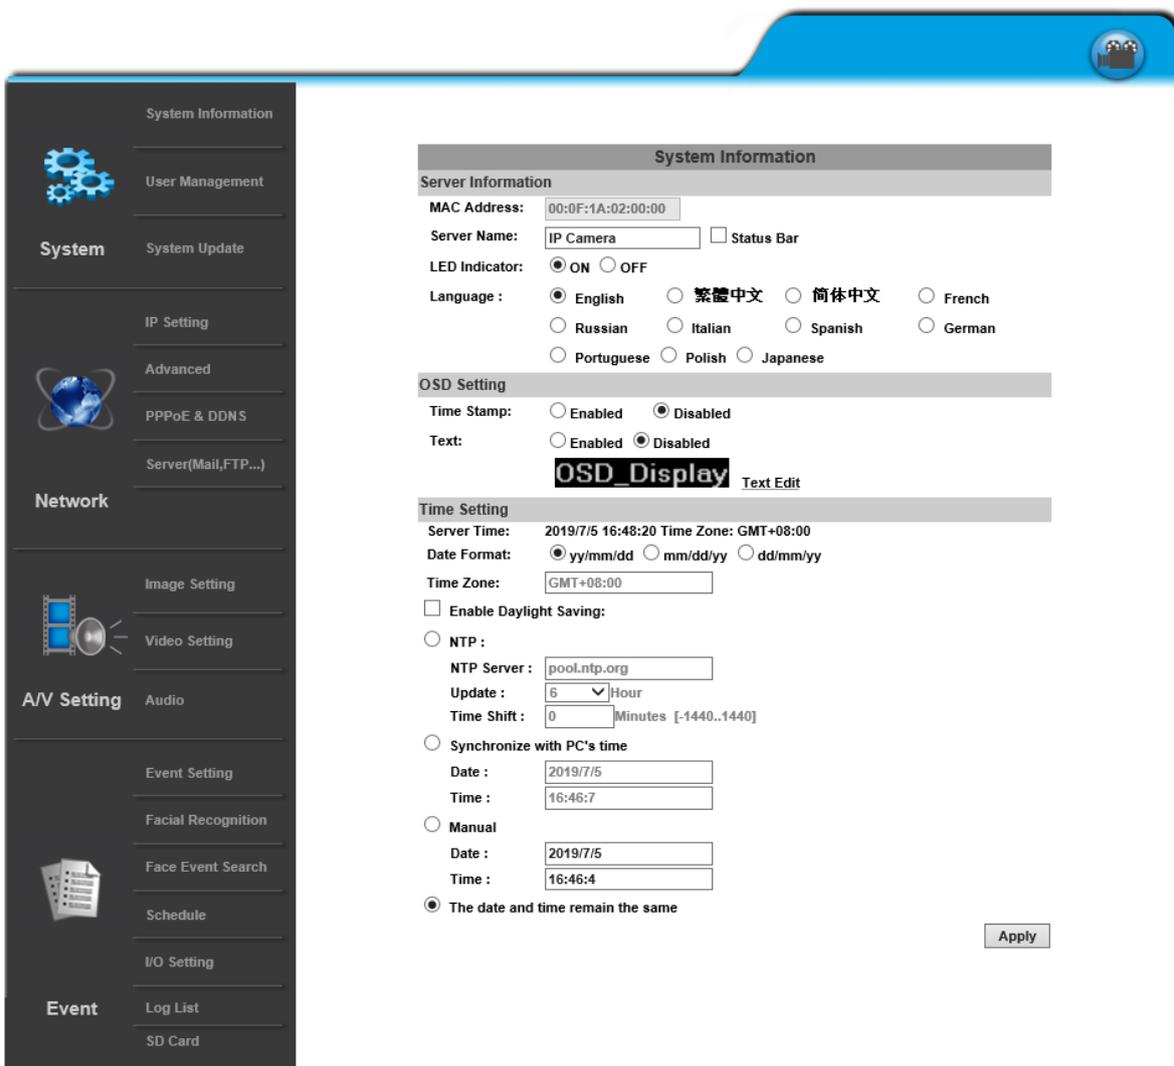

The screenshot displays the camera configuration web interface. On the left is a dark sidebar with a navigation menu. The main content area is titled "System Information" and contains several sections:

- Server Information:** Includes fields for MAC Address (00:0F:1A:02:00:00), Server Name (IP Camera), and a checkbox for Status Bar. The LED Indicator is set to ON.
- Language:** Radio buttons for English (selected), 繁體中文, 简体中文, French, Russian, Italian, Spanish, German, Portuguese, Polish, and Japanese.
- OSD Setting:** Time Stamp is Disabled, and Text is Disabled. A preview shows "OSD_Display" in a text box.
- Time Setting:** Server Time is 2019/7/5 16:48:20, Time Zone is GMT+08:00. Date Format is yy/mm/dd. Time Shift is 0 minutes. Options for NTP, Synchronize with PC's time, and Manual are present.

An "Apply" button is located at the bottom right of the configuration area.

System Information

Server Information

Set up the camera name, language, and the camera time.



Server Information

MAC Address: 00:0F:0D:27:4A:4B

Server Name: IP_Camera Status Bar


LED Indicator: ON OFF

Language : English 繁體中文 简体中文 French
 Russian Italian Spanish German
 Portuguese Polish Japanese

- **Server Name:** This is the Camera name. This name will be shown on the IP Scanner. Tick the checkbox of **Status Bar** to display the **Server Name** in [Live Video](#). For example, if you key in DEMO, it will be displayed at live video mode at the bottom.

DEMO SEP/17/2018 13:52:25 H.264+ Size:3840x2160

- **LED Indicator:** Turn on/off the LED indicator on the camera.
- **Language:** English and other languages can be selected. When a language preference is selected, the following dialogue box will pop up to confirm the change.

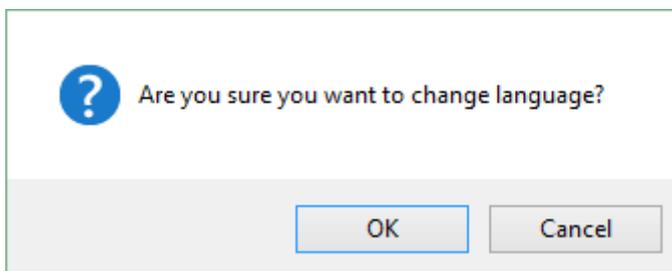

OSD Setting

You can adjust the **Position** for the **Enabled** option of **Time Stamp** or **Text** which will be displayed on [Live Video](#) screen.

OSD Setting

Time Stamp: Enabled Disabled

Text: Enabled Disabled

OSD_Display [Text Edit](#)

Click **Text Edit** for editing the OSD content, including Text size and transparency. Click the [Upgrade](#) button to apply the settings.

Text Edit



Text Edit

Text

Size ▼

Transparency ▼

[Upgrade](#)

Time Setting

Select between **NTP**, **Synchronize with PC's time**, **Manual**, **The date and time remain the same** for setting the server time.

Time Setting

Server Time: 2015/7/28 12:43:57 Time Zone: GMT+08:00

Date Format: yy/mm/dd mm/dd/yy dd/mm/yy

Time Zone:

Enable Daylight Saving:

	Month		Day of Week	Time
DST Start:	<input type="text" value="Mar"/>	<input type="text" value="2nd"/>	<input type="text" value="Sun"/>	<input type="text" value="12 am"/>
DST End:	<input type="text" value="Nov"/>	<input type="text" value="1st"/>	<input type="text" value="Sun"/>	<input type="text" value="12 am"/>

NTP :

NTP Server :

Update : Hour

Time Shift : Minutes [-1440..1440]

Synchronize with PC's time

Date :

Time :

Manual

Date :

Time :

The date and time remain the same

EasyLink (Optional)


EasyLink

EasyLink ID:

QR Code: 


Install **IP Motion App** on your mobile phone to access **EasyLink** operation which allows user to watch IP camera live view on self-owned mobile phones. Once the installation is done, either enter the **EasyLink ID** from the IP camera web browser, or simply scan the **QR Code** to help you log in to your IP camera through **IP Motion App** and watch the live view.

For iOS

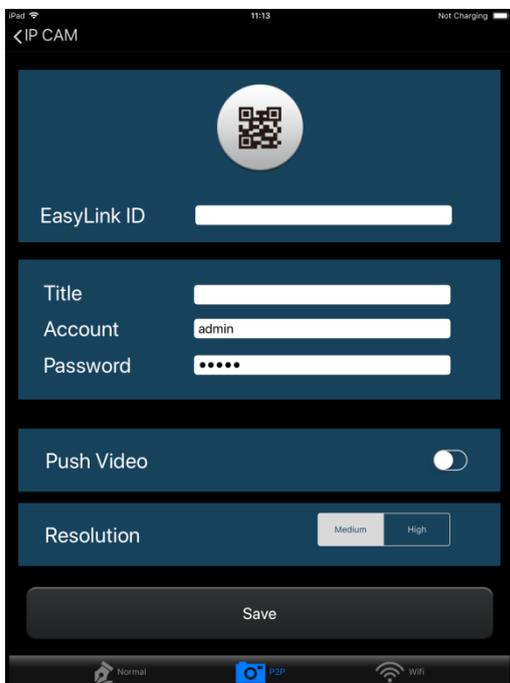

The screenshot shows the iOS interface of the IP Motion App. At the top, it displays 'iPad', signal strength, '11:13', and 'Not Charging'. The title bar reads '< IP CAM'. Below this is a QR code scanner icon. The main form includes an 'EasyLink ID' field, a 'Title' field, an 'Account' field with 'admin' entered, and a 'Password' field with masked characters. There is a 'Push Video' toggle switch which is currently turned on. Below that is a 'Resolution' section with 'Medium' and 'High' options. At the bottom of the form is a 'Save' button. The bottom status bar shows 'Normal', 'P2P', and 'WiFi' icons.

For Android

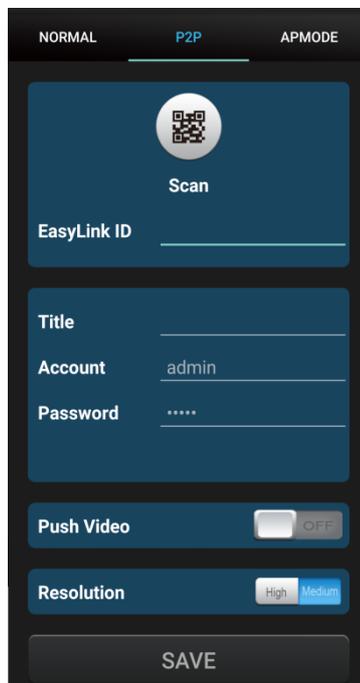

The screenshot shows the Android interface of the IP Motion App. At the top, it displays 'NORMAL', 'P2P', and 'APMODE'. Below this is a QR code scanner icon. The main form includes an 'EasyLink ID' field, a 'Title' field, an 'Account' field with 'admin' entered, and a 'Password' field with masked characters. There is a 'Push Video' toggle switch which is currently turned off. Below that is a 'Resolution' section with 'High' and 'Medium' options. At the bottom of the form is a 'SAVE' button.

Read more about operating **IP Motion App** from the user's manual [document](#) inside the folder [User Manual_Mobile Phone APP](#) which comes as part of the [CD contents](#).

Note: Your smartphone must be equipped with a camera and featured with a QR code scanner application.

User Management

User Management

Anonymous User Login

YES NO

Universal Password (differs by IP Address)

YES NO

Add User

Username:
 Password:
 Confirm:

User List

Username	User Group	Modify	Remove
admin	Administrator	Edit	-----
grace	Guest	Edit	Remove

Default Account

Show reminder message [Please change IP Cam default password]

Anonymous User Login

Select **Yes** for allowing access to watch live video of the IP camera without having to enter username and password. Yet when entering the configuration page of the IP camera, the system will do otherwise. Select **No** for requiring a username and login to access the camera.

Universal Password

Select **Yes** for allowing login to this IP camera by universal password. Please refer to **Universal Password** chapter for more explanations. Select **No** for disabling universal password.

Add User

The IP Camera supports 2 different users: **Administrator** and **Guest**. **Administrator** can operate everything. **Guest** has the right to access **Live view**, Time sync, location setting, playback viewing and check playlist.


User List

Type the user name and password, then click **Add/Set**. The guest user can only browse live video page and is not allowed to enter the configuration page. Click **Edit** or **Remove** in the user list to modify them. The system will ask you to input the password in the pop-up window before you edit the user information.

Default Account

Please change default password is a sign which appears on the live view screen as a reminder, suggesting the user to change the default password. Click the checkbox to enable/disable the reminder message.

System Update

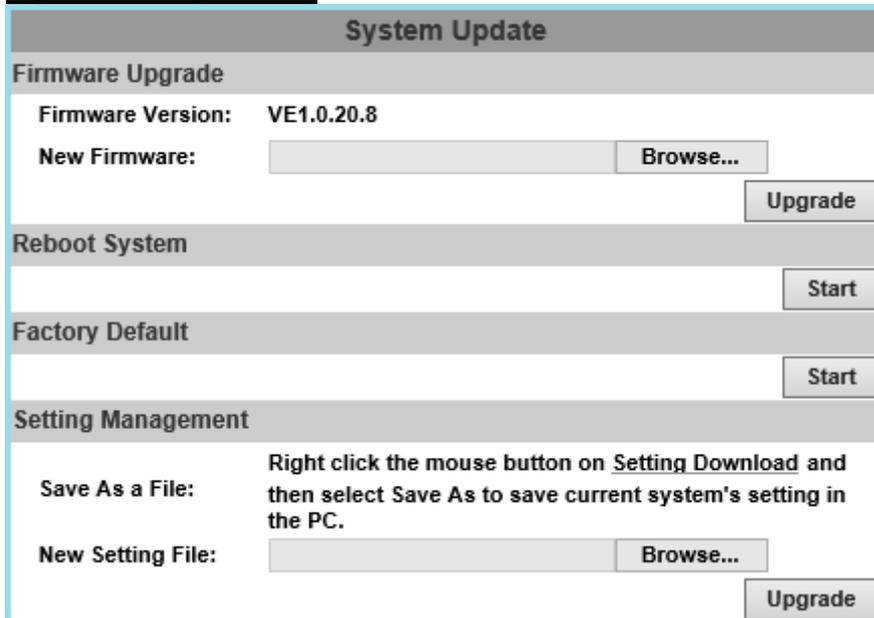

The screenshot shows a web interface titled "System Update". It is divided into several sections:

- Firmware Upgrade:** Shows the current "Firmware Version: VE1.0.20.8". Below it is a "New Firmware:" field with a "Browse..." button and an "Upgrade" button.
- Reboot System:** A section with a "Start" button.
- Factory Default:** A section with a "Start" button.
- Setting Management:** Contains instructions: "Right click the mouse button on Setting Download and then select Save As to save current system's setting in the PC." Below this is a "New Setting File:" field with a "Browse..." button and an "Upgrade" button.

Firmware Upgrade

To update the firmware online, click **Browse...** to select the firmware, and then click **Upgrade** to proceed.

Reboot System

Restart the IP camera.

Factory Default

Delete all the settings of this IP camera.

Setting Management

The user can download the current settings to PC, or upgrade from previous saved settings.

- **Setting Download**

Right-click the mouse button on **Setting Download** → Select **Save AS...** to save current IP Camera settings in PC → Select saving directory → Save

- **New Setting File**

To upgrade new settings, click **Browse** to search previous settings from a pop-up window, then click **Open** → **Upgrade** → Settings update confirm. Finally, click **index.html** to returning to main page.


II. Network



Click  to get into the administration page. Click



to go back to the live video page.

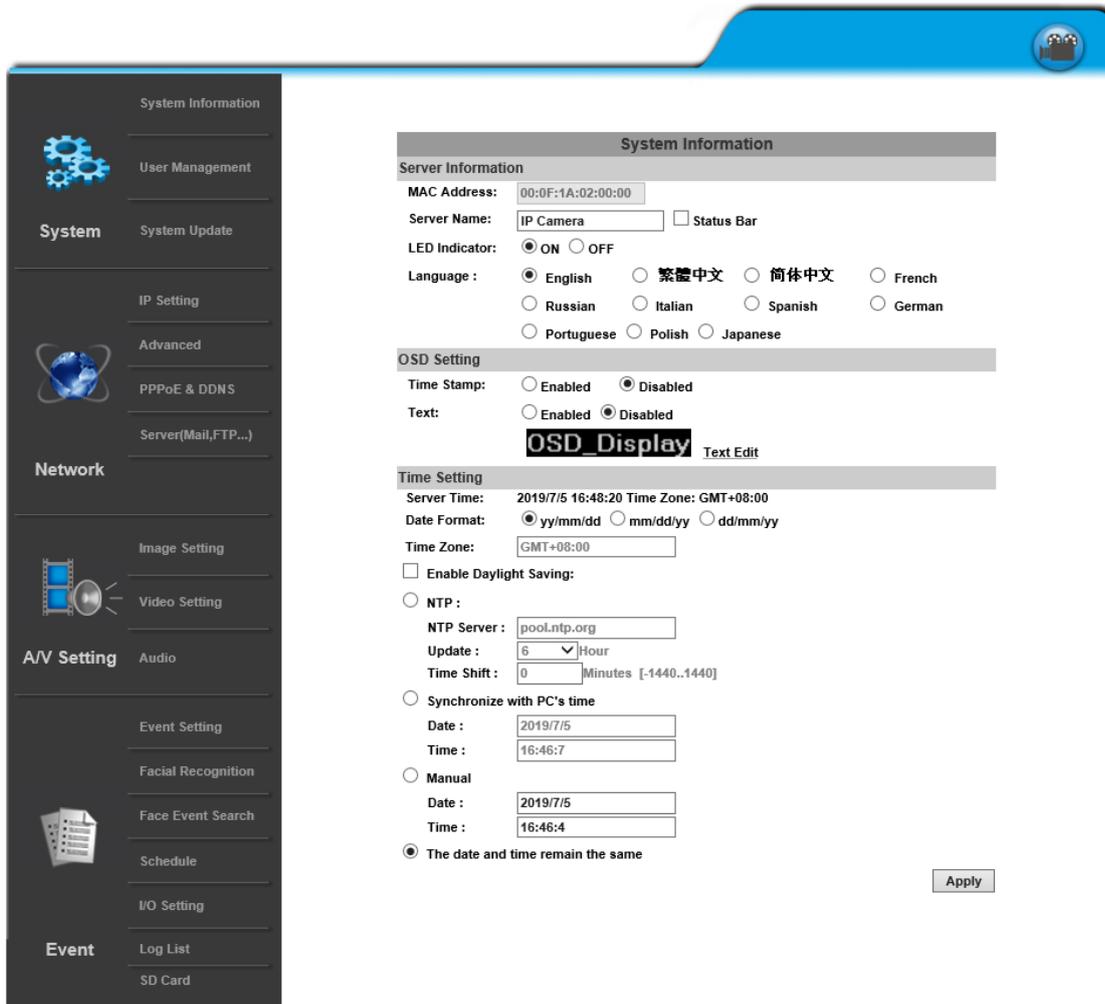

The screenshot shows the IP Camera administration interface. On the left is a navigation menu with categories: System (System Information, User Management, System Update, IP Setting, Advanced, PPPoE & DDNS, Server(Mail,FTP...)), Network (Image Setting, Video Setting, Audio), A/V Setting (Event Setting, Facial Recognition, Face Event Search, Schedule, I/O Setting), and Event (Log List, SD Card). The main content area is titled 'System Information' and contains the following settings:

- Server Information:**
 - MAC Address: 00:0F:1A:02:00:00
 - Server Name: IP Camera Status Bar
 - LED Indicator: ON OFF
 - Language: English 繁體中文 简体中文 French Russian Italian Spanish German Portuguese Polish Japanese
- OSD Setting:**
 - Time Stamp: Enabled Disabled
 - Text: Enabled Disabled
 - OSD Display: **OSD_Display** [Text Edit](#)
- Time Setting:**
 - Server Time: 2019/7/5 16:48:20 Time Zone: GMT+08:00
 - Date Format: yy/mm/dd mm/dd/yy dd/mm/yy
 - Time Zone: GMT+08:00
 - Enable Daylight Saving:
 - NTP:
 - NTP Server: pool.ntp.org
 - Update: 6 Hour
 - Time Shift: 0 Minutes [-1440..1440]
 - Synchronize with PC's time
 - Date: 2019/7/5
 - Time: 16:46:7
 - Manual
 - Date: 2019/7/5
 - Time: 16:46:4
 - The date and time remain the same

An 'Apply' button is located at the bottom right of the settings area.

Enter the Network by clicking on titles from IP Setting, Advanced, PPPoE & DDNS and Server Settings.

IP Settings

IP Assignment

The IP Camera supports DHCP and static IP.

IP Setting	
IP Assignment	
<input type="radio"/> DHCP	
<input checked="" type="radio"/> Static	
IP Address:	<input type="text" value="192.168.1.200"/>
Subnet Mask:	<input type="text" value="255.255.255.0"/>
Gateway:	<input type="text" value="192.168.1.254"/>
DNS 0:	<input type="text" value="168.95.1.1"/>
DNS 1:	<input type="text" value="168.95.192.1"/>

- **DHCP:** The IP Camera will get all the network parameters automatically.
- **Static IP:** Type-in the IP address subnet mask, gateway, and DNS.


IPv6 Assignment

By enabling DHCPv6 you can configure the following IPv6 address settings:

IPv6 Assignment	
<input checked="" type="checkbox"/> IPv6 Enabled:	
<input checked="" type="checkbox"/> Manually setup the IPv6 address:	
IPv6 Address/Prefix:	<input type="text" value="::"/> / <input type="text" value="64"/>
IPv6 Gateway:	<input type="text" value="::"/>
IPv6 DNS:	<input type="text" value="::"/>
DHCPv6:	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
IPv6 Address:	fe80::20f:dff:fe00:284d

- **Manually setup the IPv6 address:** Key-in the Address, Gateway, and DNS.

- **DHCPv6:** If you have a DHCPv6 server, enable it to assign the IPv6 automatically. The assigned IP address will be displayed alongside.
- **Automatically generated IPv6 Address:** Indicates a virtual IPv6 address generated automatically by the IP camera. This virtual IPv6 address cannot be used on WAN.
- Use IPv6 address to access the IP camera. Open a web browser and input **[IPv6 address]** in its address bar. The **[]** parentheses mark is necessary.

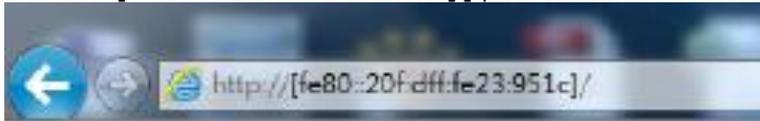

Port Assignment

The user might need to assign a different port to avoid conflicts when setting up the IP.

Port Assignment	
Web Page Port:	<input type="text" value="80"/>
HTTPS Port:	<input type="text" value="443"/> HTTPS Setting

- **Web Page Port:** Setup the web page connecting port and video transmitting port (Default: 80)
- **HTTPs Port:** Setup the https port(Default: 443)

UPnP

UPnP	
UPnP:	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled
UPnP Port Forwarding:	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
External Web Port:	<input type="text" value="80"/>
External HTTPS Port:	<input type="text" value="443"/>
External RTSP Port:	<input type="text" value="554"/>

This IP camera supports UPnP, if this service is enabled on your computer, the camera will automatically be detected and a new icon will be added to **My Network Places**.

- **UPnP Port Forwarding:** Enable UPnP Port Forwarding for accessing the IP Camera from the Internet; this option allows the IP Camera to open ports on the router automatically so that video streams can be sent out from a LAN. There are three external ports for being set: **Web Port, Http Port** and **RTSP**

port. To utilize of this feature, make sure that your router supports **UPnP** and is activated.


Note: *UPnP must be enabled on your computer.*
Please follow the procedure to activate UPnP:

<Approach 1>


- i. open the **Control Panel** from the **Start Menu**
- ii. Select **Add/Remove Programs**
- iii. Select **Add/Remove Windows Components** and open **Networking Services** section
- iv. Click **Details** and select **UPnP** to setup the service.
- v. The IP device icon will be added to **My Network Places**.
- vi. The user may double click the IP device icon to access IE browser

<Approach 2>

- i. Open My **Network Space**
- ii. Click **Show icons for networked UPnP devices** in the tasks column on the left of the page.
- iii. Windows might ask your confirmation for enabling the components. Click **Yes**.

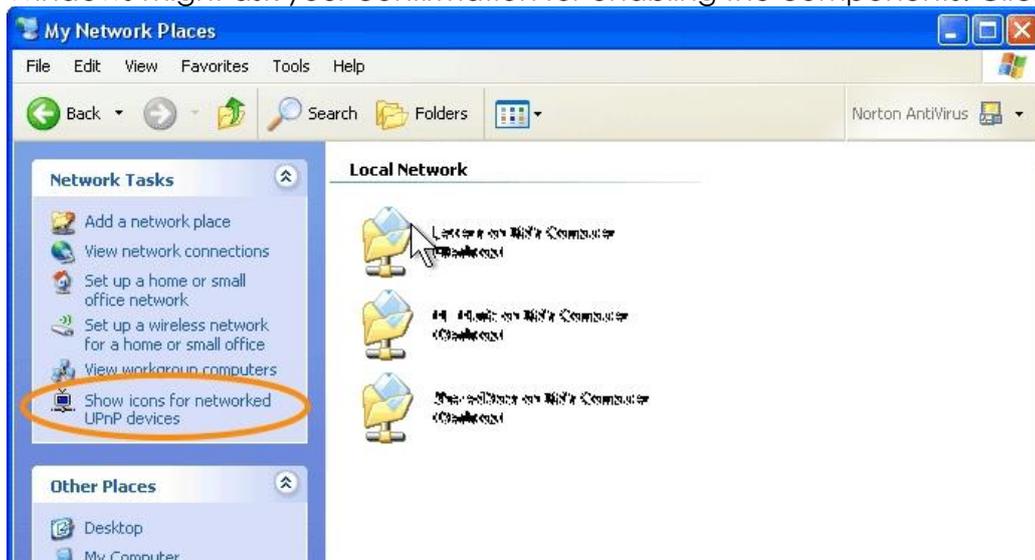

- iv. Now the IP device is displayed under the LAN. Double-click the icon to access the camera via web browser. To disable the UPnP, click **Hide icons for networked UPnP devices** in the tasks column.

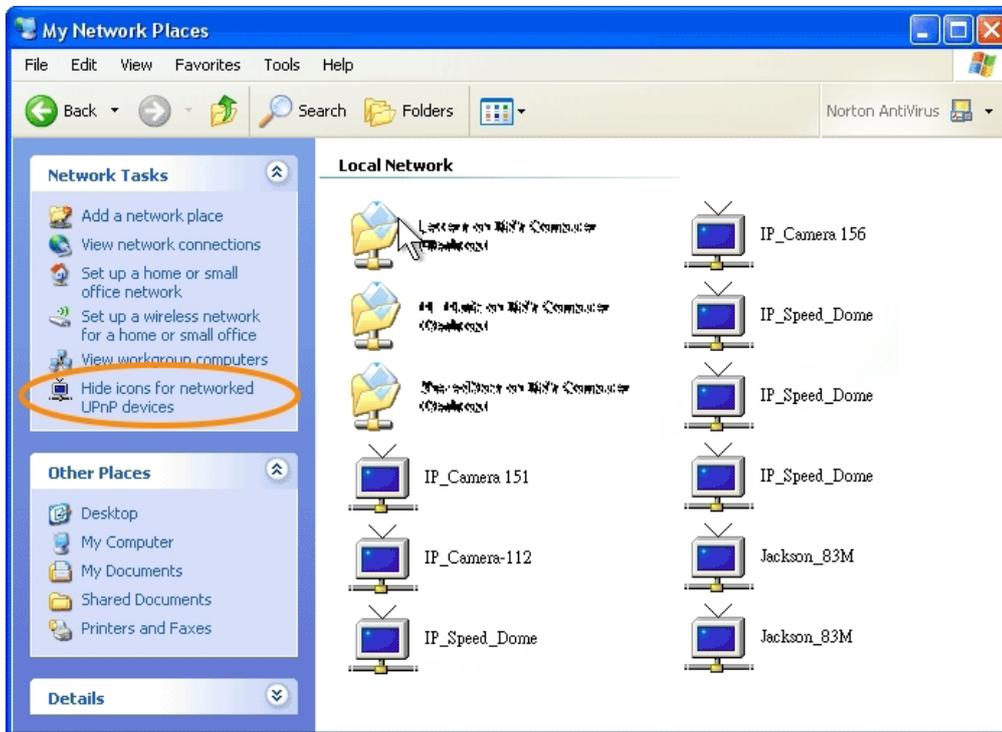

RTSP Setting

RTSP Setting	
RTSP Server:	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled
RTSP Authentication:	Disable
RTSP Port :	554
RTP Start Port:	5000 [1024..9997]
RTP End port:	9000 [1027..10000]

If you have a media player that supports RTSP protocol, you can use it to receive video streaming from the IP camera. The RTSP address can be set for two streaming transmissions respectively.

- **RTSP Server:** Choose **Enabled** or **Disabled**.
Disable means everyone who knows your camera IP Address can link to your camera via RTSP. No username and password are required. Under **Basic** and **Digest** authentication mode, the camera asks for a username and password before allows access. The password is transmitted as a clear text under basic mode, which provides a lower level of security than under **digest** mode. Make sure your media player supports the authentication schemes.

- **RTSP Port:** Setup port for RTSP transmitting (Default: 554)
- **RTP Start and End Port:** In RTSP mode, you can use TCP and UDP for connecting. TCP connection uses RTSP Port (554). UDP connection uses RTP Start & End Port.

Multicast Setting (Based on the RTSP Server)

Multicast Setting (Based on the RTSP Server)		
Streaming 1:		
IP Address:	<input type="text" value="234.5.6.78"/>	[224.3.1.0 ~ 239.255.255.255]
Port:	<input type="text" value="6000"/>	[1 ~ 65535]
TTL:	<input type="text" value="15"/>	[1 ~ 255]
Streaming 2:		
IP Address:	<input type="text" value="234.5.6.79"/>	[224.3.1.0 ~ 239.255.255.255]
Port:	<input type="text" value="6001"/>	[1 ~ 65535]
TTL:	<input type="text" value="15"/>	[1 ~ 255]

Multicast is a bandwidth conservation technology. This function allows several users to share the same packet sent from the IP camera. For using Multicast, appoint here an IP Address and port. TTL means the life time of packet, the larger the value is, the more users can receive the packet. **For using Multicast, be sure to enable the function Force Multicast RTP via RTSP in your media player. Then key in the RTSP path of your camera: rtsp ://(IP address)/ to receive the multicast.**

ONVIF

ONVIF	
ONVIF:	<input checked="" type="radio"/> v2.10/v1.02 <input type="radio"/> v1.01 <input type="radio"/> Disabled
Security:	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
RTSP Keepalive:	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled

Choose your ONVIF version and settings.

- **ONVIF:** Under ONVIF connection, the video will be transmitted by RTSP. Be sure to enable the RTSP server in IP setting, otherwise the IP Camera will not be able to receive the video via ONVIF.
- **Security:** By selecting **Disable**, the username and password are not required for accessing the camera via ONVIF. By selecting **Enable** the username and password are necessary.


- **RTSP Keepalive:** When the function is enabled, the camera checks once in a while if the user who is connected to the camera via ONVIF is still connected. If the connection has been broken the camera will stop transmitting video to the user.

Bonjour

Bonjour	
Bonjour:	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
Bonjour Name:	<input type="text" value="IP_Camera"/> @00:0F:0D:00:28:4D

This function allows Apple systems to connect to this IP camera. On **Bonjour Name** key-in the name here. The web browser **Safari** also has a Bonjour function. Tick **Include Bonjour** in the bookmark setting, for the IP camera to appear under the Bonjour category.

Click the icon to connect to the IP camera. The Bonjour function on Safari browser doesn't support HTTPS protocol. If on the camera you select **https**, the camera will appear on Safari's bookmarks but it cannot be accessed. Take as a reference the following image:

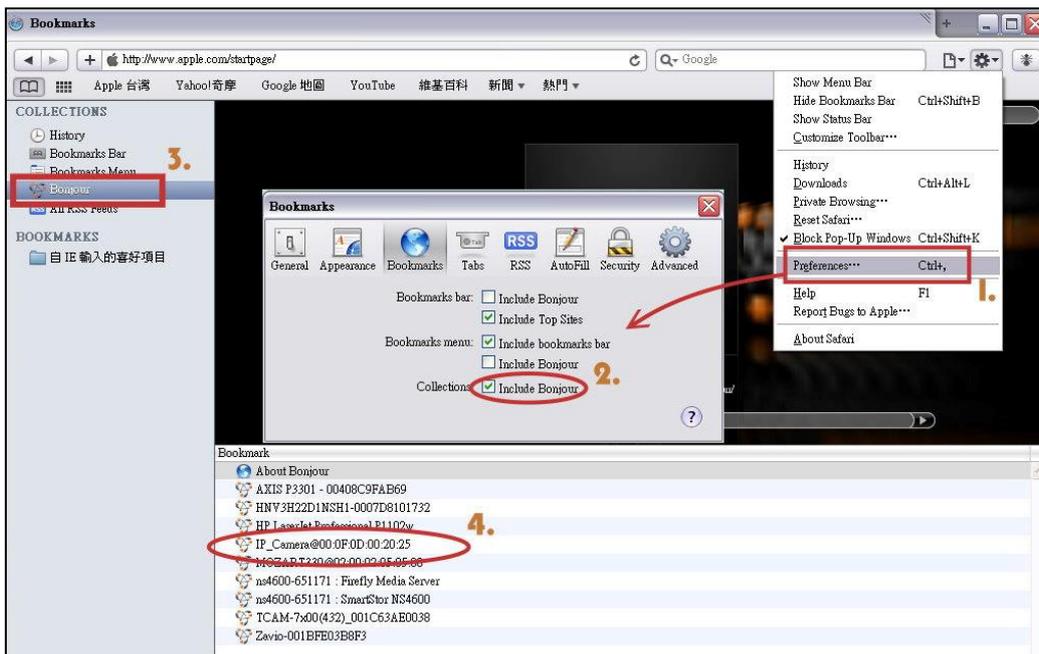


LLTD

LLTD (Link Layer Topology Discovery)	
LLTD:	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled

If your PC supports LLTD, enable this function for allowing checking the connection status, properties, and device location (IP address) in the network

map. If the computer is running Windows Vista or Windows 7, you can find LLTD through the path: Control Panel → Network and Internet → Network and Sharing Center → Click **See full map**.

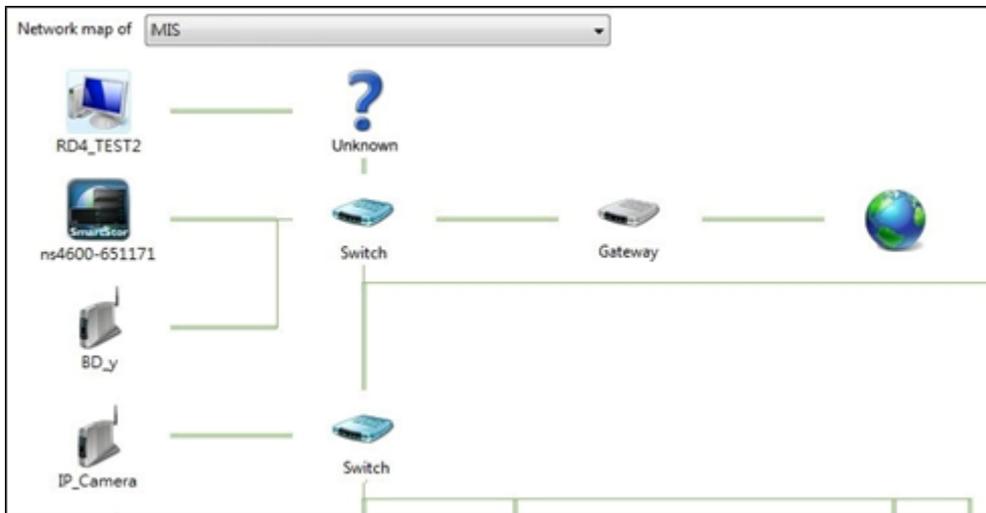

Advanced Https (Hypertext Transfer Protocol Secure)



When the users access cameras via Https protocol, the transmitted information will be encrypted, increasing the security level.


Select the connection type:

- **Http**: the user can access the camera via the Http path but cannot access it via the Https path.
- **Https**: the user can access the camera via the Https path but cannot access it via the Http path.
- **Http & Https**: Both the Http and Https path can be used to access the camera. When you change the connection type settings, it may cause connection error or disconnection error if you switch the protocol directly. Therefore, **Http & Https** mode is necessary.


If you want to change from Http to Https, please switch to **Http & Https** mode first, and then switch to **Https** mode and vice versa.

The Https protocol has a verifying mechanism. When the user access a website via Https, the browser will check the certificate of that domain and verify its trustiness and security.

Certificate generation process:

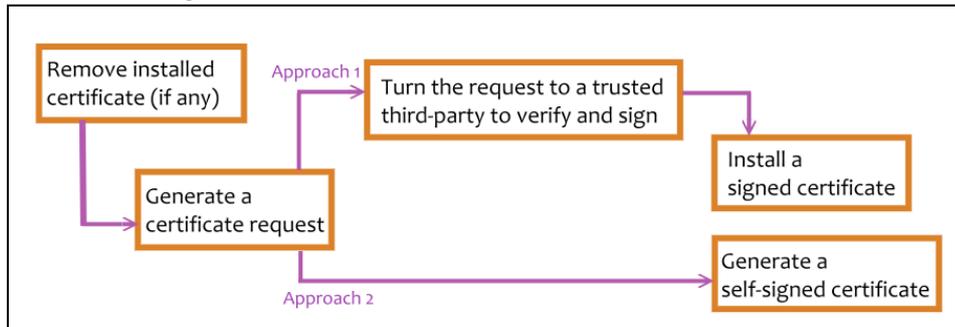


Remove the existing certificate: Before you generate a new certificate, please remove the installed one. Select the **Http** connection type and click **Remove**. If a dialog box pops up to ask you to confirm, click **Yes**.

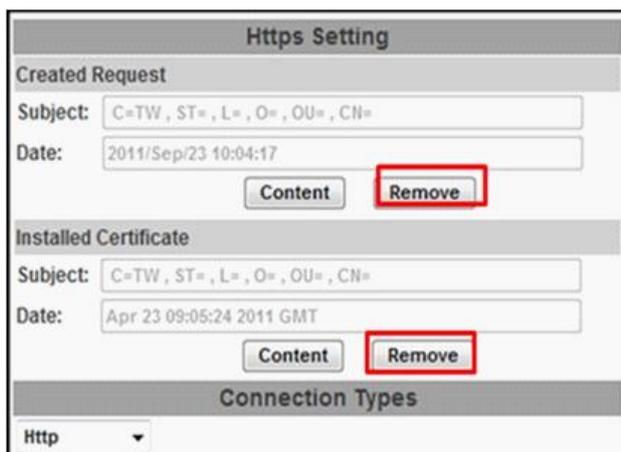


The screenshot shows the 'Https Setting' dialog box. It has two sections: 'Created Request' and 'Installed Certificate'. Each section has a 'Subject' field with the value 'C=TW, ST=, L=, O=, OU=, CN=' and a 'Date' field. Below each section are 'Content' and 'Remove' buttons. The 'Remove' buttons are highlighted with red boxes. At the bottom, there is a 'Connection Types' section with a dropdown menu currently set to 'Http'.

- **Created Request:** Fill-in the following form and click **apply**.

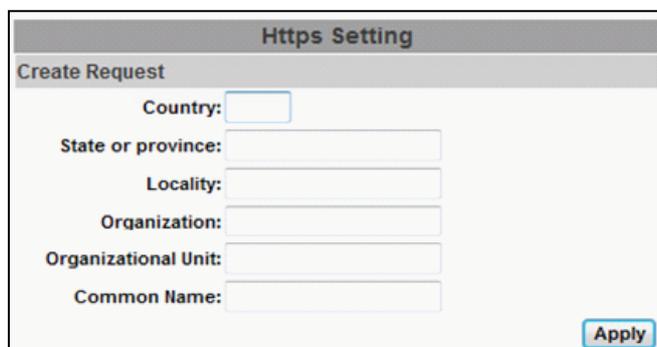

The screenshot shows the 'Https Setting' dialog box with the 'Create Request' section active. It contains several input fields: 'Country:', 'State or province:', 'Locality:', 'Organization:', 'Organizational Unit:', and 'Common Name:'. An 'Apply' button is located at the bottom right of the form.

After generating a certificate request, if you choose to turn it & verify it by a trusted third-party, click **Content** and copy all the request content.

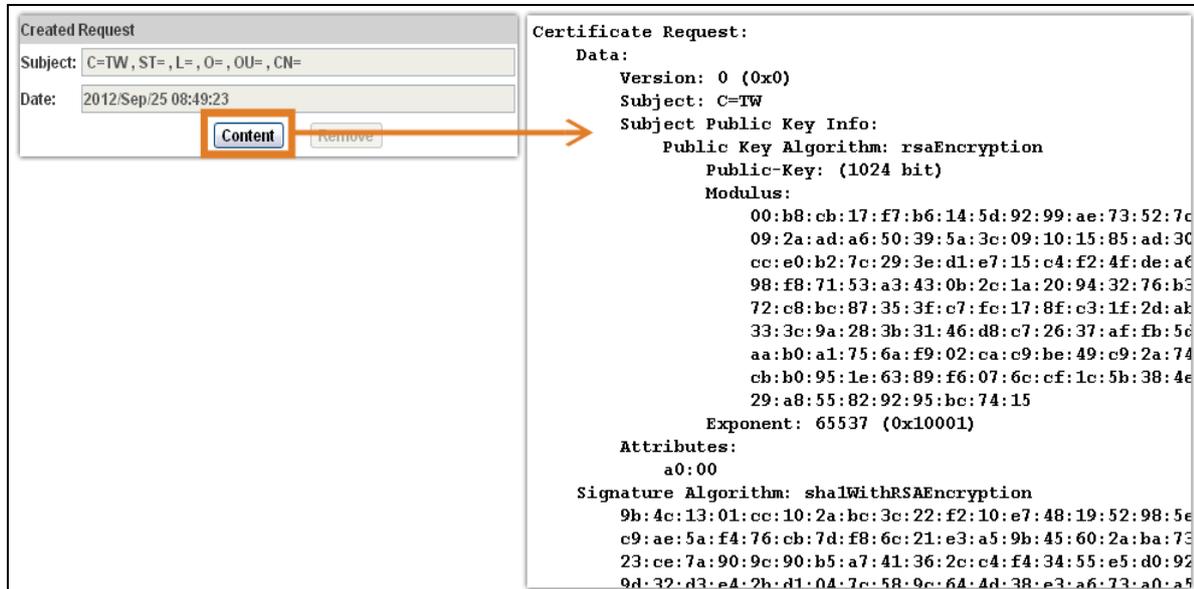

Created Request

Subject: C=TW, ST=, L=, O=, OU=, CN=

Date: 2012/Sep/25 08:49:23

Content Remove

Certificate Request:

Data:

Version: 0 (0x0)

Subject: C=TW

Subject Public Key Info:

Public Key Algorithm: rsaEncryption

Public-Key: (1024 bit)

Modulus:

00:b8:cb:17:f7:b6:14:5d:92:99:ae:73:52:7c
09:2a:ad:a6:50:39:5a:3c:09:10:15:85:ad:30
cc:e0:b2:7c:29:3e:d1:e7:15:c4:f2:4f:de:a6
98:f8:71:53:a3:43:0b:2c:1a:20:94:32:76:b5
72:c8:bc:87:35:3f:c7:fc:17:8f:c3:1f:2d:ak
33:3c:9a:28:3b:31:46:d8:c7:26:37:af:fb:5c
aa:b0:a1:75:6a:f9:02:ca:c9:be:49:c9:2a:74
cb:b0:95:1e:63:89:f6:07:6c:cf:1c:5b:38:4e
29:a8:55:82:92:95:bc:74:15

Exponent: 65537 (0x10001)

Attributes:

a0:00

Signature Algorithm: sha1WithRSAEncryption

9b:4c:13:01:cc:10:2a:bc:3c:22:f2:10:e7:48:19:52:98:5e
c9:ae:5a:f4:76:cb:7d:f8:6c:21:e3:a5:9b:45:60:2a:ba:75
23:ce:7a:90:9c:90:b5:a7:41:36:2c:c4:f4:34:55:e5:d0:92
9d:32:d3:e4:2b:d1:0d:7c:58:9c:6d:4d:38:e3:a6:73:a0:a5

According to the certificate source, there are two ways to install the certificate: If you had sent the certificate request for signing and receiving a signed certificate, click **browse** and find the certificate file in your computer. Click **Apply** to install it.

If you choose to generate a self-signed certificate, fill-in the following forms and set the validity day, click **Apply** to finish installed it.



Install Signed Certificate

Signed Certificate: 浏览...

Apply

Create Self-Signed Certificate

Country:

State or province:

Locality:

Organization:

Organizational Unit:

Common Name:


Validity: Days

Apply

After finishing the installation, click on **Content** to call out and check the certificate content.




To use Https to access the camera, open your browser, and key-in **https:// (IP address)/** in the address bar. Now your data will be transmitted via encrypted communications. The browser will check your certificate status. It might show the following warning message:

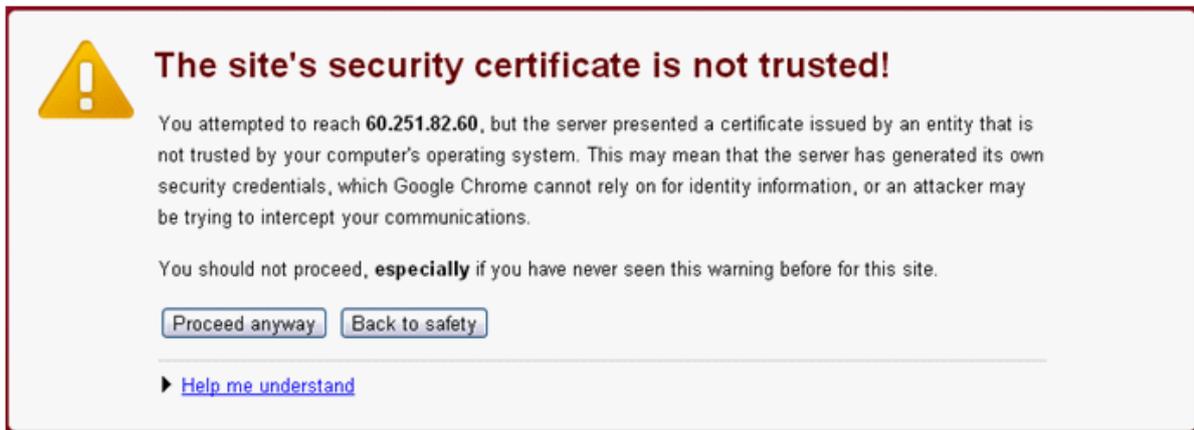

Meaning that certificate is self-signed or signed by a distrusted institution. Click **Proceed anyway** for continuing to the camera page.

SNMP (Simple Network Management Protocol)

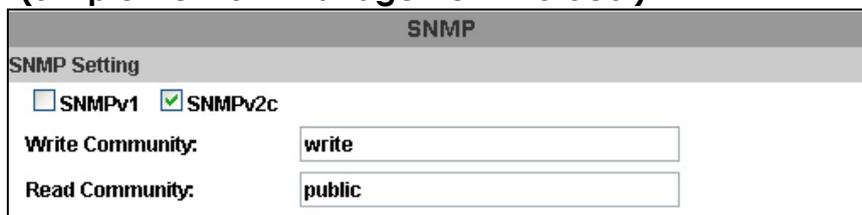

- SNMPv1 or SNMPv2: write the name of both Write Community and Read Community.

- **SNMPv3:** Set the Security Name, Authentication Type, Authentication Password, Encryption Type, Encryption Password of Write mode and Read mode.

<input checked="" type="checkbox"/> SNMPv3	
Write Security Name:	<input type="text" value="write"/>
Authentication Type:	<input checked="" type="radio"/> MD5 <input type="radio"/> SHA
Authentication Password:	<input type="text" value="....."/>
Encryption Type:	<input checked="" type="radio"/> DES <input type="radio"/> AES
Encryption Password:	<input type="text" value="....."/>
Read Security Name:	<input type="text" value="public"/>
Authentication Type:	<input checked="" type="radio"/> MD5 <input type="radio"/> SHA
Authentication Password:	<input type="text" value="....."/>
Encryption Type:	<input checked="" type="radio"/> DES <input type="radio"/> AES
Encryption Password:	<input type="text" value="....."/>

Enable **SNMPv1/SNMPv2 Trap** for detecting the Trap server. Please set what event needs to be detected.

<input type="checkbox"/> SNMPv1/v2c Trap	
Trap Address:	<input type="text"/>
Trap Community:	<input type="text" value="public"/>
Trap Event:	<input type="checkbox"/> Cold Start <input type="checkbox"/> Setting Changed <input type="checkbox"/> Network Disconnected <input type="checkbox"/> V3 Authentication Failed <input type="checkbox"/> SDCard Insert/Remove

- **Cold Start:** The camera starts up or reboots.
- **Settings Changed:** The SNMP settings have been changed.
- **Network Disconnected:** The network connection was broken down (The camera will send trap messages after the network is connected again).
- **V3 Authentication Failed:** A SNMPv3 user account tries to get authentication but failed. (Due to incorrect password or community)
- **SD Card Insert / Remove:** A Micro SD card is inserted or removed.

Access List

Enable IP address filter to allow/reject some IP address a network access. There are two options: **single** and **range**.

IP FILTER

IP ADDRESS FILTER Setting

Enable ip address filter

IPv4 Setting:

allow deny

single ▼ address:

single
 range

IPv4 List:

No.	IP Address	Filter	Action
1			<input type="button" value="remove"/>
2			<input type="button" value="remove"/>
3			<input type="button" value="remove"/>
4			<input type="button" value="remove"/>
5			<input type="button" value="remove"/>
6			<input type="button" value="remove"/>
7			<input type="button" value="remove"/>
8			<input type="button" value="remove"/>
9			<input type="button" value="remove"/>
10			<input type="button" value="remove"/>

Allow admin ip address always access this device

Admin ip address:

QoS/DSCP

(Quality of Server/Differentiated Services Code-point)

DSCP specifies a simple mechanism for classifying and managing network traffic; and provide QoS on IP networks. DSCP is a 6-bit in the IP header for packet classification purpose. Please define it for **Live Stream, Event / Alarm and Management**.

QoS/DSCP

QoS/DSCP Setting

Enable QoS/DSCP

Live Stream: (0~63)

Event / Alarm: (0~63)

Management: (0~63)

IEEE 802.1x

It is an IEEE standard for port-based Network Access Control. It provides an authentication mechanism to a device on LAN/WLAN.

IEEE 802.1x/EAP-TLS

IEEE 802.1x Setting

Enable IEEE 802.1x

Eapol version: v1 v2

Identity:

Private key password:

CA certificate:

Status:

Client certificate:

Status:

Client private key:

Status:

The EAPOL protocol supports service identification and optional point to point encryption over the local LAN segment.



Please check what version supports the authenticator and authentication server. This camera supports EAP-TLS method. Enter the ID, password issued by the CA, then upload related certificates.

PPPoE & DDNS

PPPoE & DDNS	
PPPoE Setting	
<input type="radio"/> Enabled	<input checked="" type="radio"/> Disabled
Username:	<input type="text"/>
Password:	<input type="text"/>
Send mail after PPPoE dialed	
<input type="checkbox"/> Enabled	
Subject:	<input type="text" value="PPPoE From IP Camera"/>
DDNS Setting	
<input type="radio"/> Enabled	<input checked="" type="radio"/> Disabled
Provider:	<input type="text" value="dyndns.org"/> ▼
Hostname:	<input type="text"/>
Username:	<input type="text"/>
Password:	<input type="text"/>
Schedule Update:	<input type="text" value="30"/> Minutes
State	
<input type="text" value="Idle"/>	
Note:	
1. Schedule Update: Depends on the input time of Schedule Update, it will update DDNS's web site automatically. The time range is from 5 to 5000 minutes. *0: It will not update.	
2. dyndns.org & 3322.org: Update once per day is recommended (1440 minutes per day). If updated too frequently, it will be blocked.	
<input type="button" value="Apply"/>	

PPPoE Setting

PPPoE Setting

Enabled Disabled

Username:

Password:

Select **Enabled** to use PPPoE. Key-in the Username and password for ADSL connection.

Send mail after PPPoE dialed

Send mail after PPPoE dialed

Enabled

Subject:

When connected to the internet, the camera will send a mail to a specific mail account.

DDNS Setting

DDNS Setting

Enabled Disabled

Provider: ▼

Hostname:

Username:

Password:

Schedule Update: Minutes

camddns as an example: Enable this service→Input username→IP schedule update→Default: 5 minutes→Click **Apply**
Check results from the message presented inside the **State** field.

State

State


Note:

- Schedule Update: Depends on the input time of Schedule Update, it will update DDNS's web site automatically. The time range is from 5 to 5000 minutes.
*0: It will not update.
- dyndns.org & 3322.org: Update once per day is recommended (1440 minutes per day). If updated too frequently, it will be blocked.


- (1) Updating:** Information update
- (2) Idle:** Stop service
- (3) DDNS registration successful, can now log by**
<http://<username>.ddns.camddns.com>: Register successfully.
- (4) Update Failed, the name is already registered:** The user name has already been used. Please change it.
- (5) Update Failed; please check your internet connection:** Network connection failed.
- (6) Update Failed, please check the account information you provided:** The server, user name, and password may be wrong.

Server Settings

There are several server types available. Select the item to display detailed configuration options. You can configure either one or all of them.

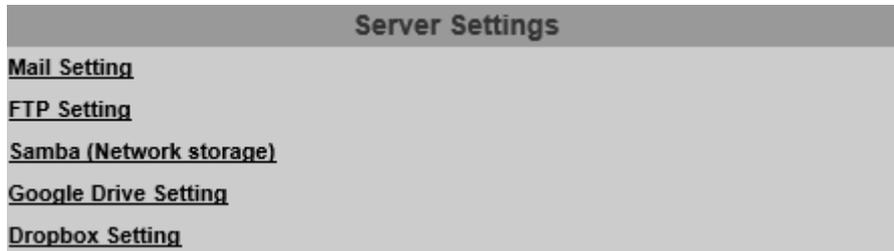

Click **Apply** to save settings at the bottom of **Server Settings**, then click **Test** icon to test the server connection. A message box will tell you **OK!** if it works, and a test document will be created in the location.

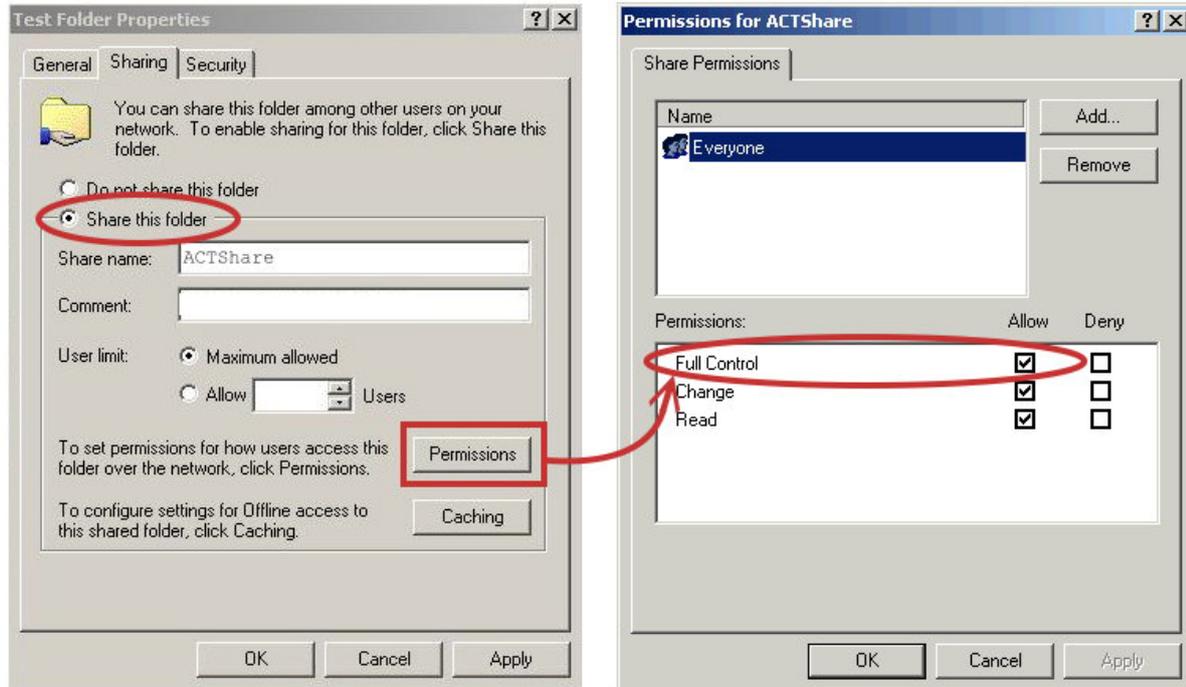

If the testing fails, check the sharing setting of your location folder. The folder properties must be **shared** and the permissions must be **Full Control**.

Mail Setting

To send out the video via mail of FTP, set up the configuration first.

Server Settings	
<u>Mail Setting</u>	
Login Method:	Account <input type="button" value="v"/>
Mail Server:	<input type="text"/>
Username:	<input type="text"/>
Password:	<input type="text"/>
Sender's Mail:	<input type="text"/>
Receiver's Mail:	<input type="text"/>
Bcc Mail:	<input type="text"/>
Mail Port:	25 (Default 25)
<input checked="" type="checkbox"/> TLS Secure Connect:	
<input type="button" value="Test"/>	
<u>FTP Setting</u>	
<u>Samba (Network storage)</u>	
<input type="button" value="Apply"/>	

Click **Apply** to confirm settings at the bottom of **Server Settings**, then click **Test** icon to test the server connection.

FTP Setting


To send out the video via mail of FTP, please set up the configuration.

Server Settings	
<u>Mail Setting</u>	
<u>FTP Setting</u>	
FTP Server:	<input type="text"/>
Username:	<input type="text"/>
Password:	<input type="text"/>
Port:	21
Path:	/
Mode:	PORT <input type="button" value="v"/>
Create the folder:	Yes <input type="button" value="v"/> (ex:Path/20100115/121032m.avi)
<input type="button" value="Test"/>	
<u>Samba (Network storage)</u>	
<u>Google Drive Setting</u>	
<u>Dropbox Setting</u>	
<input type="button" value="Apply"/>	

Click **Apply** to confirm settings at the bottom of **Server Settings**, then click **Test** icon to test the server connection.

Samba (Network Storage)

Select this option to send the media files via a neighbor network when an event is triggered.

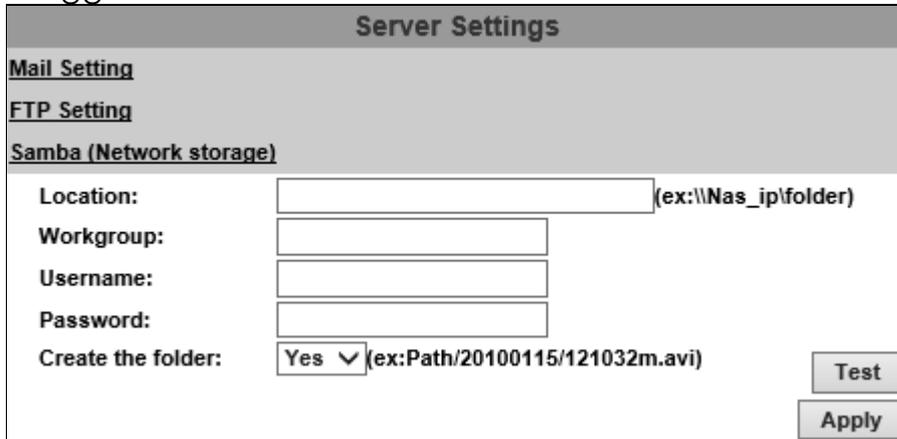


The screenshot shows the 'Server Settings' panel with the 'Samba (Network storage)' section selected. The form includes the following fields and controls:

- Location:** A text input field with a placeholder example '(ex:\\Nas_ip\folder)'. To its right is a 'Test' button.
- Workgroup:** A text input field.
- Username:** A text input field.
- Password:** A text input field.
- Create the folder:** A dropdown menu set to 'Yes' with a placeholder example '(ex:Path/20100115/121032m.avi)'. To its right is an 'Apply' button.

Click **Apply** to confirm settings at the bottom of **Server Settings**, then click **Test** icon to test the server connection.

Google Drive Setting

Select this option to send the media files unto the cloud server Google Drive whenever an event is triggered.

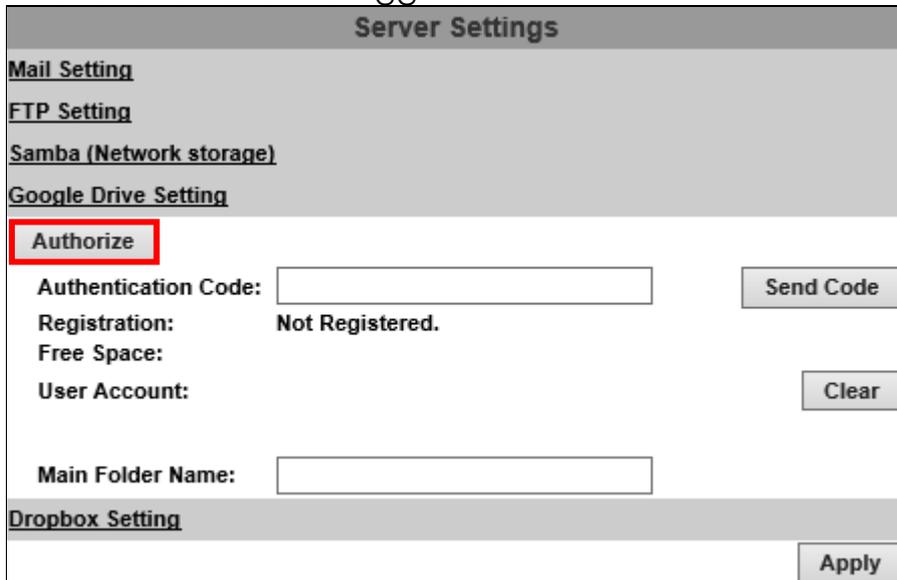

The screenshot shows the 'Server Settings' panel with the 'Google Drive Setting' section selected. The form includes the following fields and controls:


- Authorize:** A button highlighted with a red box.
- Authentication Code:** A text input field with a 'Send Code' button to its right.
- Registration:** A label with the text 'Not Registered.'
- Free Space:** A label.
- User Account:** A label with a 'Clear' button to its right.
- Main Folder Name:** A text input field.

At the bottom of the panel, there is an 'Apply' button.

You will have to sign in to the [Google Drive](#) network before you start the operation. If you have not yet been a Google user, the [online registration](#) will be required, and you will need to [sign in](#) first as a Google account user.


Below are the steps:

- i. Click **Authorize** to begin the online-registration operation. A window will pop up and require you to sign in for a Surveillance Client account directed by Google Drive server.

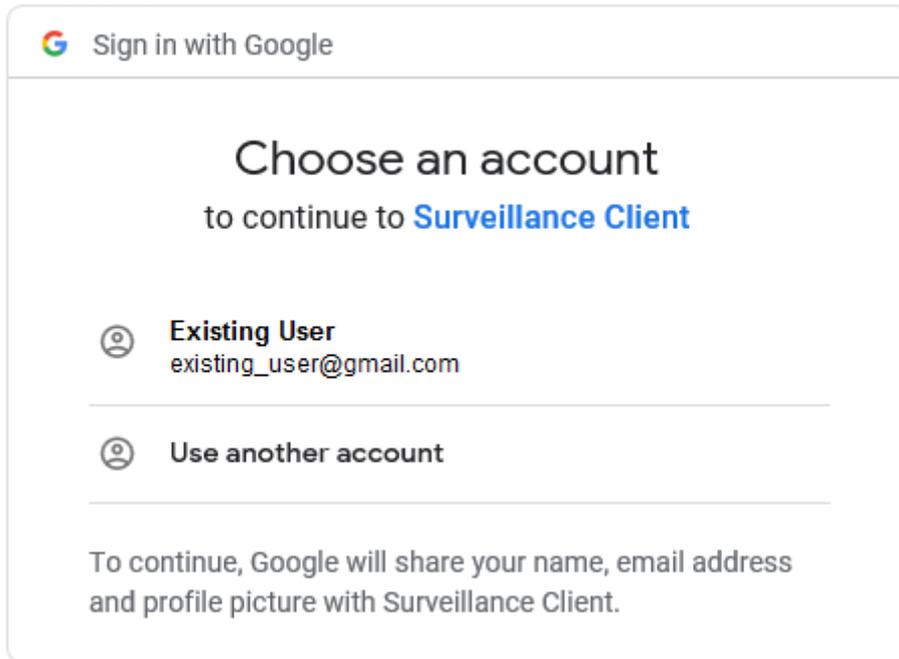


The screenshot shows a 'Sign in with Google' dialog box. At the top, it says 'Sign in with Google' with the Google logo. Below that, the main heading is 'Choose an account to continue to Surveillance Client'. There are two options listed: 'Existing User' with the email 'existing_user@gmail.com' and 'Use another account'. At the bottom, there is a note: 'To continue, Google will share your name, email address and profile picture with Surveillance Client.'

- ii. Choose **Existing User** to continue the operation if you have already owned a Google Drive account. Otherwise, you may choose **Use another account** and sign in as another Google account user.

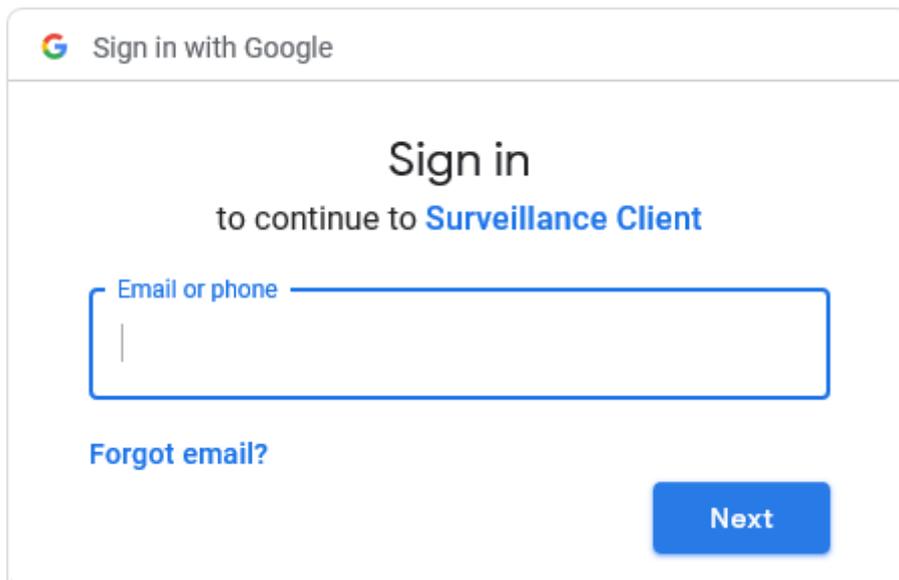

The screenshot shows a 'Sign in with Google' dialog box. At the top, it says 'Sign in with Google' with the Google logo. Below that, the main heading is 'Sign in to continue to Surveillance Client'. There is a text input field labeled 'Email or phone' with a vertical cursor. Below the input field, there is a link for 'Forgot email?'. At the bottom right, there is a blue button labeled 'Next'.

iii. Enter the password and click **Next**.

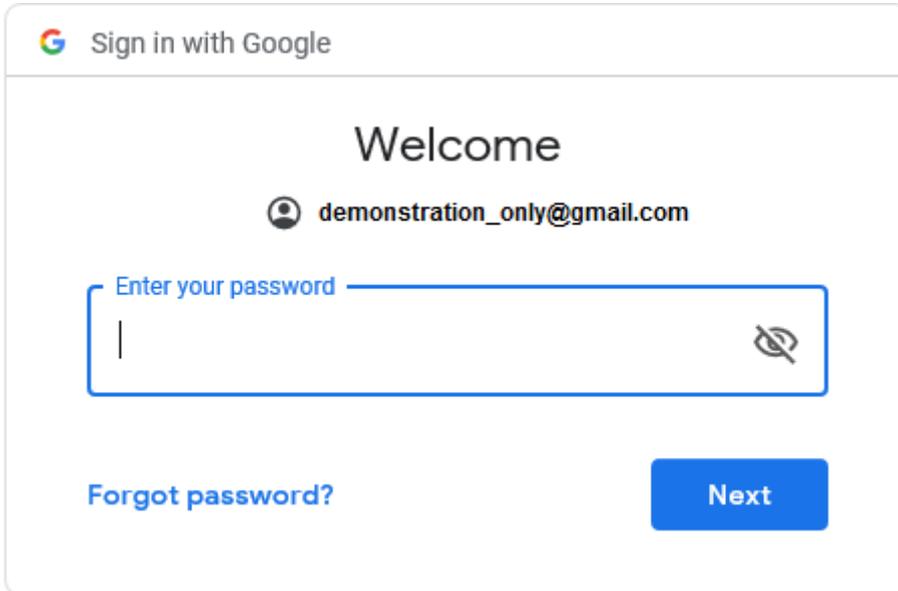

Sign in with Google

Welcome


demonstration_only@gmail.com

Enter your password

Forgot password? **Next**

The image shows a Google sign-in interface. At the top, it says "Sign in with Google". Below that, it says "Welcome" followed by the email address "demonstration_only@gmail.com". There is a password input field with the placeholder text "Enter your password" and a toggle icon for visibility. At the bottom, there is a link for "Forgot password?" and a blue "Next" button.

iv. Click **Allow**.

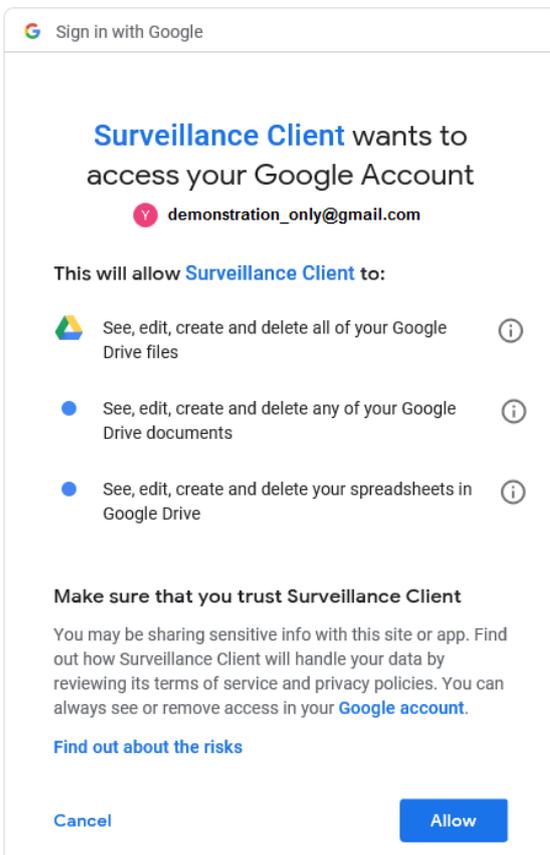

Sign in with Google

Surveillance Client wants to access your Google Account

demonstration_only@gmail.com

This will allow **Surveillance Client** to:

- See, edit, create and delete all of your Google Drive files
- See, edit, create and delete any of your Google Drive documents
- See, edit, create and delete your spreadsheets in Google Drive

Make sure that you trust Surveillance Client


You may be sharing sensitive info with this site or app. Find out how Surveillance Client will handle your data by reviewing its terms of service and privacy policies. You can always see or remove access in your [Google account](#).

[Find out about the risks](#)


Cancel **Allow**

The image shows a Google account access request dialog. It starts with "Sign in with Google". The main heading is "Surveillance Client wants to access your Google Account" followed by the email address "demonstration_only@gmail.com". Below that, it says "This will allow Surveillance Client to:" and lists three permissions: "See, edit, create and delete all of your Google Drive files", "See, edit, create and delete any of your Google Drive documents", and "See, edit, create and delete your spreadsheets in Google Drive". Each permission has an information icon. Below the list, it says "Make sure that you trust Surveillance Client" and provides a warning about sensitive information, along with a link to "Find out about the risks". At the bottom, there are "Cancel" and "Allow" buttons.


- v. **Authentication Code** will be generated by Google server.

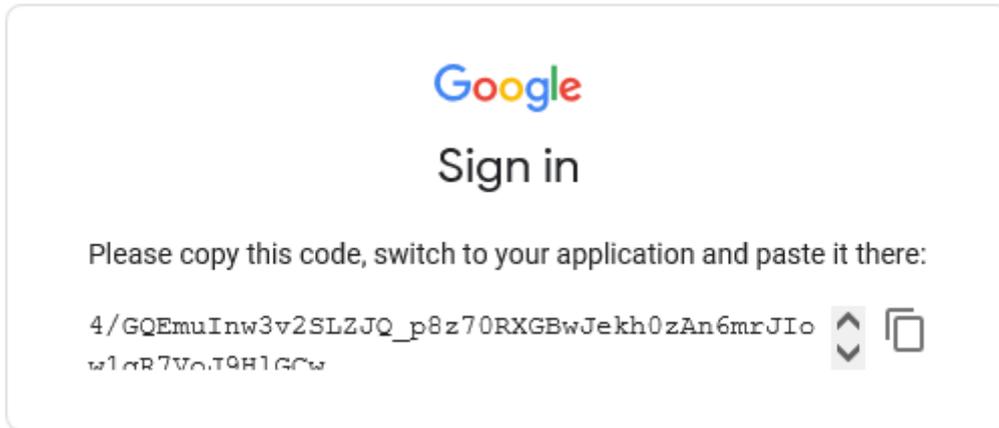


- vi. Paste the **Authentication Code** acquired from Google server in the required field, input the **Main Folder Name** of your preference and click **Send Code**.

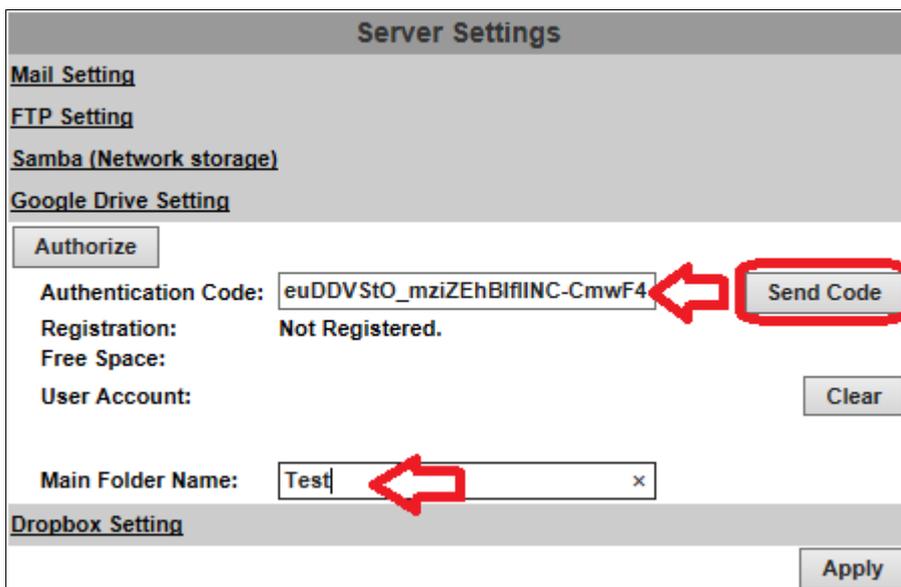

- vii. Please wait for around 15 seconds before clicking OK.

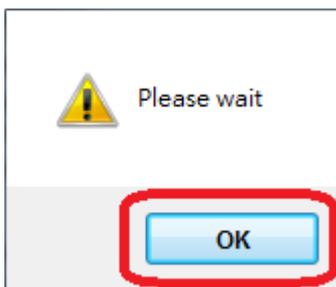

- viii. If the application is successful, you will be able to see a list of status displayed, as circled in red in the demonstration image.

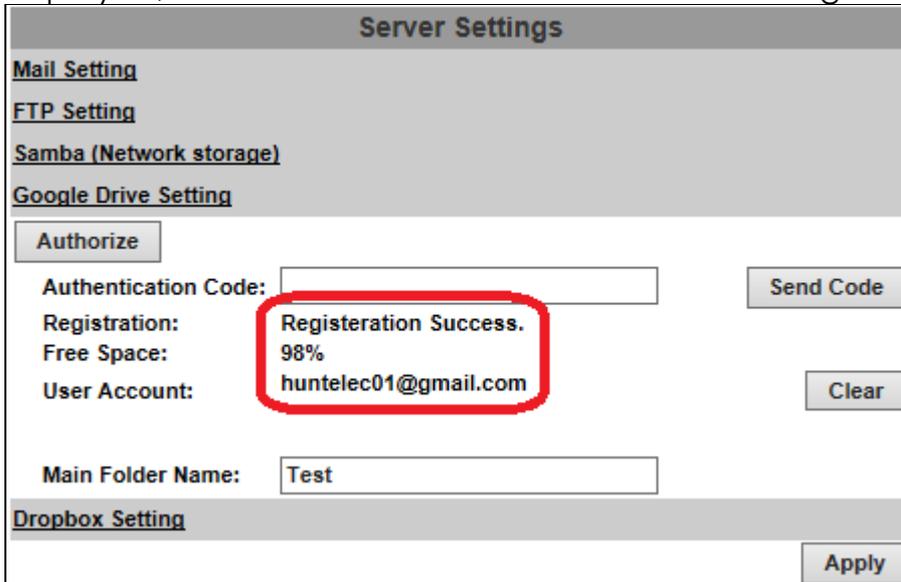

Server Settings

Mail Setting

FTP Setting

Samba (Network storage)

Google Drive Setting

Authorize

Authentication Code: Send Code

Registration: **Registration Success.**

Free Space: 98%

User Account: huntelec01@gmail.com Clear

Main Folder Name:


Dropbox Setting

Apply

Click **Apply** to confirm settings at the bottom of **Server Settings**. Click **Clear** to delete the current account registered for this server.

Dropbox Setting

Select this option to send the media files unto the cloud server Dropbox whenever an event is triggered.

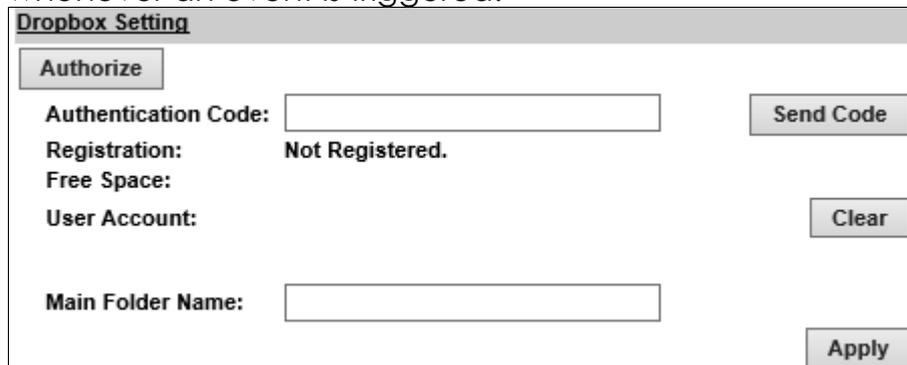

Dropbox Setting

Authorize

Authentication Code: Send Code

Registration: Not Registered.

Free Space:

User Account: Clear

Main Folder Name:

Apply

You will have to sign in to [Dropbox](#) network first. If you do not own an account, you will need to register one for free. If you have already created a Dropbox account, click **Authorize** to start the operation.

A window from the Dropbox server will open to ask you for signing-in. Enter **Authentication Code** in the required field and click **Send Code**. Click **Clear** to delete the current account registered for this server. Click **Apply** to confirm settings at the bottom of **Server Settings**.

Wireless Setting

(Optional, support 802.11 b/g/n)

For setting up the IP camera via wireless network, first, use the Ethernet cable to connect the camera.

Wireless Setting			
Status of Wireless Networks			
SSID	Mode	Security	Signal Strength
H	Infrastructure	WPA2PSK/AES	86
IPCAM	Infrastructure	WPA2PSK/AES	45
000000000000	Infrastructure	WPA2PSK/AES	26
R	Infrastructure	WPA1WPA2PSK/AES	57
T	Infrastructure	WPA2PSK/AES	26
TEST	Infrastructure	WPA1WPA2PSK/TKIPAES	44
e	Infrastructure	WPA1WPA2PSK/TKIPAES	26
G	Infrastructure	WPA2PSK/TKIPAES	26
D	Infrastructure	WPA1WPA2PSK/TKIPAES	26

After finishing & saving the wireless settings, remove the Ethernet cable.

Note: The IP address is the same under both wireless and wired network. If the Ethernet cable is plugged in the camera, the IP camera will use it to link to the Internet instead of the wireless router.

Status of Networks in Wireless Setting

The camera scans and shows the SSID, Mode, Security, and Signal strength of the wireless network.

Wireless Setting	
MAC Address:	00:0D:F0:64:27:AC
Mode:	Ad-hoc
Operation Mode:	Auto
SSID:	Default
Domain:	FCC (1~11Ch)
Channel:	6
Security:	None

Mode: Infrastructure mode is used to link to the wireless router.

Ad-hoc mode is used to link to the PC directly.

Domain and **Channel** options appear only in the Ad-hoc mode.


Ad-hoc is a short term derived from wireless ad hoc network, known as **WANET**. This type of network is only established temporarily, and does not rely on a pre-existing network through a router or Wireless Access Point.

Connecting to an ad-hoc Wi-Fi network


To make the Ad-hoc mode available, follow the steps below.

This demonstration is done manually and specifically applied to Windows 8.1 since Windows 8.1 no longer shows Ad-hoc network in the Wi-Fi list.


The following example is based on another type of IP camera.
Go to "Control Panel", then "Network and Internet".

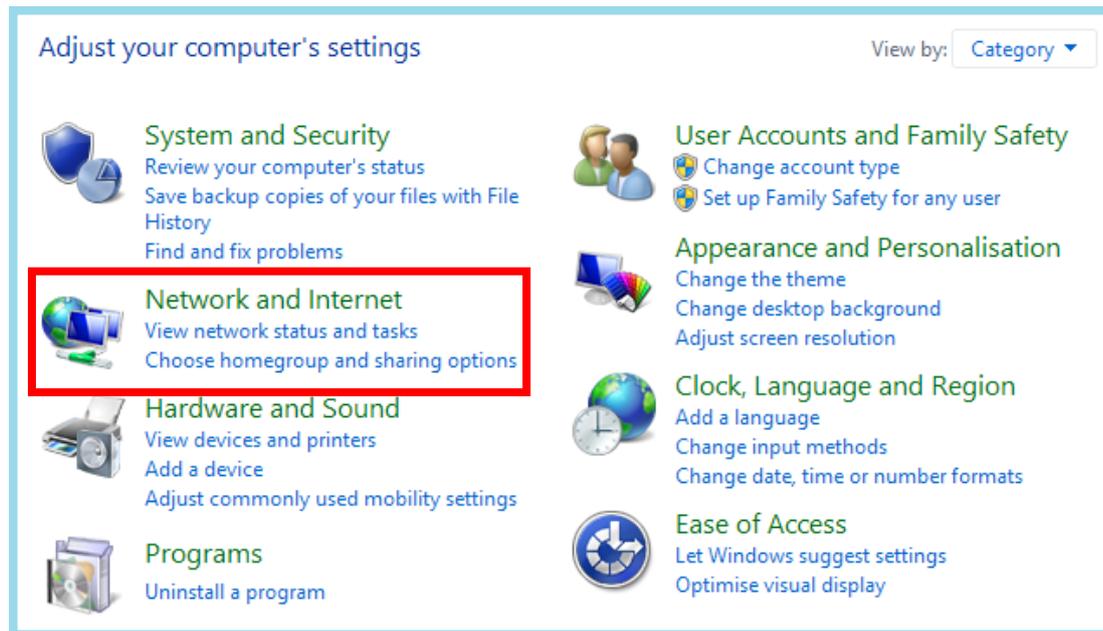


Click "Network and Sharing Center".

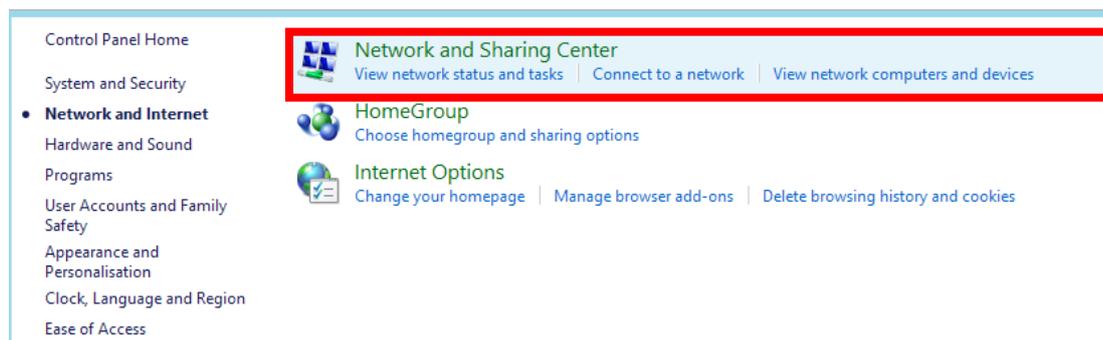

Click "Set up a new connection or network".

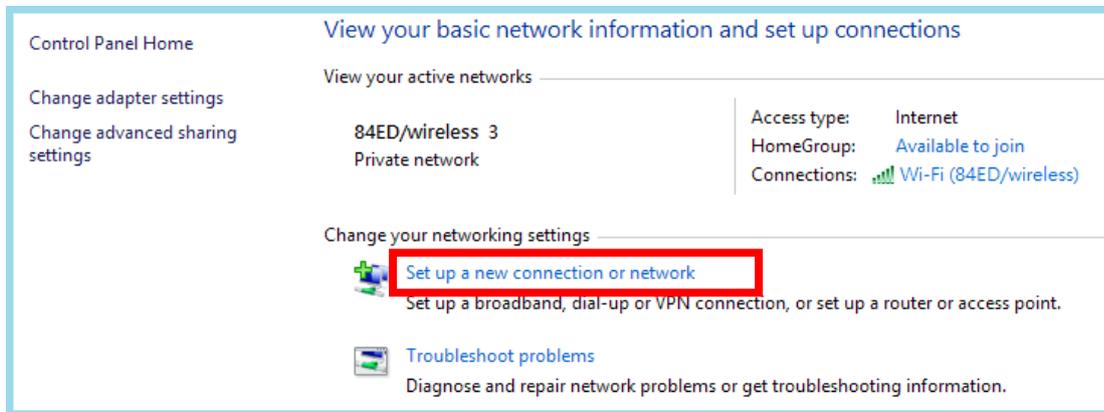

Double click "Manually connect to a wireless network".

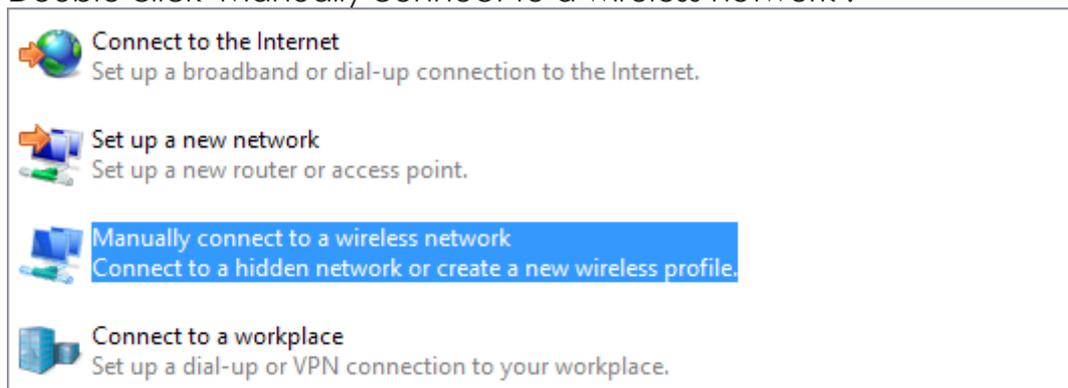

Enter the SSID of the ad-hoc network (as shown by "netsh wlan show networks") into the "Network name" field.

Configure security settings accordingly.

Enter information for the wireless network that you want to add

Network name:

Security type:

Encryption type:


Security Key: Hide characters

Start this connection automatically **Do not check this!**


Connect even if the network is not broadcasting
Warning: If you select this option, your computer's privacy might be at risk.

Make sure that "Start this connection automatically" is unchecked, click "Next", then "Close"

Open the search window (Windows key+Q) and search for "cmd"

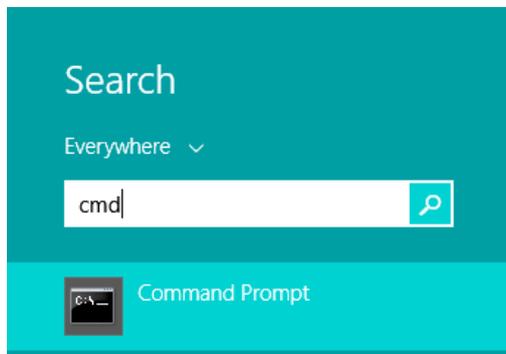


Run the command to open up a new window.

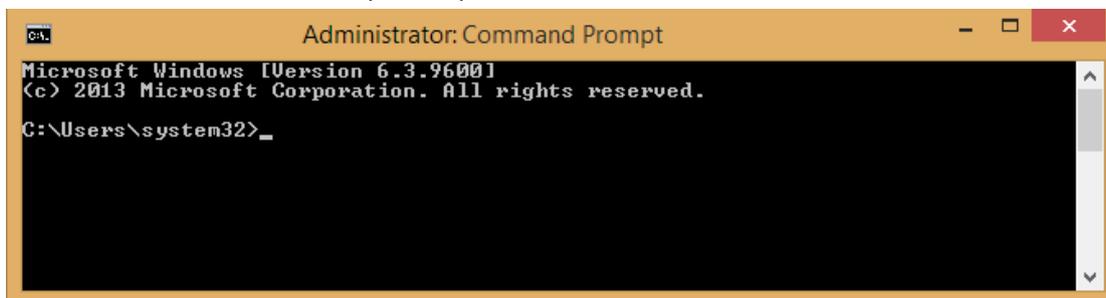

Enter the messages below.

- (1) > netsh wlan set profileparameter <ssid> connectiontype=ibss
- (2) > netsh wlan connect <ssid>

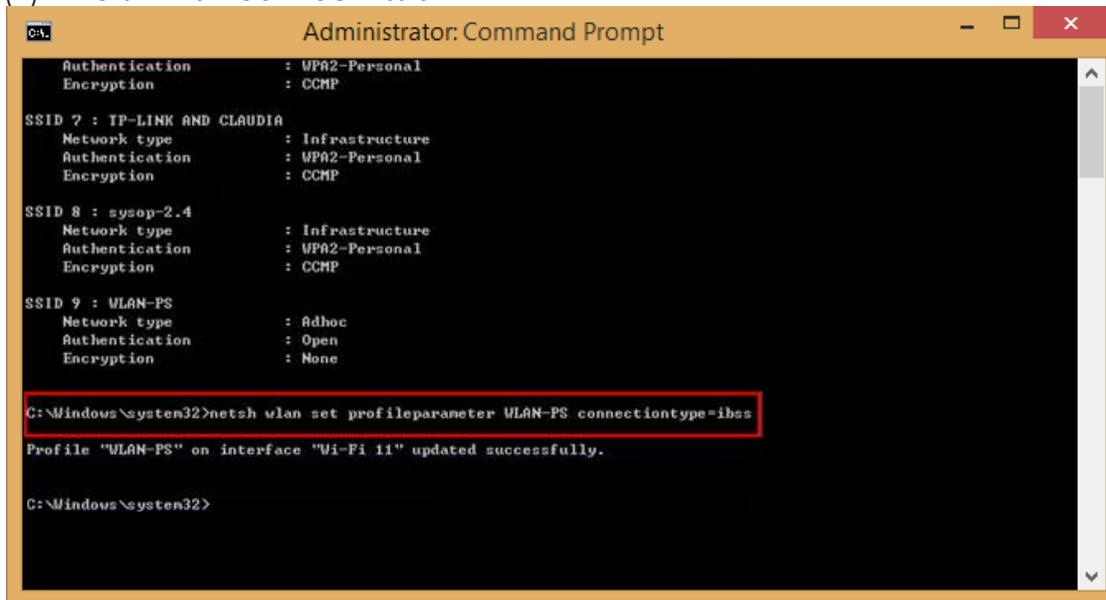


```
Administrator: Command Prompt
Authentication : WPA2-Personal
Encryption : CCMP
SSID 7 : TP-LINK AND CLAUDIA
Network type : Infrastructure
Authentication : WPA2-Personal
Encryption : CCMP
SSID 8 : sysop-2.4
Network type : Infrastructure
Authentication : WPA2-Personal
Encryption : CCMP
SSID 9 : WLAN-PS
Network type : Adhoc
Authentication : Open
Encryption : None

C:\Windows\system32>netsh wlan set profileparameter WLAN-PS connectiontype=ibss
Profile "WLAN-PS" on interface "Wi-Fi 11" updated successfully.

C:\Windows\system32>
```

Now **Ad-hoc** mode is available after the IP settings completion.

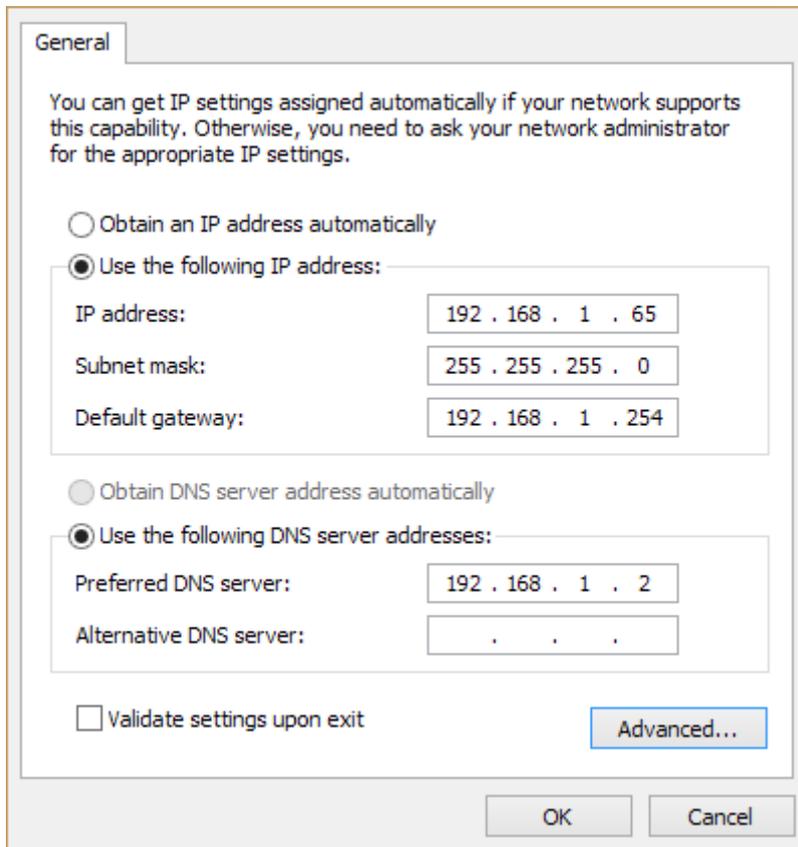

General

You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.

Obtain an IP address automatically

Use the following IP address:

IP address:	192 . 168 . 1 . 65
Subnet mask:	255 . 255 . 255 . 0
Default gateway:	192 . 168 . 1 . 254

Obtain DNS server address automatically

Use the following DNS server addresses:

Preferred DNS server:	192 . 168 . 1 . 2
Alternative DNS server:	. . .

Validate settings upon exit

Advanced...

OK Cancel

- **SSID:** The ID of the wireless network service.
- **Domain:** The wireless network standards are different in each region. Please select the wireless standard of your location. FCC is the American standard. ETSI is the European standard. JP is the Japanese standard.
- **Channel:** Assign a channel for the camera in order to avoid interference.
- **Security:** Select WEP, WPA-PSK, or WPA2-PSK according to your wireless router settings.

WEP Setting

WEP Setting	
Authentication:	Shared Key ▾
Encryption:	64 bit ▾
Key Type:	HEX ▾ (10 character max)
Key 1:	<input type="radio"/> <input type="text"/>
Key 2:	<input checked="" type="radio"/> <input type="text"/>
Key 3:	<input type="radio"/> <input type="text"/>
Key 4:	<input type="radio"/> <input type="text"/>

- **Authentication:** Open System or Shared Key, according to your wireless router.
- **Encryption:** The option determines the length of the key password. In **HEX** type, 10 characters are allowed if you select 64 bit; 26 characters are allowed if you select 128bit; In **ASCII** type, 5 characters are allowed if you select 64 bit; 13 characters are allowed if you select 128bit.
- **Key Type:** In **HEX** type, the key password can only be hexadecimal numbers. In **ASCII** type, the key password can be any letter and number. (Capital and lowercase letters are regarded as different.)
- **Key 1~4:** Key in the key password according to your wireless router setting. The length and type must be consistent with the settings above.

WPA-PSK/ WPA2-PSK Setting

WPA-PSK Setting	
Encryption	TKIP ▾
Pre-Shared Key:	<input type="text" value="23133690"/> (ASCII format, 8~63)


- **Encryption:** TKIP or AES, according to your wireless router.

- **Pre-Shared Key:** Key-in the key password according to your wireless router settings. Any letters and numbers are allowed. (Capital and lowercase letters are regarded as different.)

III. A/V Settings



Click  to get into the administration page. Click  to go back to the live video page.

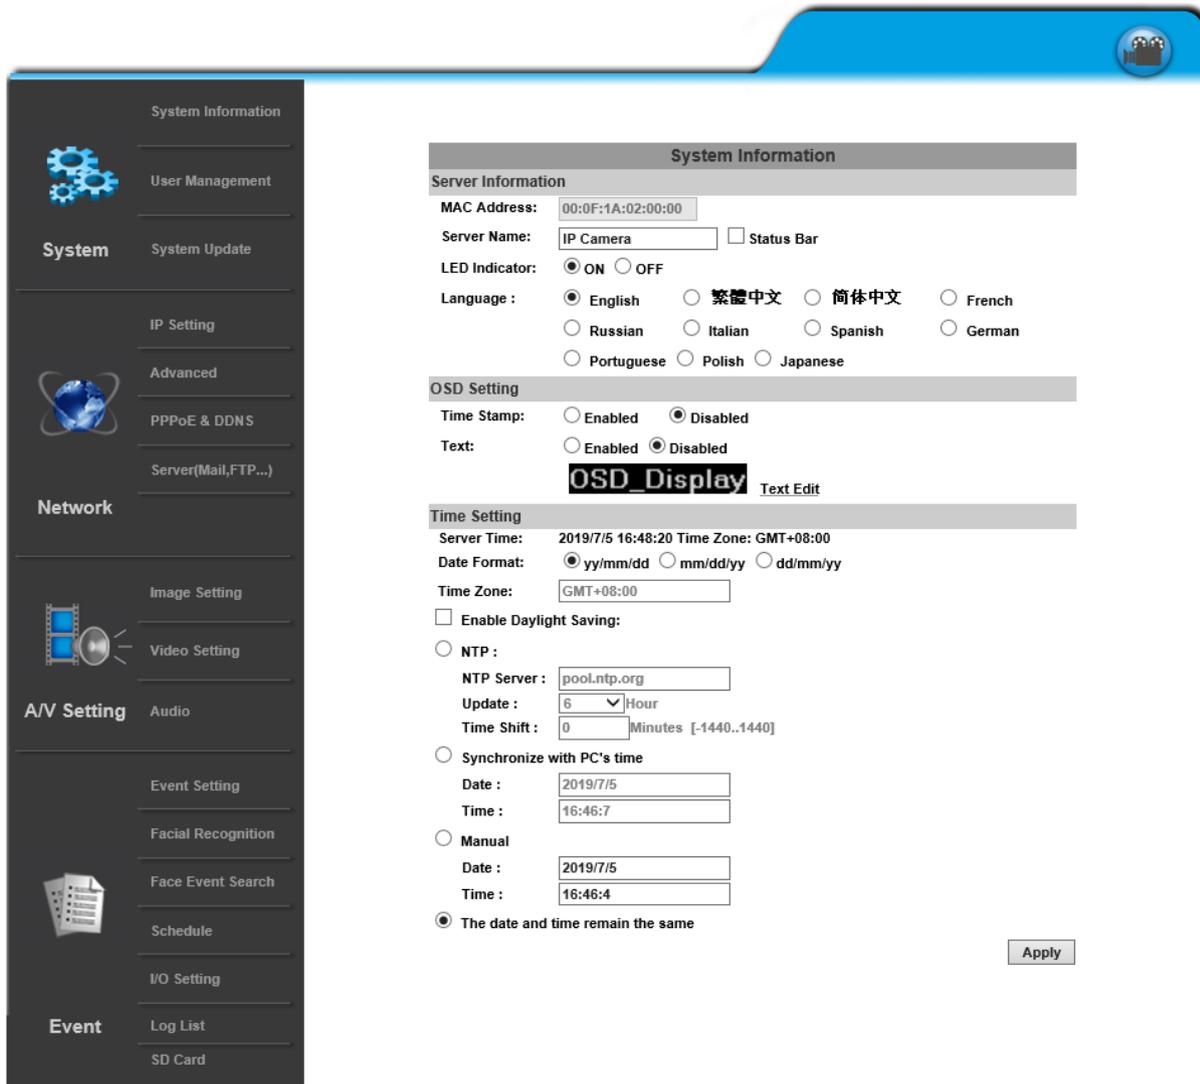The screenshot shows the IP Camera administration interface. On the left is a navigation menu with categories: System, Network, A/V Setting, and Event. The 'A/V Setting' category is selected, showing sub-items: Audio, Video Setting, Image Setting, and Event Setting. The main content area is titled 'System Information' and contains several configuration sections:

- Server Information:**
 - MAC Address: 00:0F:1A:02:00:00
 - Server Name: IP Camera Status Bar
 - LED Indicator: ON OFF
 - Language: English 繁體中文 简体中文 French Russian Italian Spanish German Portuguese Polish Japanese
- OSD Setting:**
 - Time Stamp: Enabled Disabled
 - Text: Enabled Disabled
 - OSD Display
- Time Setting:**
 - Server Time: 2019/7/5 16:48:20 Time Zone: GMT+08:00
 - Date Format: yy/mm/dd mm/dd/yy dd/mm/yy
 - Time Zone: GMT+08:00
 - Enable Daylight Saving:
 - NTP:
 - NTP Server: pool.ntp.org
 - Update: 6 | Hour
 - Time Shift: 0 | Minutes [-1440..1440]
 - Synchronize with PC's time
 - Date: 2019/7/5
 - Time: 16:46:7
 - Manual
 - Date: 2019/7/5
 - Time: 16:46:4
 - The date and time remain the same


An 'Apply' button is located at the bottom right of the configuration area.

Image Setting


Camera

Previewing the result of the settings made in [Image Setting](#).

Privacy Mask

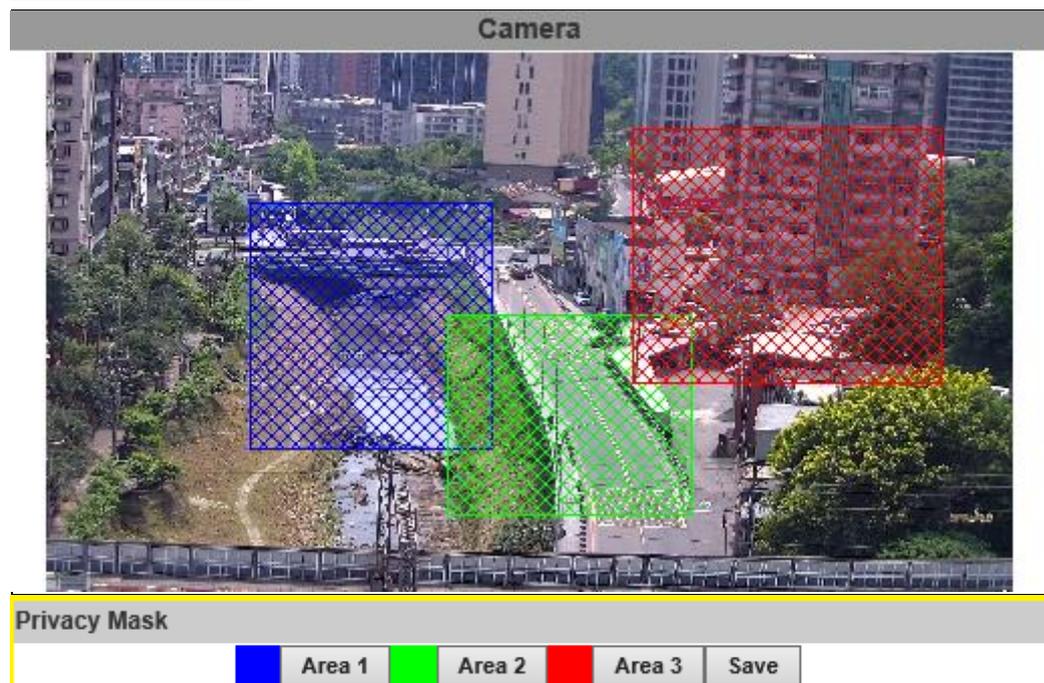

An area on the monitoring screen can be masked as a block of particular color only in **live view** for security and privacy purposes, but will not be visible in the video recorded. You can create up to 3 privacy masks.

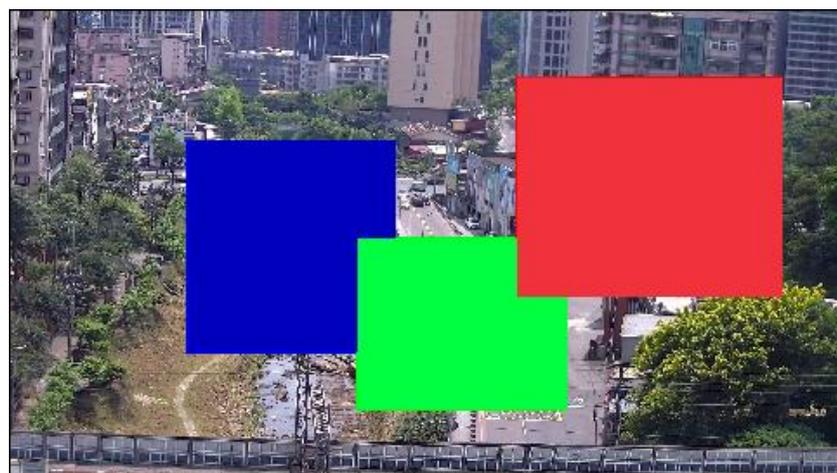

Click any **Area 1/2/3** button first, and then draw an area on the preview image screen with mouse.

Click **Save** to apply settings and create the mask.
 Click **Area 1/2/3** button again, and click **Save** to discard the masked area previously set.

Image Setting

Settings can be adjusted under **Day Profile & Night Profile** drop-down lists. Activate these profile settings by enabling **Times Mode** from **Day & Night**, the configurations from **both Day & Night Profiles** will be automatically adjusted between daytime and nighttime.

There are two types of **Image Setting** to switch with depending on what **Input Resolution** from **Video Setting** you have applied to the camera.
 Input Resolution without WDR feature:

Video Setting		
Input Resolution:	1920x1080 @ 30fps ▼	
Image Setting	Day Profile	Night Profile
Brightness:	0 ▼	0 ▼
Contrast:	0 ▼	0 ▼
Hue:	0 ▼	0 ▼
Sharpness:	0 ▼	0 ▼
D-WDR:	1 (Low) ▼	1 (Low) ▼
Denoise 3D:	2 ▼	2 ▼
Denoise 2D:	1 ▼	1 ▼
AGC:	64x ▼	64x ▼
Shutter Time:	Outdoor ▼	Outdoor ▼

Input Resolution with WDR feature:


Video Setting		
Input Resolution:	1920x1080_WDR @ 30fps ▼	
Image Setting	Day Profile	Night Profile
Brightness:	0 ▼	0 ▼
Contrast:	0 ▼	0 ▼
Hue:	0 ▼	0 ▼
Sharpness:	0 ▼	0 ▼
True WDR:	4 ▼	0 (Low) ▼
Denoise 3D:	7 ▼	2 ▼
Denoise 2D:	6 ▼	1 ▼
AGC:	40x ▼	40x ▼
Shutter Time:	Outdoor ▼	Outdoor ▼
AE Strategymode:	Lowlight priority ▼	

- **Brightness / Contrast / Hue / Sharpness:** Different values are adjusted here.
- **D-WDR:** It enables the camera to reduce the contrast in the view to avoid dark zones as a result of over & under exposure.
- **True-WDR:** It enables the camera to combine the over & under exposures to smooth out dark zones for best image quality.
- **Denoise 3D & 2D:** Filter the noise and blur from the image and show a clearer view. You can set the values for **3D & 2D** filters.
- **AGC:** The sensitivity of the camera can be adjusted according to its environmental lighting. Enable this function to get brighter images on low light, but the level of noise may also increase.
- **Shutter Time:** Choose the location of your camera or a fixed shutter time. The shorter the shutter time is the less light the camera receives and the image becomes darker. **Note:** When you select a number in **Shutter Time**, the shutter time will vary in a range and be controlled by camera automatically. The following table shows the shutter time options and corresponding range.
- **AE Strategymode:** Select **Lowlight Priority** or **Highlight Priority** to adjust the view in preference of lightening or darkening the contrast.


Sense-Up:	1/15 ▾
Saturation:	0 ▾
Low Lux Auto-adjust:	<input checked="" type="checkbox"/>
Anti Fog:	<input type="checkbox"/> Enable
Lens Distortion Correction:	Off ▾
Video Orientation:	<input type="checkbox"/> Flip <input type="checkbox"/> Mirror

- **Sense-Up:** Increases the sensitivity of camera to get brighter image at night. The smaller value you select, the slower shutter speed becomes. So that the image will get brighter, and moving subjects might be blurred.
 - **Saturation:** Adjust the saturation values here.
 - **Low Lux Auto-adjust:** Click to enable the camera to adjust its low lux level automatically in different lighting environments.
 - **Anti Fog:** Improve the image clarity on environments presenting high levels of fog or smoke.
-

- **Lens Distortion Correction:** Straighten the curves in the borders of the image caused by the lens angles.
- **Video Orientation:** Flip or mirror the image.
- **Day & Night:** Select a mode from its drop-down menu and adjust the camera to detect the light level for different environments. Settings vary when modes are shifted. An extra sub-function may appear to be available after a setting is adjusted.

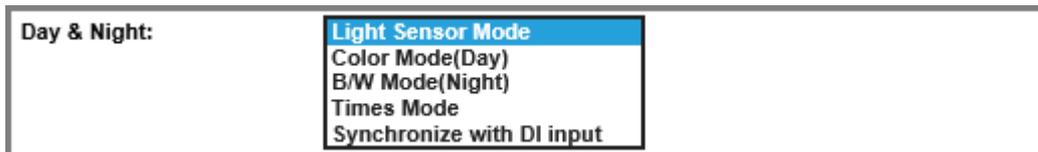

Light Sensor Mode: Automatically adjust itself depending on the light of the monitoring scene.

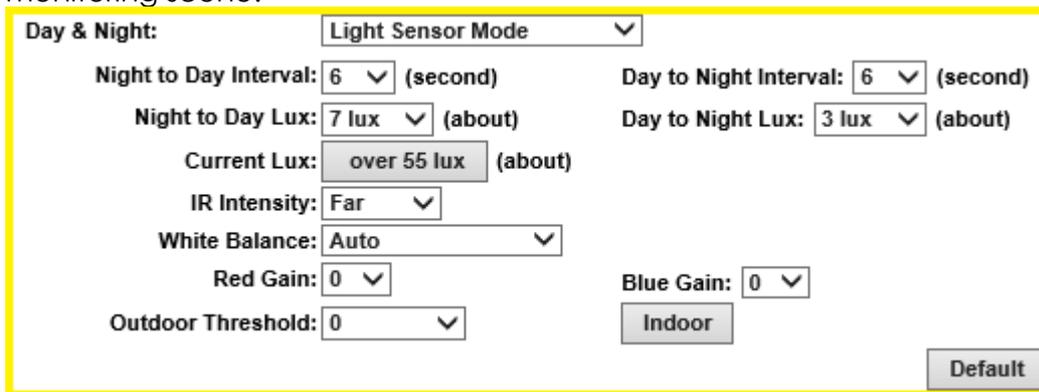

- ◆ **Night to Day Interval & Day to Night Interval:** Set up the duration of how long before the Day time shifts to Night time (or the other way around).
- ◆ **Day to Night Lux & Night to Day Lux:** Appoint desired lux values as a standard for switching Night to Day Interval & Day to Night Interval.
- ◆ **Current Lux:** Referenced to adjust the **Day to Night Lux & Night to Day Lux.**
- ◆ **IR Intensity:** Adjust the IR intensity level from Far, Middle or Near.
- ◆ **White Balance:** Apart from **AUTO**, which continuously adjusts image color balance according to any change of lightings in various scenes, the other 5 modes are designed for specific lighting conditions such as **Tungsten Lamp**, **Fluorescent Lamp**, **Sunlight**, **Cloudy**, and **Cloudy Days**.

- ◆ **Red & Blue Gain:** Adjust levels in red & blue contrasts in the image. Be aware that when these levels are increased, the image quality will become sharper to a point that noise of the image will also be increased.
- ◆ **Outdoor Threshold:** Values applied for this feature will define how sensitive the motion detection is triggered for outdoor scenes. The lower the number, the less motion will be conditioned for triggering.
- ◆ **Indoor:** Click to enable operation for any indoor motion detections.
- ◆ **Default:** Click on button to restore the default settings.

Color Mode: Recommended to use for daytime.

Day & Night:

White Balance:

Red Gain: Blue Gain:

Outdoor Threshold:

- ◆ Please refer to **Light Sensor Mode** for repeated functions.

B/W Mode: Recommended to use for nighttime.

Day & Night:

IR Intensity:

White Balance:

Red Gain: Blue Gain:

Outdoor Threshold:

- ◆ Please refer to **Light Sensor Mode** for repeated functions.

Times Mode: Set the values in **Brightness, Contrast, Sharpness,** and **Denoise(3D&2D)** for both **Day Profile** and **Night Profile** to be performed according to the **Time** arranged from **Day** to **Night**.

Day & Night:

Time: Day: Night: (HH:MM)

IR Intensity:

White Balance:


Red Gain: Blue Gain:

Outdoor Threshold:

- ◆ **Time:** The user can define when the daytime (**Day**) starts by filling in the digits such as 05:00 or 12:35. (Hours range: 0~23, minutes range: 0~59)
The example is as below:
Time: Day: Night: (HH:MM)
If the time range is inaccurate, a window will pop up to remind you.
Same way applies to filling the nighttime (**Night**).
Click when settings are completed.

- ◆ Please refer to **Light Sensor Mode** for repeated functions.

Synchronize with DI input: Settings are adjusted according to the DI input functions.

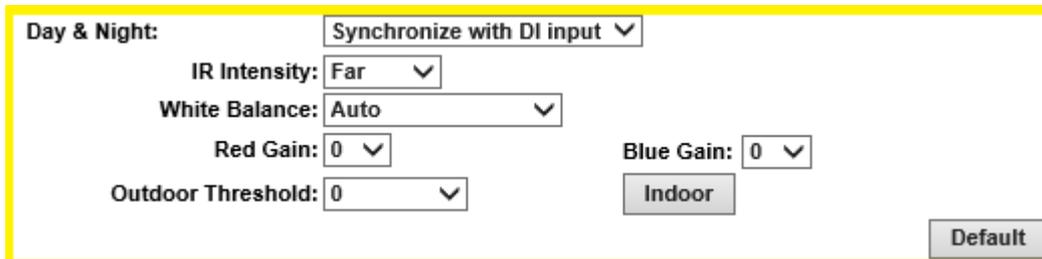

Day & Night:
IR Intensity:
White Balance:
Red Gain: Blue Gain:
Outdoor Threshold:

- ◆ Please refer to **Light Sensor Mode** for repeated functions.

Video Setting

Video System

- **Input Resolution:** Click to assign input resolution for captured video files. Features vary in FPS (frames-per-second) and will modify the options from [Image Setting](#).

Input Resolution without **WDR** features:




Video Setting	
Input Resolution:	1920x1080 @ 30fps ▾
Video System:	NTSC ▾
TV Output:	Auto ▾ (Auto : Based on the Video System)
Corridor Mode:	none ▾

Input Resolution with **WDR** features:

Video Setting	
Input Resolution:	1920x1080_WDR @ 30fps ▾
Video System:	NTSC ▾
TV Output:	Auto ▾ (Auto : Based on the Video System)
Corridor Mode:	none ▾




- **Video System:** Choose from **NTSC** or **PAL** for video signal.
- **TV Output:** Choose Auto or select between **NTSC** and **PAL** signal.
- **Corridor Mode:** 90 degrees, 270 degrees or none. If **Corridor Mode** is set as **none** the relation of the image and the camera would be as the following:

Corridor mode: None

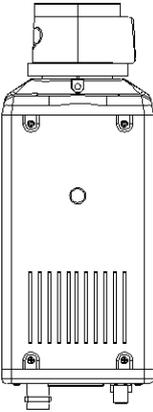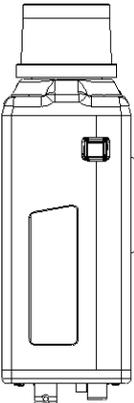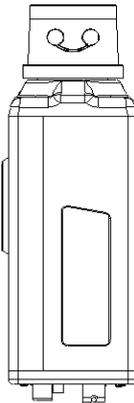Degrees	Position	Image
0 degrees		
90 degrees		
270 degrees		

If Corridor Mode is set as **90 degrees** or **270 degrees** the relation of the image and the camera would be as the following:


Corridor Mode: 90 or 270 degrees

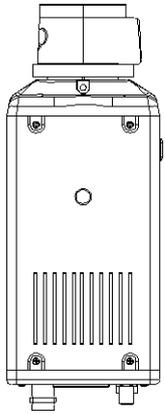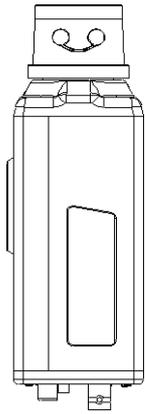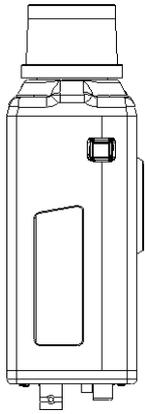Degrees	Position	Image
0 degrees		
90 degrees		
270 degrees		

Streaming Settings


1) Basic Mode

Resolution range varies depending on different modes.

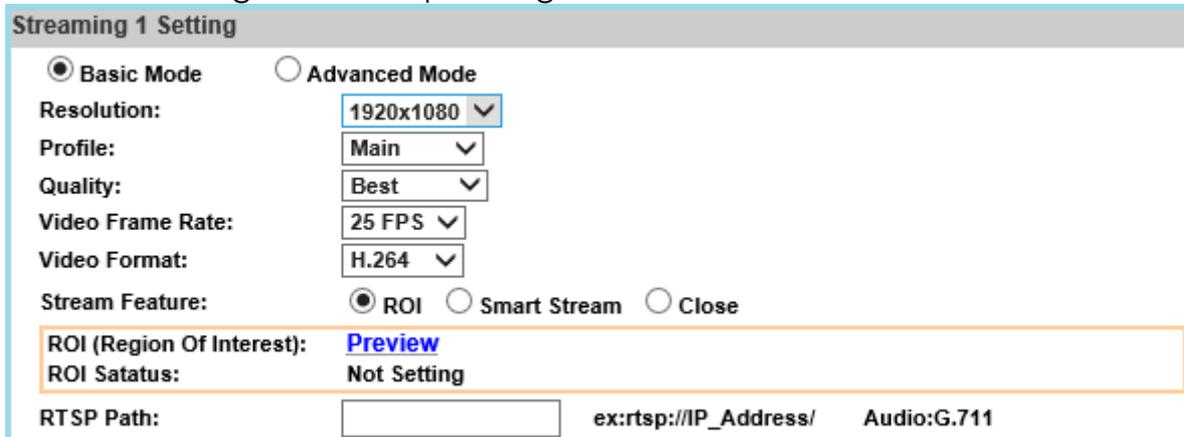

- **Resolution:** Choose a set for the camera resolution from 1920x1080@30fps, 1280x720@30fps, 640x480@30fps, 320x240@30fps
- **Profile:** Chose from Main or Baseline based on bandwidth consumption of the recorded video to be replayed for different applications.
- **Quality:** Levels vary from Best, High, Standard, Medium to Low. The higher the quality, the bigger the file size. Not ideal for internet transmission.
- **Video Frame Rate:** Adjust the video refreshing rate for each second.
- **Video Format:** Select from H.264+, H.264 or JPEG
- **Stream Feature:** Select from the options for operating different features.

Note: You MUST click  at the bottom after selecting the feature to enable either ROI or Smart Stream.

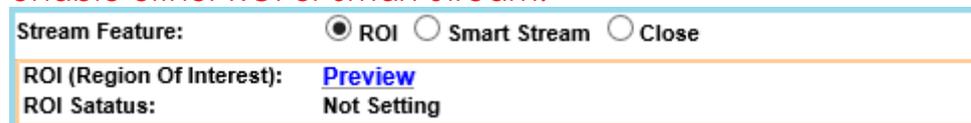


- **ROI (Region of Interest)**

This function helps refine any specific part of the monitoring area which can be dragged out with the mouse at a time, improving efficiency in image observation and management in video compression rate.

Click [Preview](#) to enable ROI the function. Click on any of the colors in **Area Setting** to draw an ROI area on the preview screen by dragging your mouse. You can set up to approximately 3 ROI areas.

ROI (Region Of Interest): ON OFF [Preview](#)

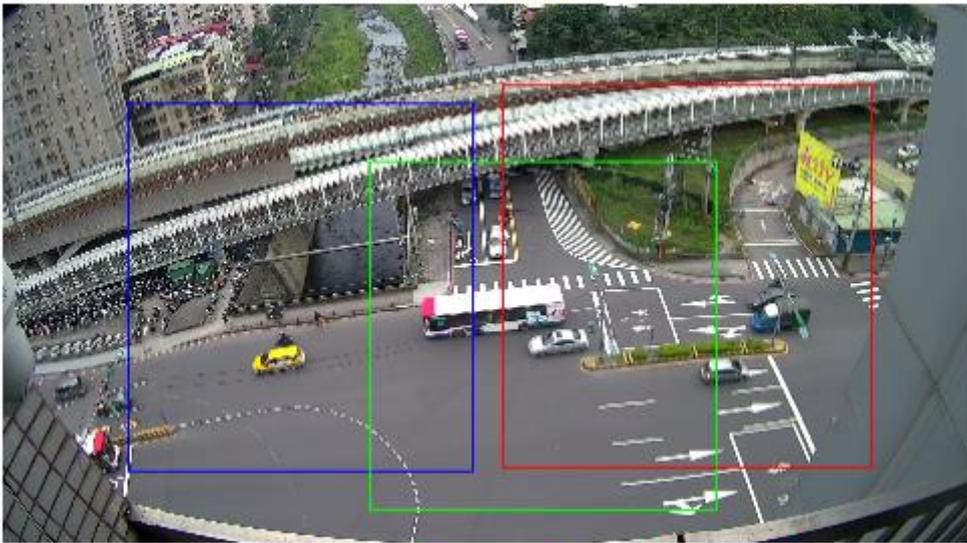

Area Setting: Area 1 Area 2 Area 3 Save

ROI Area Quality: 5 5 5

FPS of None ROI: 25 FPS (ROI FPS equals to Video Frame Rate)

Adjust the **ROI Area Quality** and **FPS of None ROI** values of each area from each drop down list.

You can see the **ROI Status** once **ROI** is activated.

Stream Feature: ROI Smart Stream Close

ROI (Region Of Interest): [Preview](#)

ROI Satatus: Area1_ON,Area2_ON,Area3_ON,FPS of None ROI=5,ROI Area Quality=Best

Smart Stream: Enable this mode, set the range of FPS and Bitrate to limit its stream capacity, in order to preserve a better performance of image quality and save more bandwidth.

Stream Feature: ROI Smart Stream Close

Smart Stream FPS: 3 FPS

Smart Stream Bitrate: 512Kbps

- **RTSP Path:** Offers the RTSP output connecting path.

2) Advanced Mode

Resolution range varies depending on different modes.

Streaming 1 Setting

Basic Mode **Advanced Mode**

Resolution:

Profile:

Bitrate Control Mode: CBR **CVBR**

Video Quantitative:

Video Bitrate Limit:

Video Frame Rate:

GOP Size: GOP = 25

Video Format:

Stream Feature: **ROI** Smart Stream Close

ROI (Region Of Interest): [Preview](#)

ROI Satatus: Not Setting

RTSP Path: ex:rtsp://IP_Address/ Audio:G.711

- **Resolution:** Choose the resolution of the video image from 1920x1080@30fps, 1280x720@30fps, 640x480@30fps, 320x240@30fps
- **Profile:** Chose from Main or Baseline based on bandwidth consumption of the recorded video to be replayed for different applications.
- **Bitrate Control Mode:** There are **CBR**(Constant Bit Rate) and **CVBR**(Constrained Variable Bit Rate) modes.

CBR: Video Bitrate Limit: (32Kbps~8Mbps)
The higher the CBR is, the better the video quality is.

CVBR: Video Quantitative: 1(Low) ~10(High)
The higher the compression rate, the lower the picture quality is; vice versa. Avoid image breaking up or lagging by setting the bandwidth limit for CVBR streaming.

- **Video Frame Rate:** The video refreshing rate per second.
- **GOP Size:** It means "Group of Pictures". The higher the GOP is, the better the quality is.
- **Video Format:** Choose from H.264+, H.264 or JPEG
- **Stream Feature:** Select from the options for operating different features.

Note: You MUST click at the bottom after selecting the feature to enable either ROI or Smart Stream.


Stream Feature:	<input checked="" type="radio"/> ROI <input type="radio"/> Smart Stream <input type="radio"/> Close
ROI (Region Of Interest):	Preview
ROI Satatus:	Not Setting

ROI (Region of Interest)

This function helps refine any specific part of the monitoring area which can be dragged out with the mouse at a time, improving efficiency in image observation and management in video compression rate.

Click [Preview](#) to enable ROI the function. Click on any of the colors in Area Setting to draw an ROI area on the preview screen by dragging your mouse. You can set up to approximately 3 ROI areas.

Adjust the ROI Area Quality and FPS of None ROI values of each area from each drop down list.

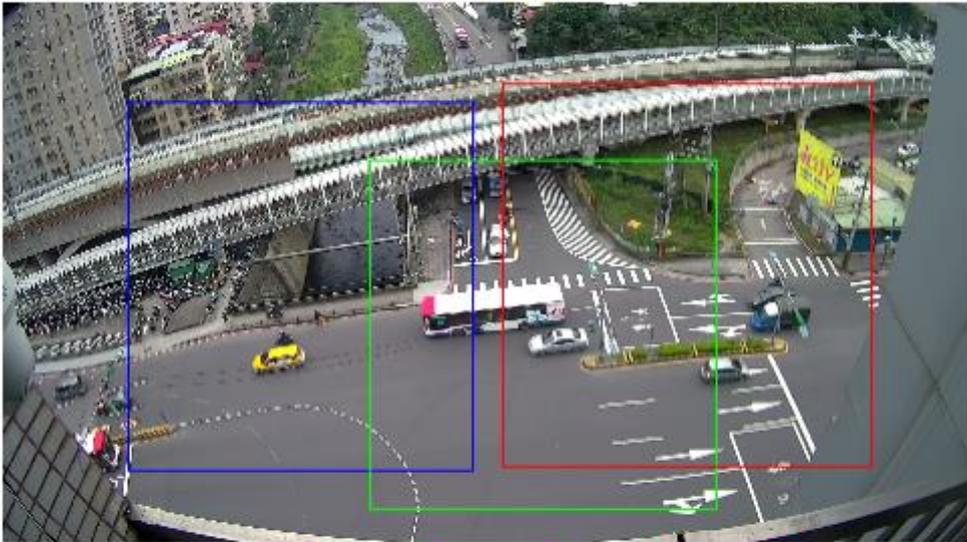ROI (Region Of Interest):	<input checked="" type="radio"/> ON <input type="radio"/> OFF	Preview
		
Area Setting:	<input checked="" type="checkbox"/> Area 1 <input type="checkbox"/> Area 2 <input type="checkbox"/> Area 3	<input type="button" value="Save"/>
ROI Area Quality:	<input checked="" type="checkbox"/> 5 <input type="checkbox"/> 5 <input type="checkbox"/> 5	
FPS of None ROI:	25 FPS	(ROI FPS equals to Video Frame Rate)

After the ROI is set in the Stream Feature, you can see the ROI Status once ROI is activated.

Stream Feature:	<input checked="" type="radio"/> ROI <input type="radio"/> Smart Stream <input type="radio"/> Close
ROI (Region Of Interest):	Preview
ROI Satatus:	Area1_ON,Area2_ON,Area3_ON,FPS of None ROI=5,ROI Area Quality=Best

Smart Stream

Stream Feature:	<input type="radio"/> ROI <input checked="" type="radio"/> Smart Stream <input type="radio"/> Close
Smart Stream FPS:	3 FPS ▼
Smart Stream Bitrate:	512Kbps ▼

Enable this mode, set the range of FPS and Bitrate to limit its stream capacity, in order to preserve a better performance of image quality and save more bandwidth.

- **RTSP Path**: Offers the RTSP output connecting path.

Snapshot Setting

Select the image quality from 1 (Low) ~10(High).

Snapshot Setting	
Quality:	8 ▼

3GPP Streaming Setting


TV output will be shut down during this mode.

3GPP Streaming Setting	
<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled	
Resolution:	320x240 ▼
Video Bitrate Limit:	256Kbps ▼
Video Frame Rate:	15 FPS ▼
Video Format:	MPEG4 ▼
RTSP Path:	v3 <small>ex:rtsp://IP_Address/v3</small> Audio:AMR
<input type="button" value="Apply"/>	

- **Resolution**: 640x480@15fps, 320x240@15fps
- **Video Bitrate**: The higher Video Bitrate, the better the video quality is.
- **Video Frame Rate**: The video refreshing rate per second.
- **Video Format**: H.264+, H.264
- **RTSP Path**: Offers the RTSP output connecting path.

Please click on the button to keep the changes when all the settings are completed and confirmed.

Audio

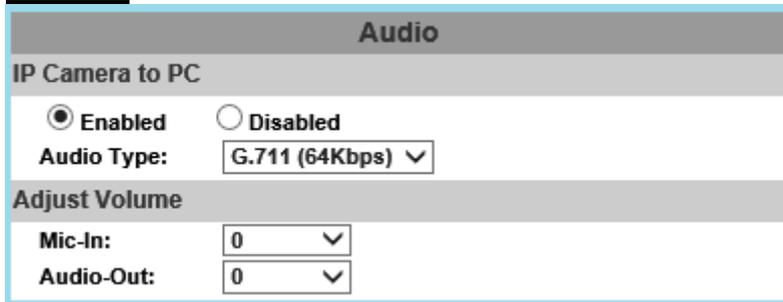

The screenshot shows the 'Audio' configuration page. Under the 'IP Camera to PC' section, the 'Enabled' radio button is selected, and the 'Audio Type' is set to 'G.711 (64Kbps)'. In the 'Adjust Volume' section, both 'Mic-In' and 'Audio-Out' volume levels are set to 0.

The user can send audio from the IP Camera built-in microphone to the remote PC and audio from remote PC to IP Camera's external speaker.


IP Camera to PC

Select **Enabled** and select an **Audio Type**. Tick **chatting** in [Live Video](#) browser to enable **PC to IP Camera** operation. **Audio may not be smooth during the SD card recording.**

Adjust Volume

Select the volume of both **Mic-in** & **Audio-out**. Click **Apply** to finish.

Sound Detection

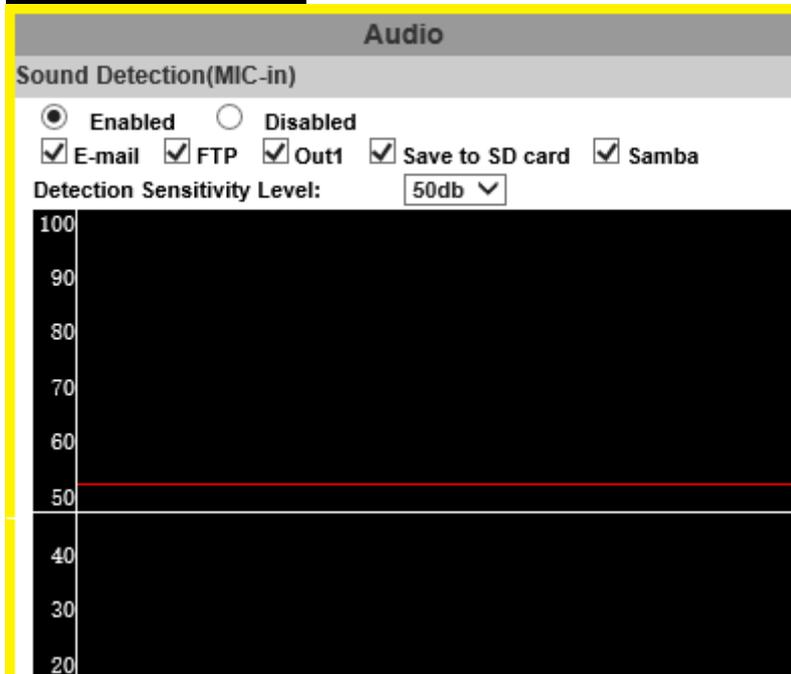

The screenshot shows the 'Sound Detection(MIC-in)' configuration page. The 'Enabled' radio button is selected. Checkboxes for 'E-mail', 'FTP', 'Out1', 'Save to SD card', and 'Samba' are all checked. The 'Detection Sensitivity Level' is set to 50db. Below the settings is a graph with a vertical axis from 20 to 100 and a horizontal red line at the 50 level.

Test the audio volume and sound quality first by selecting **Enabled**. Tick the output destination of the audio file recorded. Adjust **Detection Sensitivity Level** to display the audio frequency level in the analytical graph.


IV. Event List



Click  to get into the administration page. Click



to go back to the live video page.

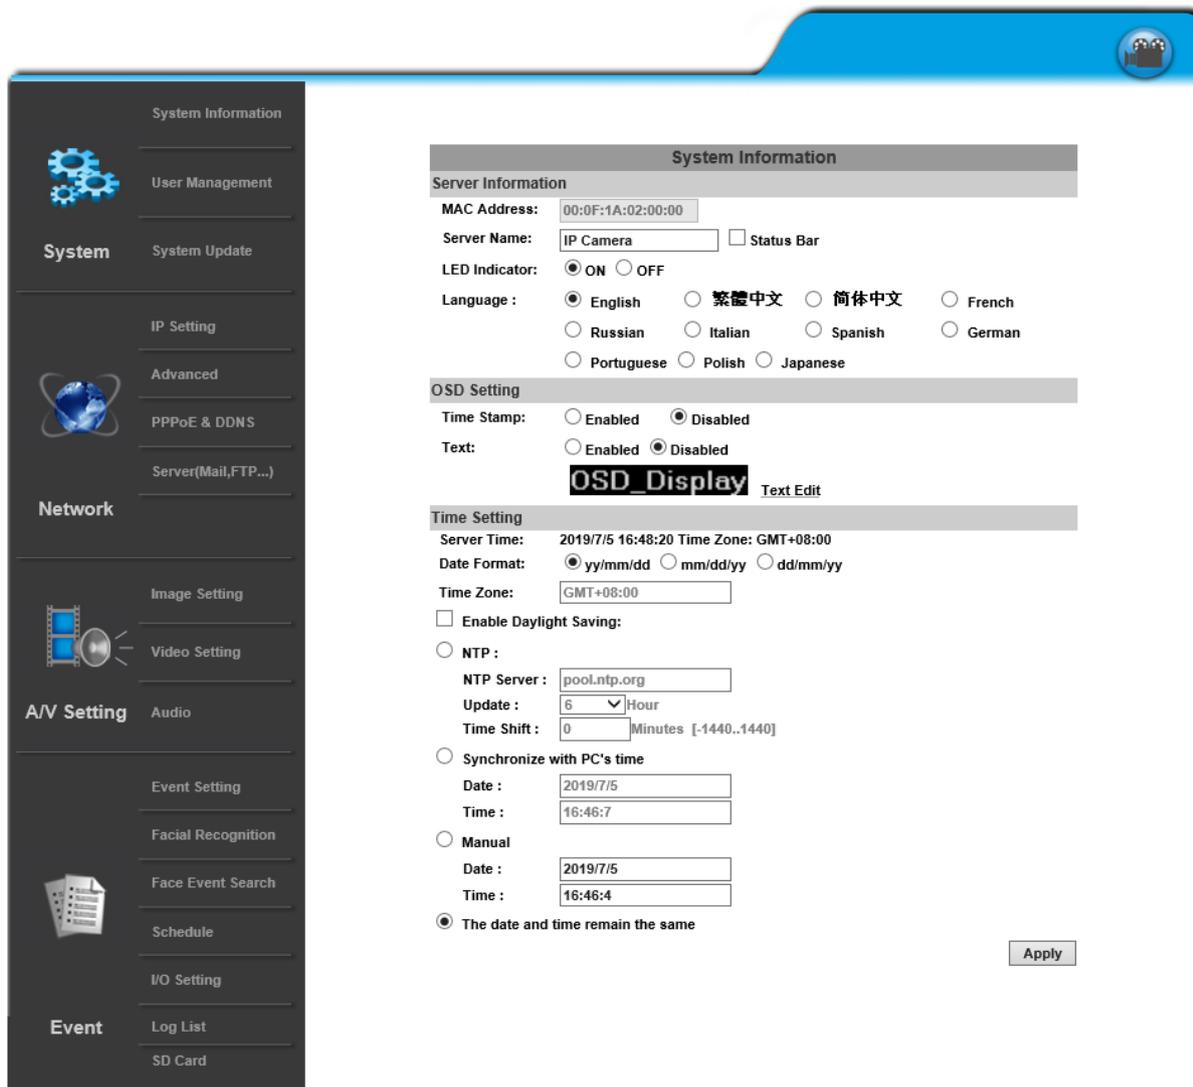

The screenshot displays the IP Camera administration interface. On the left is a dark sidebar with a navigation menu. The main content area shows the 'System Information' configuration page. The sidebar menu includes categories like System, Network, A/V Setting, and Event, with sub-items such as System Information, User Management, System Update, IP Setting, Advanced, PPPoE & DDNS, Server(Mail,FTP...), Image Setting, Video Setting, Audio, Event Setting, Facial Recognition, Face Event Search, Schedule, I/O Setting, Log List, and SD Card. The main configuration area is titled 'System Information' and contains several sections: 'Server Information' with fields for MAC Address (00:0F:1A:02:00:00), Server Name (IP Camera), and LED Indicator (ON/OFF); 'OSD Setting' with options for Time Stamp and Text (Enabled/Disabled); 'Time Setting' with fields for Server Time, Date Format, Time Zone, and Daylight Saving; and 'NTP' settings for NTP Server, Update interval, and Time Shift. There are also options to synchronize with PC's time or manually set the date and time. An 'Apply' button is located at the bottom right of the configuration area.

The IP Camera provides multiple event settings.

Event Setting

Please change default password is a sign which appears on the preview screen as a reminder, to suggest you change login settings in [System](#) to secure your account privacy.

Motion Detection

A motion detection operation allows user to define a certain area which detects anything moving or changing its position within. It helps user to target on details inside a smaller picture, and effectively identify various surroundings of the monitored environment.



Whenever a motion is detected inside the framed area, the word **Motion** will appear on live screen and the data of notification can be sent to assigned directory for remote user.



Area Setting:	<input checked="" type="checkbox"/> Area 1	<input checked="" type="checkbox"/> Area 2	<input checked="" type="checkbox"/> Area 3
Sensitivity:	<input type="checkbox"/> 5	<input type="checkbox"/> 5	<input type="checkbox"/> 5
<input checked="" type="checkbox"/> Area 1:	<input checked="" type="checkbox"/> E-mail	<input type="checkbox"/> FTP	<input type="checkbox"/> Out1
<input type="checkbox"/> Area 2:	<input type="checkbox"/> E-mail	<input checked="" type="checkbox"/> FTP	<input checked="" type="checkbox"/> Out1
<input type="checkbox"/> Area 3:	<input type="checkbox"/> E-mail	<input type="checkbox"/> FTP	<input checked="" type="checkbox"/> Out1
Log :	<input checked="" type="checkbox"/> E-mail	<input checked="" type="checkbox"/> FTP	<input checked="" type="checkbox"/> Samba
Subject:	<input type="text" value="IP Camera Warning!"/>		
Interval:	<input type="text" value="10 sec"/> a period of time between every two motions detected.		
<input checked="" type="checkbox"/> Based on the schedule			

- Area Setting:** Click any of the Area 1 Area 3 Area 2 icons to start drawing 3 areas on the preview screen with your mouse in 3 different colors. Click any **Area** icon again to discard the motion area which has been made.
- Sensitivity:** Adjust the level of the responsiveness defined as motion detection. The higher number assigned, the more sensitive, vice versa.
- Area 1/2/3:** Data of events triggered within the motion area can be assigned by marking the checkboxes of the source and destination. For example, if you mark the **Save to SD card** checkbox from **Area 3**, the video or snapshot triggered in **Area 3** motion area will be saved to the **Micro SD card**.
- Log:** Popped up after **Save to SD card** checkbox is ticked by your mouse. Check **E-mail/ FTP/ Samba** checkboxes on the **Log** option to send the motion detection log to **E-mail/ FTP/ Samba** simultaneously.
- Subject:** Type in the message you would receive when motion is detected. The default message is "**IP Camera Warning!**".
- Interval:** For example, when selecting **10 sec**, once the motion is detected and the action is triggered, it cannot be triggered again within 10 seconds.
- Based on the schedule:** Assign the timetable managed from [Schedule](#) to enable motion detection after the option checkbox is ticked.

Tampering Detection

Tampering Detection	
Tampering:	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
	<input type="checkbox"/> E-mail <input type="checkbox"/> FTP <input type="checkbox"/> Out1 <input type="checkbox"/> Save to SD card <input type="checkbox"/> Samba
Interval:	<input type="text" value="30 sec"/>

When the camera view is covered, moved, hit by strong light, or out of focus, the tampering detection will be triggered, and send snapshot to mail/FTP/Samba/SD card, or trigger the external alarm. For example:

Before Tampering Detection



Tampering Triggered (Defocused)



Before Tampering Detection



Tampering Triggered (Lens Covered)



Before Tampering Detection



Tampering Triggered (Glare)




Before Tampering Detection



Tampering Triggered (Camera Moved)



- Interval:** The tampering detecting interval. Take the diagram below as example. The interval is set for 30 second; the camera lens is covered during 10 - 40 sec. At time point B, the camera compares the view with time point A, and sends an alarm when it finds that the lens is covered. At time point C, the camera compares the view with time point B, and sends an alarm when it finds that the lens is uncovered.

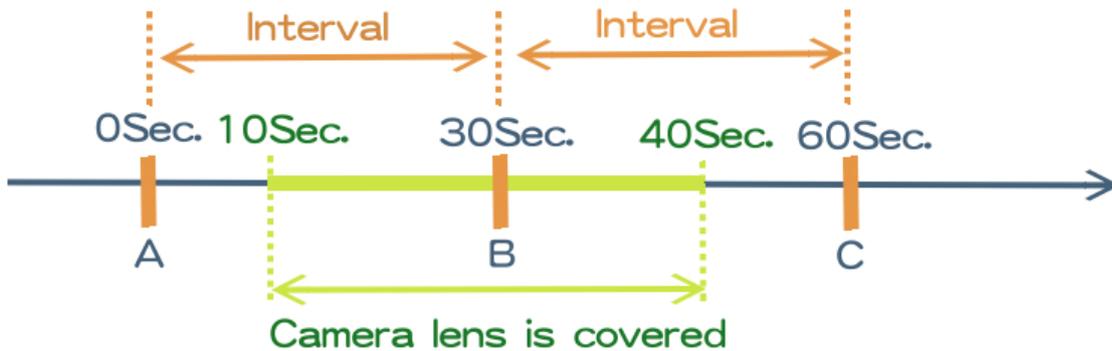

Record File

Record File	
File Format:	AVI File(with Record Time Setting) ▼

When an event occurs, the camera will record a video clip or take snapshot, and then send to mail/ FTP/ Samba. Select the file format to be saved.

- **AVI File (with Record Time Setting):** Save AVI video file. The video length is according to the value set in Record Time Setting.
- **JPEG Files (with Record Time Setting)*Only Streaming 1 with JPEG file format.:** Only when selecting "JPEG" in streaming 1 video format of Video Setting, this option can be enabled. Select this option to save several JPEG picture files. The successive picture files cover a period of time according to the value set in Record Time Setting.
- **JPEG File (Single File with Interval Setting):** Save single JPEG picture file when the event occurs.

Record Time Setting

Record Time Setting			
Pre Alarm:	5 sec ▼	Post Alarm:	5 sec ▼

When an event occurs, the IP camera can record a video clip or take a snapshot, and then send it via mail/ FTP/ Samba.

Select the video recording length before and after the event is detected. Please see the image below for reference.

Motion Detection

Area 3: E-mail FTP Out1 Save to SD card Samba Google Drive Dropbox

Subject: IP Camera Warning!

Interval: 10 sec a period of time between every two motions detected.


Based on the schedule

Record File

File Format: AVI File(with Record Time Setting)

Record Time Setting

Pre Alarm: 5 sec Post Alarm: 5 sec

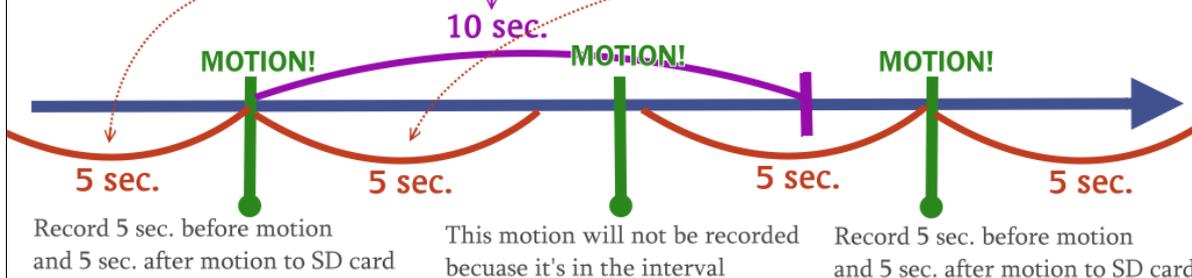

Record 5 sec. before motion and 5 sec. after motion to SD card

This motion will not be recorded because it's in the interval

Record 5 sec. before motion and 5 sec. after motion to SD card

Network Dis-connected

Network Dis-connected

Dis-connected: Save to SD Card

(When Schedule Record Enable, it'll stop saving to SD card)

The image will be recorded to the SD card after the IP Camera detects network disconnection once **“Save to SD card”** is ticked.

Network IP Check

Network IP Check

IP Check: Enabled Disabled

IP Address: www.google.com

Interval: 30 sec

Check failed: Connection failed four times. Reboot IP Camera.

Save to SD card

(When Schedule Record Enable, it'll stop saving to SD card)

(When IP check failed, first step will save to SD card, continuing other saving storage)

Apply

After enabling IP Check, the IP camera can check if the network server is connecting. If the checking fails for 4 times, the camera will reboot.

Click to update all the settings adjusted.

Schedule

Schedule

Tick the grids on the calendar to manage your schedule time.

Schedule

Profile1

All	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Mon.																								
Tue.																								
Wed.																								
Thu.																								
Fri.																								
Sat.																								
Sun.																								

With schedule setup.

Profile:

Profile1 Name:

- **Profile:** Select a Profile from the drop down list.
- **Profile(1,2,3) Name:** Input & assign a profile name for each profile.

Schedule

Profile2

All	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Mon.																								
Tue.																								
Wed.																								
Thu.																								
Fri.																								
Sat.																								
Sun.																								

With schedule setup.

Profile:

Profile2 Name:

Schedule

Profile3

All	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Mon.																								
Tue.																								
Wed.																								
Thu.																								
Fri.																								
Sat.																								
Sun.																								


With schedule setup.

Profile:

Profile3 Name:

Snapshot & Record


- **Record:** After completing the **Schedule**, the camera data will be recorded according to the schedule made from the calendar.

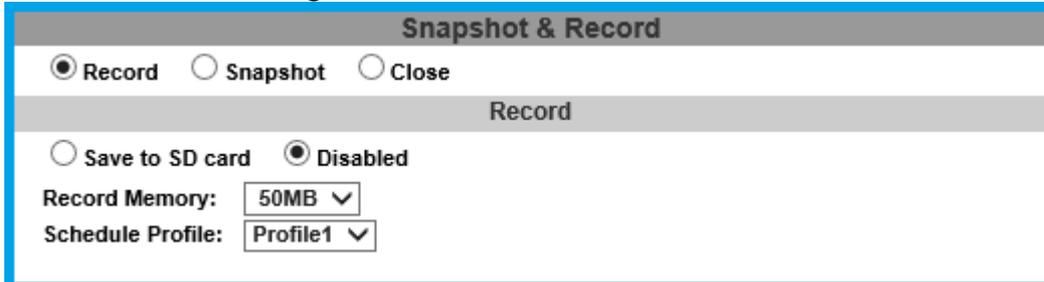

The screenshot shows the 'Snapshot & Record' configuration window. At the top, there are three radio buttons: 'Record' (selected), 'Snapshot', and 'Close'. Below this, the 'Record' section is active, showing 'Save to SD card' (unselected) and 'Disabled' (selected). The 'Record Memory' is set to '50MB' and the 'Schedule Profile' is set to 'Profile1'.

Beware that SD cards may fail for being recorded for a long period of time. You may set up how much you would like the SD card memory to be used in order to estimate the right time to swap a new one. Assign the **Schedule Profile** time selected from the drop-down list first.

- **Snapshot:** After enabling the snapshot function; the user can select the storage position, interval time and reserved file name of the snapshot. Assign the **Schedule Profile** time selected from the drop-down list first.

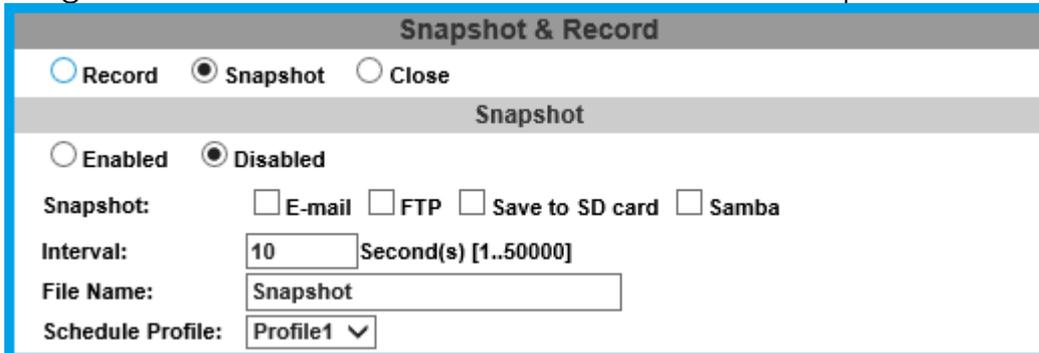


The screenshot shows the 'Snapshot & Record' configuration window with 'Snapshot' selected. The 'Snapshot' section is active, showing 'Enabled' (unselected) and 'Disabled' (selected). Below this, there are checkboxes for 'E-mail', 'FTP', 'Save to SD card', and 'Samba'. The 'Interval' is set to '10' seconds, and the 'File Name' is 'Snapshot'. The 'Schedule Profile' is set to 'Profile1'.


Interval: Users can set the interval between two snapshots.

File Name: Enter the file name of your snapshot file.

- **Restart IP Camera Automatically:** Set up the time for IP camera to restart automatically after ticking **Restart** to enable access.

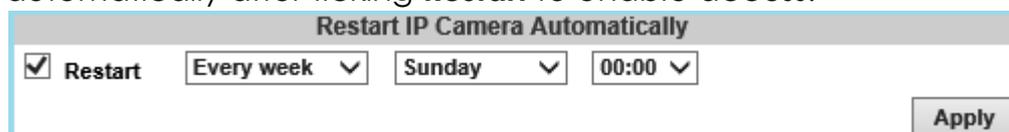

The screenshot shows the 'Restart IP Camera Automatically' configuration window. It features a checked 'Restart' checkbox, a frequency dropdown set to 'Every week', a day dropdown set to 'Sunday', and a time dropdown set to '00:00'. An 'Apply' button is located at the bottom right.

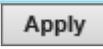Click  to update all the settings adjusted.

I/O Setting

I/O Setting

Input Setting

Input 1 Sensor:

Input 1 Action: E-mail FTP Out1 Save to SD card Samba

Log: E-mail FTP Samba

Subject:

Interval:

Based on the schedule

Schedule Profile:

Input Setting

The IP camera supports both input and output operations. When the input condition is triggered, the relay will be also triggered & a notification will be sent depending what checkboxes are ticked.

- **Log:** Tick **Save to SD card** to enable the **Log** you would like to save data with.
- **Subject:** Input & edit the message you would receive for triggered alarm.
- **Interval:** For example, if you select "10 sec" here, once the motion is detected and action is triggered, it cannot be triggered again within 10 seconds.
- **Based on the schedule:** Tick its checkbox to assign timetable from [Schedule](#).

Schedule

Profile1

All	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Mon.																								
Tue.																								
Wed.																								
Thu.																								
Fri.																								
Sat.																								
Sun.																								

With schedule setup.

Profile:

Profile1 Name:

Once the option is activated, only during the selected schedule time the I/O is enabled. Assign the **Profile** timetable selected from the drop-down list first.

Take the schedule timetable above as an example, 1 o'clock on Tuesday has not been colored in the schedule table, no action will be triggered during that hour.

Output Setting

The output mode affects the DO or relay out duration.

Output Setting

Mode Setting: OnOff Switch Time Switch

Normal status:

Interval:

- (i) **ON/Off Switch:** The camera triggers the external device and lasts for 10 seconds. Enable the **OnOff Switch** in **Output Setting** by clicking beside its title. You can turn off the alarm manually by clicking "off" at the right bottom of the live video page.



Select **Open** (N.O) or **Close** (N.C) for its sensor from **Normal Status**.

- (ii) **Time Switch:** The camera triggers the external device and lasts for certain time according to the internal setting, and the user is not allowed to break off the alarm manually. Enable **Time Switch** by clicking beside the title, and then adjust the **Normal Status** & **Interval** to your desired level.

Click on the button to keep all the changes.

Log List

Log List	
System Logs	Logs
Motion Detection Logs	Logs
I/O Logs	Logs
All Logs	Logs

The log keeps data for user to check through events which have occurred during the monitoring operation.

Click each [Logs](#) to open different log data.

System Logs won't lose data due to power failure.

All Log	
<System>	[2017/11/23 15:17:39] Language changed to Trad. Chinese.
<System>	[2017/11/23 15:17:21] 220.135.138.67 login by admin.
<System>	[2017/11/23 15:12:20] 220.135.138.67 login by admin.
<System>	[2017/11/23 15:12:15] 220.135.138.67 login by Anonymous.
<System>	[2017/11/23 15:12:15] 220.135.138.67 login by Anonymous.

Choose **All Logs** to list out all the events from **Motion Detection Logs** to **I/O Logs**.

SD Card

Playback

Insert Micro SD card into the card slot thoroughly before starting this operation. Click the date under **Playback** title & a list of files will pop up.

Playback

20171107
20171108
20171109

Record

20171109

SD Card: << 9273M / 30416M >>

SD Management

Auto Deletion: Off (Keep 1/ 2/ 3/ 4...days)

Format SD Card

It only support FAT32 format for SD card over 64G Please format SD card into FAT32 before installation

Apply


For example, if the date **2017/11/07** is clicked, all the events happened within that time frame will then appear in a list like the one below.

2017/11/07			Del
Time	Video	Event Type	<input type="checkbox"/>
21:46:01	214601m.avi	Motion Detection	<input type="checkbox"/>
21:46:24	214624m.avi	Motion Detection	<input type="checkbox"/>
21:47:14	214714m.avi	Motion Detection	<input type="checkbox"/>
21:55:15	215515m.avi	Motion Detection	<input type="checkbox"/>
21:55:27	215527m.avi	Motion Detection	<input type="checkbox"/>
21:56:13	215613m.avi	Motion Detection	<input type="checkbox"/>
21:56:24	215624m.avi	Motion Detection	<input type="checkbox"/>
21:56:55	215655i	IVS	<input type="checkbox"/>
21 o'clock	21 o'clock	Schedule Snapshot	<input type="checkbox"/>
22:02:45	220245i	IVS	<input type="checkbox"/>

Files link daily.


The enlisted files under **Video** category are files representing an event. There are 3 types of file formats, and each is different for its own **Event Type**. Notice how the file name formations under the **Video** category represent the time when a file is created.

For instance, the file name "**214601m.avi**" means the video is recorded at **21:46:01** today, **m** means **Motion Detection**, and **avi** represents the file format. Click on the file name to open the file.

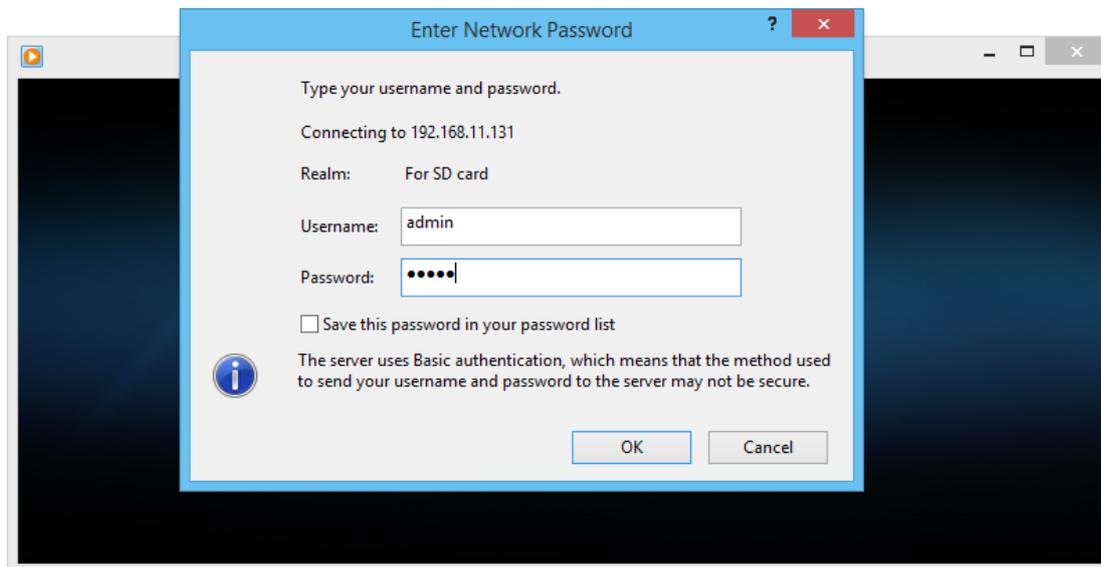

For **avi** files, you need Microsoft Media Player which is supposedly built-in in your PC. The default Username & Password for playing the video file are both **admin**.

Clicking on an **IVS** file (such as **215655i**) will bring out a pop-up window suggesting an **IVS** event captured as snapshots as the one below:

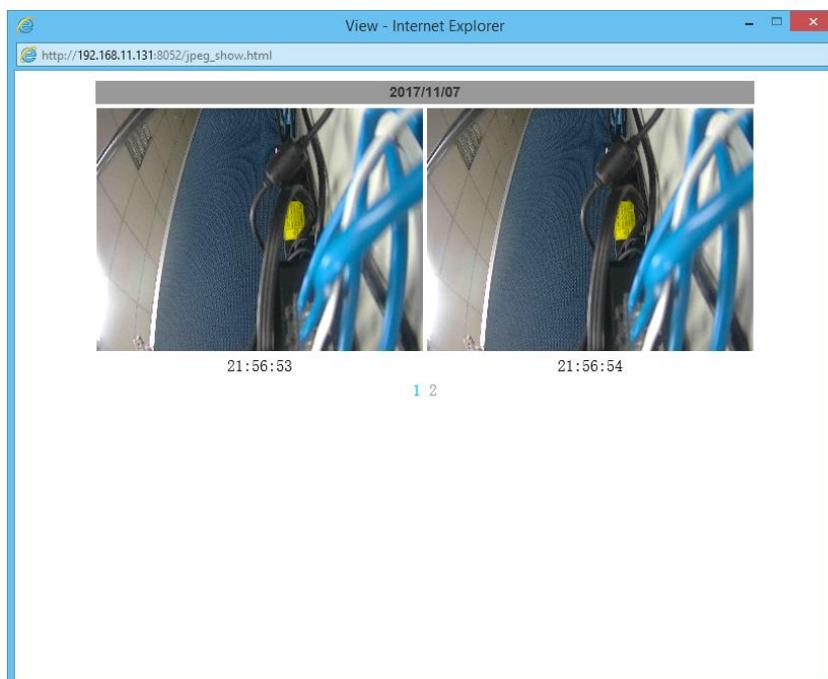

Clicking on any title that is labeled with “**time unit**” (such as **21 o'clock**) at the end will bring out a pop-up window indicating the snapshot taken as scheduled in **Schedule** mode and enabled in **Snapshot** mode.



Click the **Del** icon to delete any file by marking on the checkbox under the **Del** category with a mouse click.


Record

The recording mode is enabled after **Record** is set in **Schedule** mode. Take the schedule calendar below for example, the grids coloured in green between 3~12 are scheduled to start recording from 3 o'clock to 12 o'clock from Monday to Thursday.

Schedule																								
All	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Mon.																								
Tue.																								
Wed.																								
Thu.																								
Fri.																								
Sat.																								
Sun.																								

With schedule setup.

Once the recording mode is on, the video data recorded will be found and labelled as **2017/11/09**.

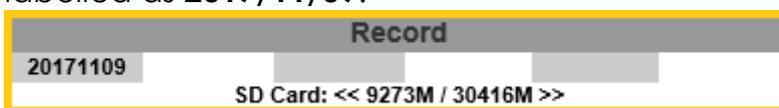


Click on **2017/11/09** to enter the next page where all files recorded on that date are enlisted.

2017/11/09			Del
Time	Video	Event Type	<input type="checkbox"/>
03:00:00	030000r	Record	<input type="checkbox"/>
04:00:00	040000r	Record	<input type="checkbox"/>
05:00:00	050000r	Record	<input type="checkbox"/>
06:00:00	060000r	Record	<input type="checkbox"/>
07:00:00	070000r	Record	<input type="checkbox"/>
08:00:00	080000r	Record	<input type="checkbox"/>
09:00:00	090000r	Record	<input type="checkbox"/>
10:00:00	100000r	Record	<input type="checkbox"/>
11:00:00	110000r	Record	<input type="checkbox"/>
12:00:00	120000r	Record	<input type="checkbox"/>

1 2

Files link daily.

Click on any video title to open Microsoft Media Player (supposedly already built-in in your PC) and play the video file. Key-in **admin** for both Username & Password to get permission to view the video.

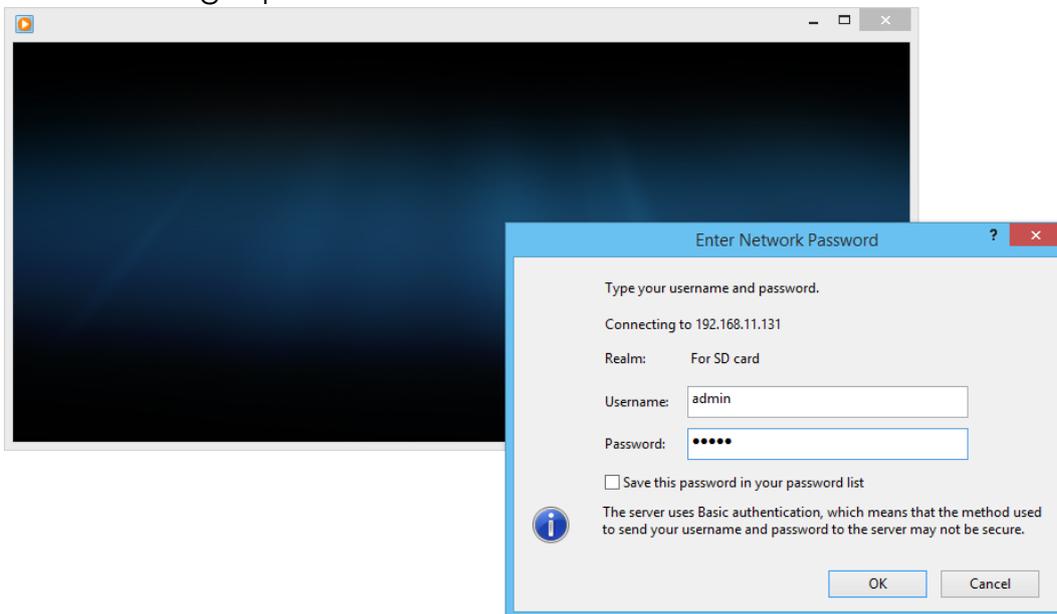

The number at the bottom indicates the distributive law of the current SD Card memory which is divided and assigned to different types of recording purposes. The left side shows how much memory is still available, and the right side shows how much the total memory is.




If the memory of the SD card is **over 128G**, **70%** of the memory will be used for scheduled recording, and **30%** will be used for event recording.

If the memory of the SD card is **below 128G**, **50%** of the memory will be used for scheduled recording, and **50%** will be used for event recording.


Click the  icon to delete any file with its checkbox checked under the Del category.

SD Management

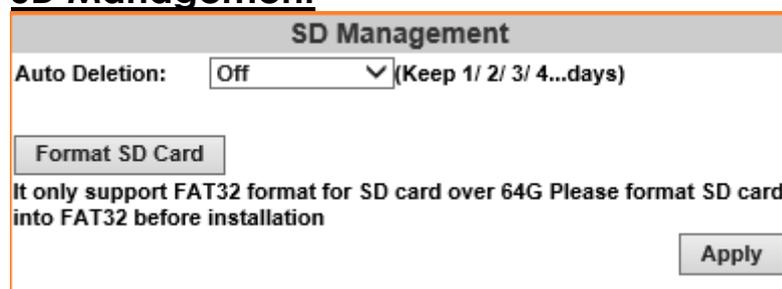


- **Auto Deletion:** Choosing “The 1st day” means the recording file will be kept for one day. Example: It is five o'clock now. Choose “The 1st day”. The files will be kept from five o'clock yesterday to five o'clock today. The oldest file will be deleted if the Micro SD card is full. **Note: The use of the SD card will slightly affect the operation of the IP Camera, such as affecting the frame rate of the video.**
- **Format SD Card:** Click the icon to process the SD Card formatting into FAT32 format. Be cautious that since it only supports FAT format for SD Card over 64G, please format SD Card into FAT32 before installation.

SD Card Files

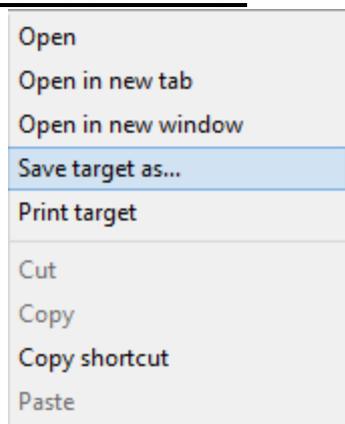

- **Downloading the Files:** For both **Playback** and **Record** mode, after entering a date data to see the **Video** and **Event Type**, right-click on a title under the **Video** list, and choose “**Save Target As...**” from its pop-up window to start downloading the file.
- **Linking the Files:** For both **Playback** and **Record** mode, find the **Files link daily** link at the right corner of the bottom after entering a date data to see the **Video** and **Event Type**. Click on the link, a window will pop up.

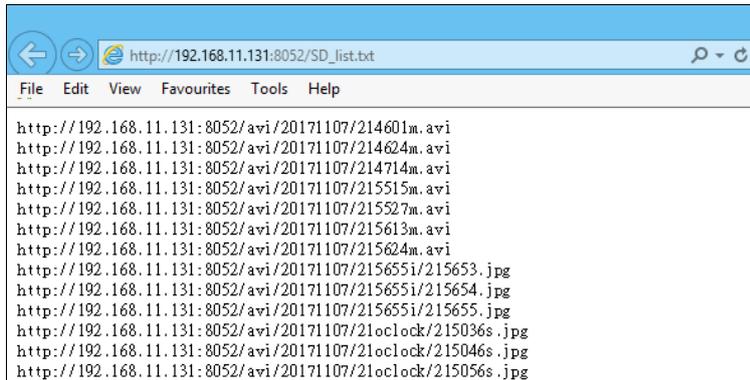

You may copy any of the protocol provided in the window and paste it on a web browser as a URL address to look at each file.


Copy to PC

You can insert the Micro SD card to the PC and read the files directly, or use FlashGet instead to download the files from the IP camera. (In this way you do not need to pull out the Micro SD card from the camera.) To use FlashGet for downloading image and video data from the Micro SD card, please follow the steps:


- i. Enter data list and right-click “ **Files link daily.**”, select “save target as...” then save the link list to PC.




- ii. Open FlashGet, select "File"→ "Import" → "Import list", and find the link list file you just saved. The file name may be called “SD_list”.

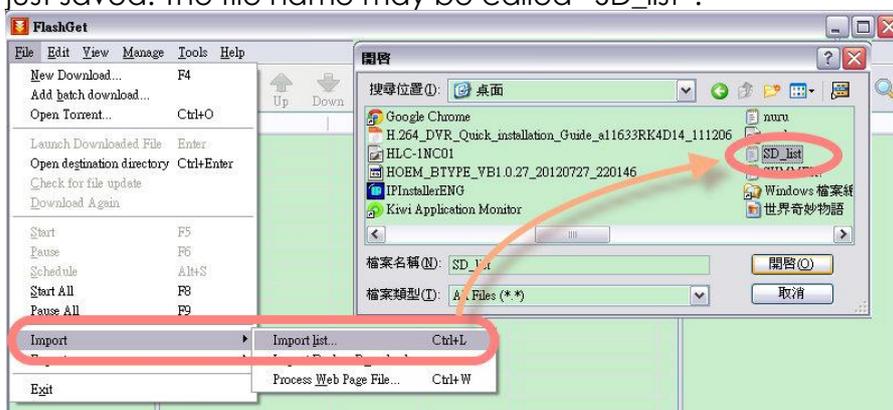

- iii. FlashGet will show you the link list, and you can tick the files you want to copy to your PC. Give the directory path in the new download window, and remember to enable "Login to Server": key in the IP Camera username and password.

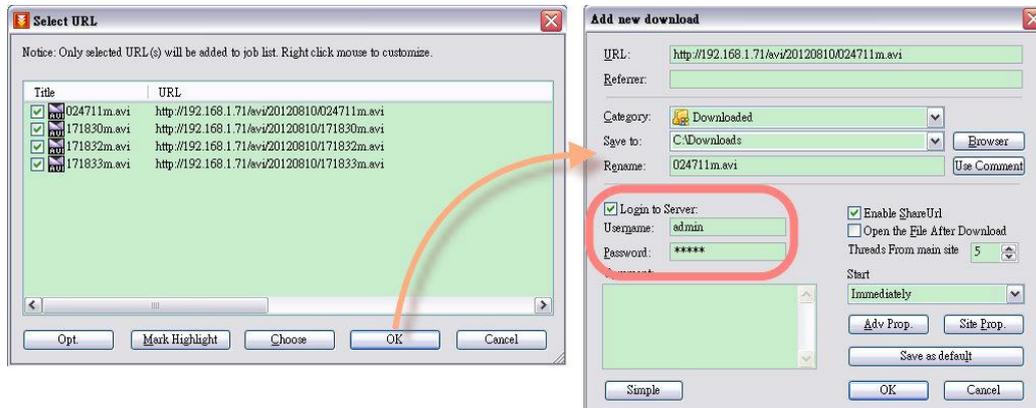


- iv. Click OK to start download.

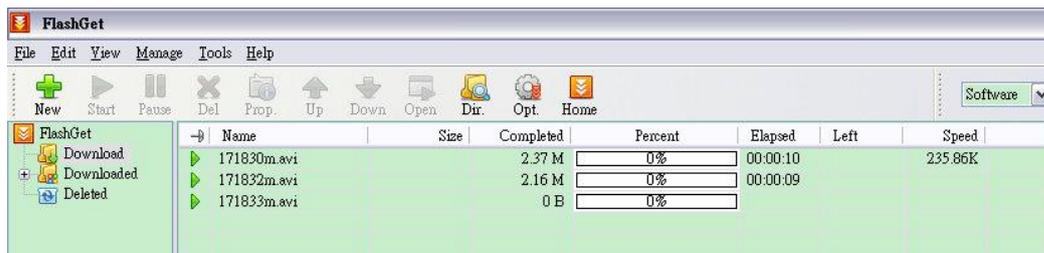

- FlashGet is free software that can be downloaded from [FlashGet](#) official website. The example above is based on FlashGet ver.1.9.6.


6. Network Configuration

Configuration I

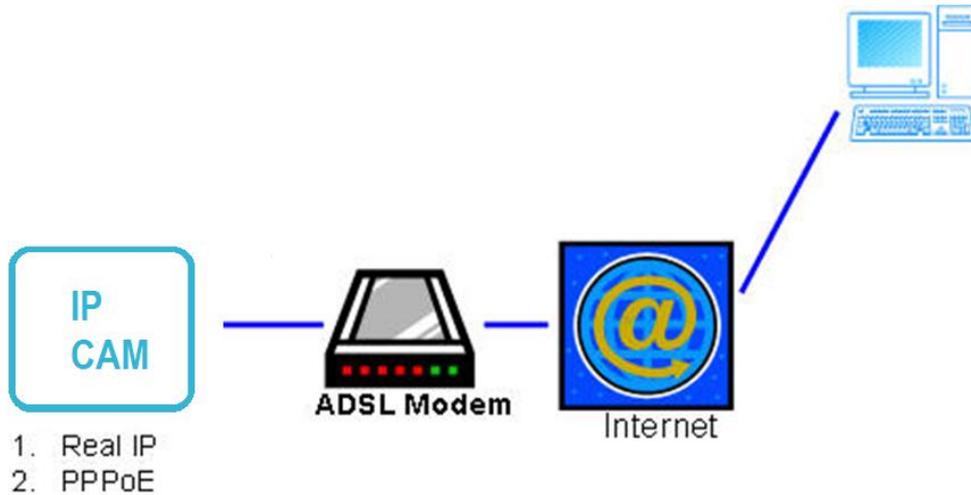

- Internet Access: ADSL or Cable Modem
- IP address: One real IP or one dynamic IP
- Only the IP Camera is connected to the internet
- For fixed real IP, set up the IP into IP Camera.
- For dynamic IP, start PPPoE.


Configuration II

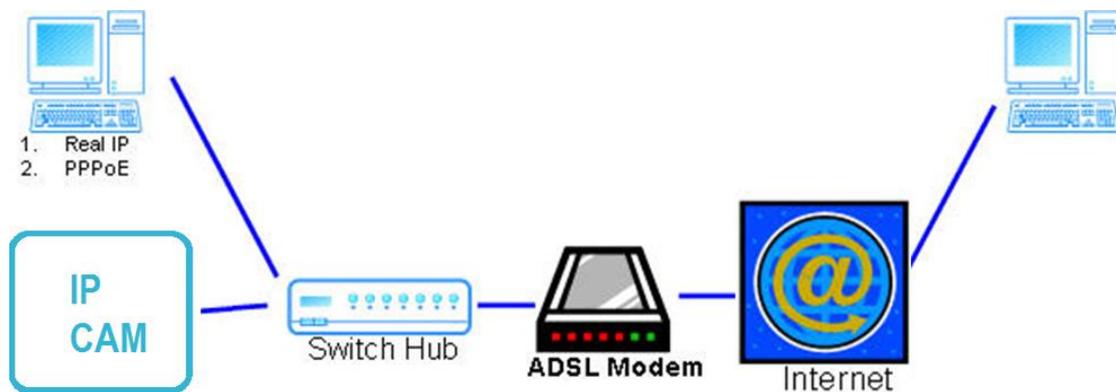

- Internet Access: ADSL or Cable Modem

- IP address: More than one real IP or one dynamic IP
- IP Camera and PC connect to the internet
- Device needed: Switch Hub.
- For fixed real IP, set up the IP into IP Camera and PC.
- For dynamic IP, start PPPoE.


Configuration III

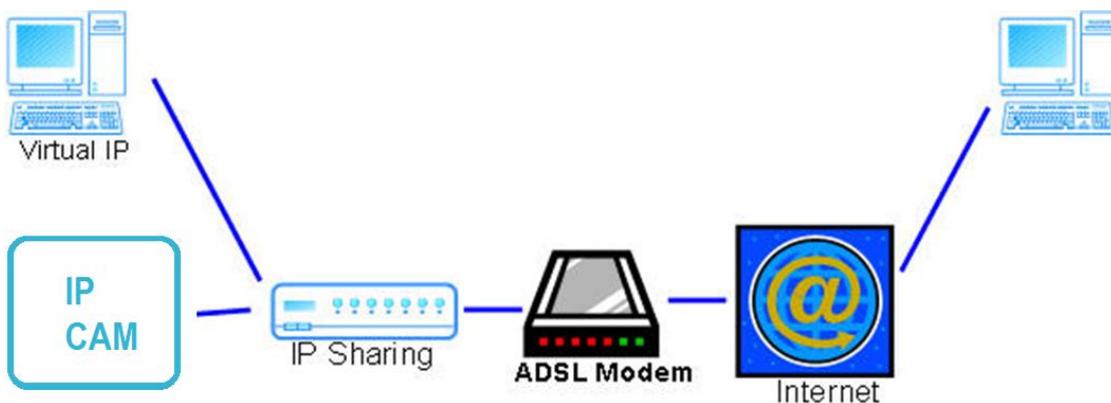

- Internet Access: ADSL or Cable Modem
- IP address: one real IP or one dynamic IP
- IP Camera and PC connect to the internet
- Device needed: IP sharing
- Use virtual IP, set up port forwarding in IP sharing

7. I/O Configuration

I. I/O Connection

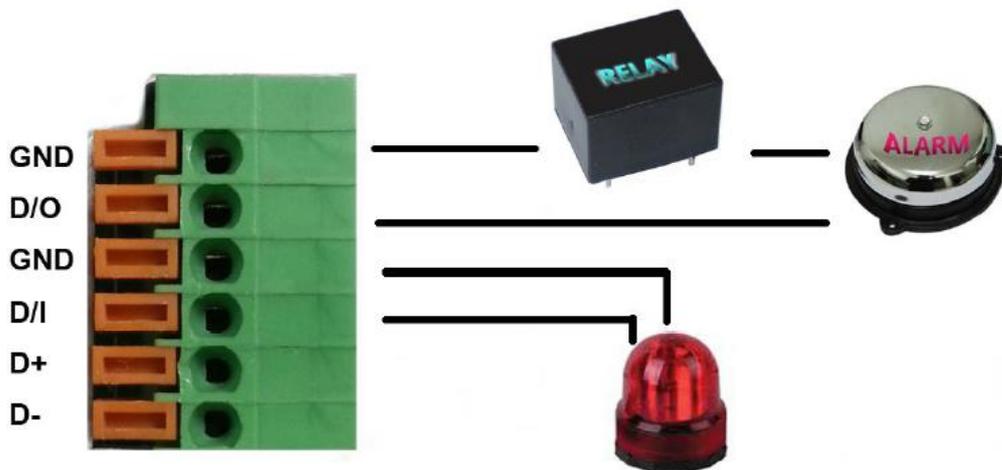

- a. Connect GND & DO pin to the external relay (buzzer or siren) device.
- b. Connect GND & DI pin to the external trigger device.

If you select "N.O" on "Input sensor setting", when the external device or circuit is separated from the D/I and GND pins, the camera input alarm is triggered, and the camera will execute the action user has set, for example, send a snapshot to E-mail address.


If you select "N.C" in "Input sensor setting", when the external device or circuit is in contact with the D/I and GND pins, the camera input alarm is triggered, and the camera will execute the action user has set, for example, send a snapshot to E-mail address.

c. I/O PIN Definition

- ✧ **GND (Ground):** Initial state is LOW
- ✧ **DO (Digital Output):** Max. 50mA ,.DC 12V
- ✧ **DI (Digital Input):** Max. DC 6V

II. I/O Setup

Enter **I/O Setting** via internet browser & check **Out1** to enable I/O signal.

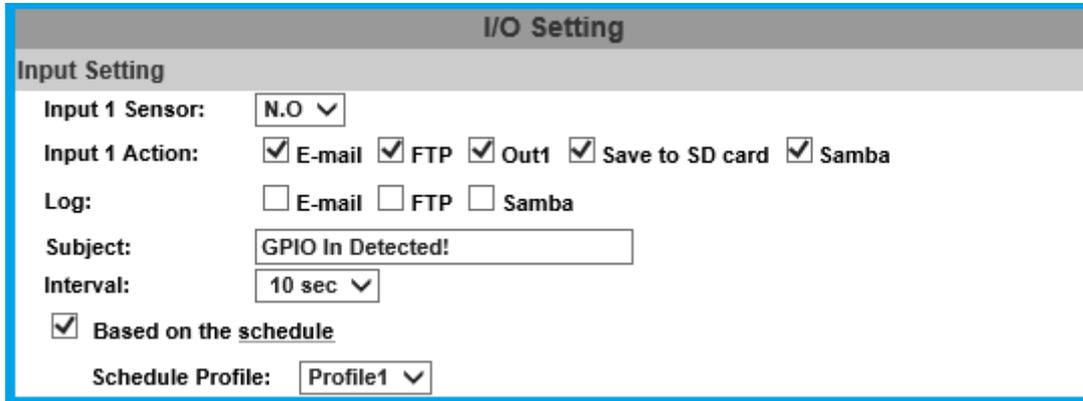

The screenshot shows the 'I/O Setting' web interface. It features a 'Input Setting' section with the following fields: 'Input 1 Sensor' set to 'N.O', 'Input 1 Action' with checked boxes for 'E-mail', 'FTP', 'Out1', 'Save to SD card', and 'Samba'; 'Log' with unchecked boxes for 'E-mail', 'FTP', and 'Samba'; 'Subject' set to 'GPIO In Detected!'; 'Interval' set to '10 sec'; and a checked box for 'Based on the schedule' with 'Schedule Profile' set to 'Profile1'.


Input Setting

The IP Cam supports both input and output operations. When the input condition is triggered, the relay will be also triggered & a notification will be sent depending what checkboxes are ticked.

- **Log:** Tick **Save to SD card** checkbox to enable **Log** which you would like to save data with.
- **Subject:** Input or edit the message you would like to receive for triggered alarm.
- **Interval:** If you select "10 sec" here, once the motion is detected and action is triggered, it cannot be triggered again within 10 seconds.
- **Based on the schedule:** Tick its checkbox to assign the timetable from **Schedule** of the **Event** Menu. Please refer to **Schedule** from **Event List**.
Click on the underlined **schedule** title to enter to the [Schedule Setup](#) menu.

Output Setting

The output mode affects the DO or relay out duration.

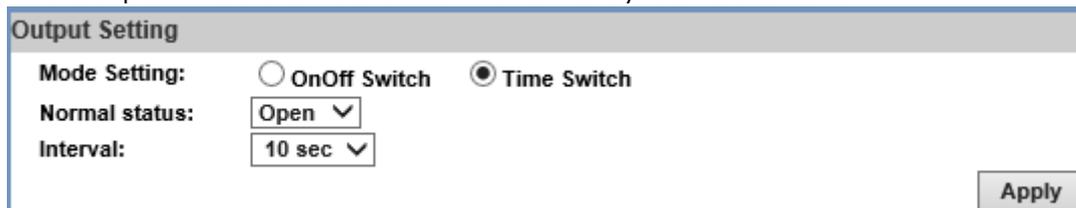

The screenshot shows the 'Output Setting' web interface. It features a 'Mode Setting' section with radio buttons for 'OnOff Switch' and 'Time Switch' (selected). Below it are 'Normal status' set to 'Open' and 'Interval' set to '10 sec'. An 'Apply' button is located at the bottom right.

• **Mode Setting**

- 1) **ON/Off Switch:** The camera triggers the external device and lasts for 10 seconds. While in **Output Setting**, enable the **OnOff Switch** by clicking beside the title. You can turn off the alarm manually by clicking “off” at the right bottom of the live video page.



Select **Open** (N.O) or **Close** (N.C) for its sensor from **Normal Status**.


- 2) **Time Switch:** The camera triggers the external device and lasts for certain time according to the internal setting, and the user is not allowed to break off the alarm manually. While in **Output Setting**, enable the **Time Switch** by clicking beside the title, and then adjust the **Normal Status & Interval** to your desired level.

Click on the  button to keep all the changes.

8. Factory Default

If you forget the password you have set up, follow the steps below to restore its default settings.


- Remove all cables from the camera.

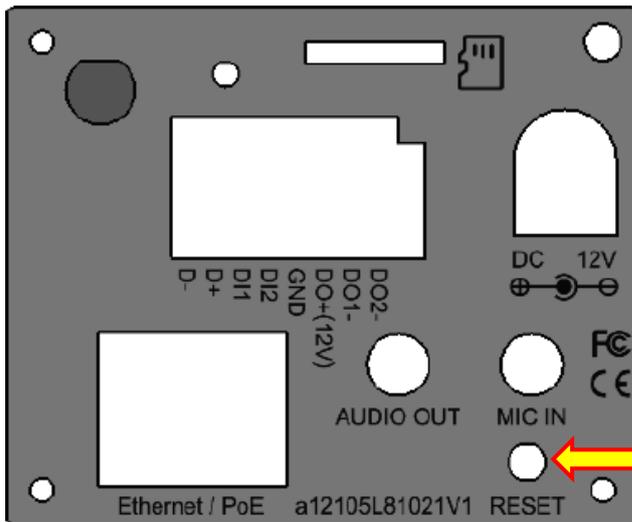

Press & hold the Default button.

Connect the power for the camera to reboot for around 30 seconds.

- Release the Default button after rebooting. Plug on the Ethernet cable.
- Open the internet browser with default IP (<http://192.168.1.200>)
- Input **admin** for both user name and password to log in.

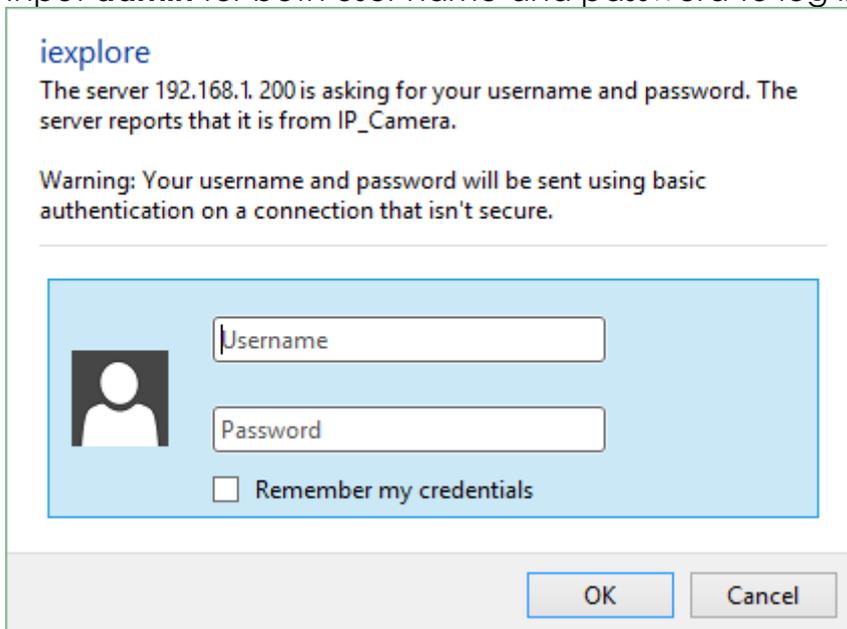

- ✧ You may also perform [Factory Default](#) through [System Update](#) when you operate the camera by remote. Please refer to [System](#) chapter for more instructions.

9. Universal Password

If you forgot the password of your IP camera, you can reset the camera to factory default, or follow the procedure below to generate a universal password.

Note: [Universal password](#) will be valid only when you enable the function in [User Management](#).

- i. First, you need to know the IP address and MAC address of your IP camera. You can use [IP Scanner](#) to scan the LAN, and see the IP address and MAC address on the side column.

Device Lists

Server Name	IP Address
	192.168.070.064
IP_Camera	192.168.021.069
CHBA-16DE	192.168.001.072
79KQ-1F	192.168.099.101
S7CD_Meeting Room	192.168.070.066
S3CDH_Meeting Room	192.168.070.070
79HQ-1F	192.168.099.100
HLC-7BJDS	192.168.040.173
P2P Demo Site	192.168.011.236
IP_Camera	192.168.001.200
IP_Camera	192.168.011.170
NVR	192.168.070.062
NVR-16	192.168.200.220
IP_Camera	192.168.066.220
IP_Camera	192.168.066.235
NVR-25	192.168.200.210
IP_Camera	192.168.040.112
2222	192.168.011.083

SCAN AND FIND THE CAMERA


To Change Device Name, IP address, and Gateway:

1. Select the device on the left side.
2. Change network parameter on the right side.
3. Press Submit button.
4. Press Search Device to re-search again.
5. Double click the device to open it.

Static DHCP
IP ADDRESS
 Name
IP
 Netmask
 Gateway
 DNS 1
 DNS 2
 Port1
MAC

Or else, if you already know the IP address of camera: Open the web browser, key in **http:// (IP address) /GetIPMAC.cgi** and press enter.


The IP address and MAC address will be displayed on browser.

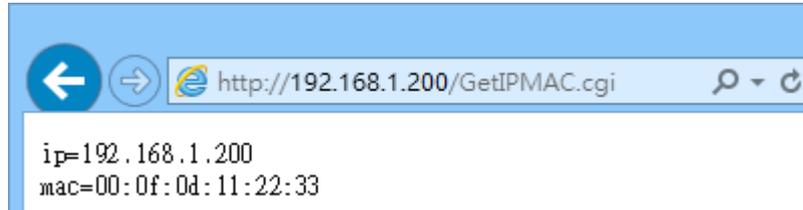

- ii. Locate the .html file named [Universal Password V1.1](#) in the Universal Password from the [Applications](#) folders in CD-ROM. Open it with a web browser.



- iii. The camera IP address and MAC address will be displayed automatically in both **IP Address** and **MAC** columns.

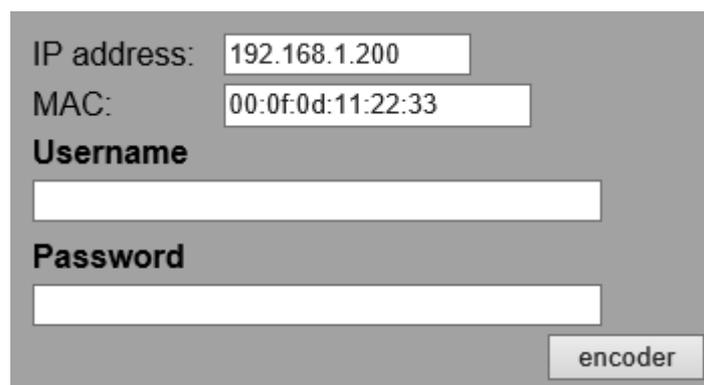


A screenshot of a web form with a grey background. It contains the following fields and controls:


- IP address:** A text input field containing the value `192.168.1.200`.
- MAC:** A text input field containing the value `00:0f:0d:11:22:33`.
- Username:** A text input field that is currently empty.
- Password:** A text input field that is currently empty.
- encoder:** A button located at the bottom right of the form.

After clicking on **encoder**, a set of username and password will appear. The universal username and password are generated from the IP address and MAC address you key-in, so if you change the camera IP address the universal password changes, too.





- iv. Use the generated username & password to log in the camera account.

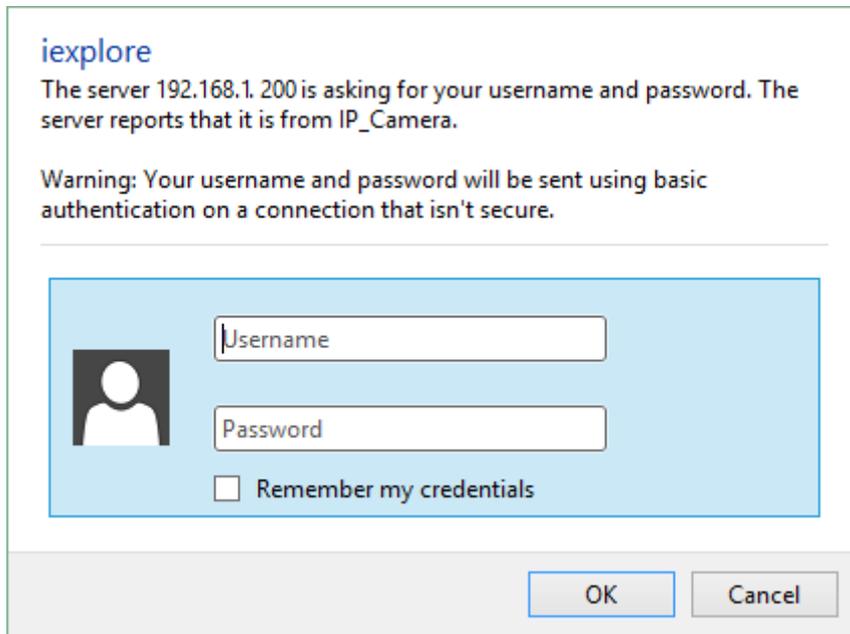

- v. Now you can login as administrator. Turn to [User Management](#) page. The use of universal password does not affect the previous user setting, so the administrator account password does not change until you edit it. Please click **Edit** to give a new administrator password.

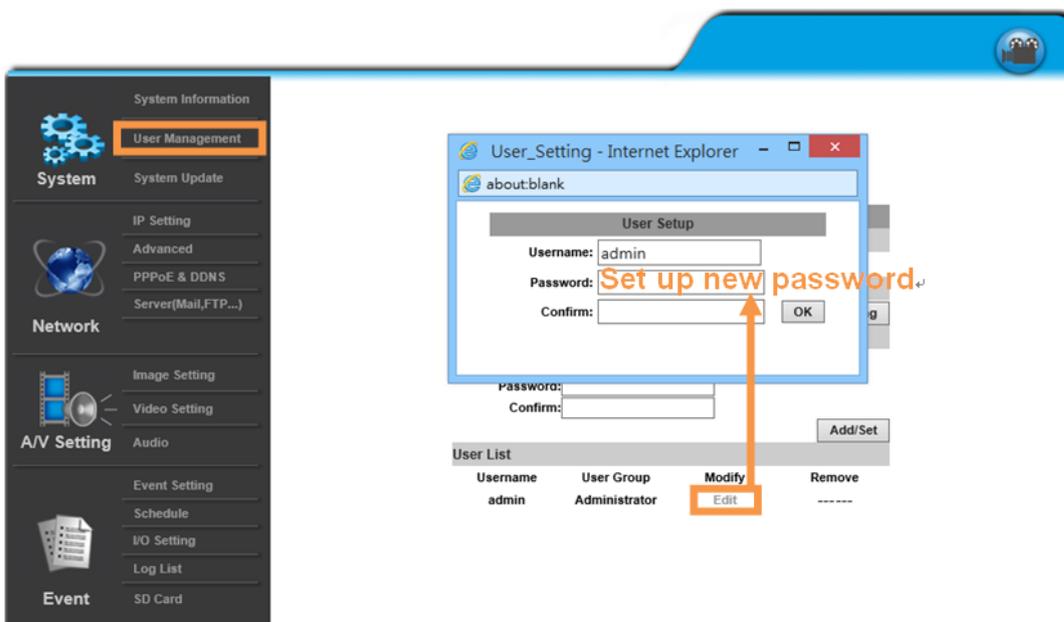

10. Package Contents

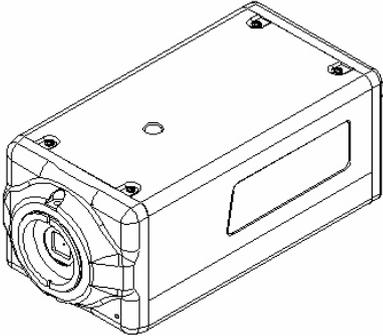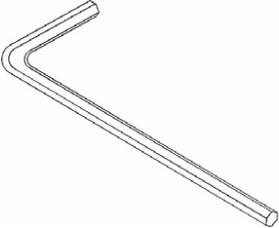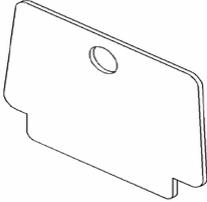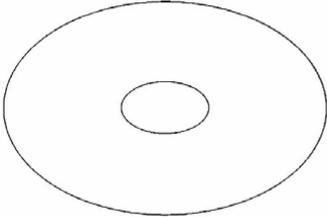IP Camera		Quick Installation Guide
		
Hex Wrench	CD	Plate for turning to CS ring
		

- The CD includes user manual and software tools

11. SD Card Compatibility (Optional)

The following **SD Cards** are the recommended:

SD CARD	
ADATA 4G	SiliconPower 128M
ADATA 512M	SiliconPower 256M
Blast 128M	TEKQ 128M
GiGATEK 128M	TEKQ 256M
Kingmax 256M	Toshiba 128M
Kingston 128M	Toshiba 256M
Kingston 1G	Toshiba 4GB
Kingston 256M	Tracend 128M 80X
Kingston 32G	Tracend 1G 80X
Kingston 512M	Tracend 256M 80X
Phast 256M	Tracend 2G 150X
Photofast 256M	Tracend 4G 150X
PK 128M	Tracend 512M 80X
PRETEC 128M	Transcend 16G
READY 128M	Transcend 32G
SanDisk 128M	Transcend 4GB
SanDisk 16G	Transcend 8G
SanDisk 1G	TwinMOS 128M
SanDisk 256M	TwinMOS 256M
SanDisk 2G	UMAX 128M
SanDisk 32G	U-TEK 128M
SanDisk 4GB	
SanDisk 512M	
SanDisk 8G	
SDHC CARD	
SanDisk 4GB	Transcend 4GB
SanDisk 8G	Transcend 8G
SanDisk 16G	Transcend 16G
SanDisk 32G	Transcend 32G
Toshiba 4GB	Kingston 32G