



User Manual

OUTDOOR DOME IP CAMERA

V1.0_20201021

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

DO NOT INSERT ANY METALLIC OBJECT THROUGH VENTILATION GRILLS.

CAUTION

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
<p>CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		

COPYRIGHT

THE TRADEMARKS MENTIONED IN THE MANUAL ARE LEGALLY REGISTERED TO THEIR RESPECTIVE COMPANIES.



Table of Contents

PREFACE	8	RTSP Server	37
PRODUCT SPECIFICATIONS	8	RTSP Port	37
PRODUCT INSTALLATION	11	RTP Start and End Port	38
Monitor Settings	11	Multicast Setting	38
Hardware Installation	12	ONVIF	38
Connector Instruction	12	ONVIF	38
Wireless Antenna (Optional)	13	Security	38
PoE (Power Over Ethernet)	13	RTSP Keepalive	39
IP ASSIGNMENT	14	Bonjour	39
INSTALL ACTIVE CONTROL	18	LLTD	39
For users using IE 6.0 or above	18	Advanced	40
Another Method	20	HTTPS Setting	40
LIVE VIDEO	21	Connection Types	41
Full Screen Mode	22	Remove Existing Certificate	41
Live Video Panel	22	Download Request	42
Submenu	23	Created Request	42
CAMERA CONFIGURATION	25	SNMP	44
System	25	SNMPv1 or SNMPv2	44
System Information	26	SNMPv3	44
Server Information	26	Access List	46
OSD Setting	27	QoS/DSCP	47
Time Setting	28	IEEE 802.1x	47
EasyLink (Optional)	28	PPPoE & DDNS	48
User Management	30	PPPoE Setting	48
Anonymous User Login	30	Send mail after PPPoE dialed	49
Universal Password	30	DDNS Setting	49
Add User	30	State	49
User List	30	Server Settings	50
Default Account	31	Mail Setting	51
System Update	31	FTP Setting	51
Firmware Upgrade	31	Samba (Network Storage)	52
Reboot System	31	Google Drive Setting	52
Factory Default	31	Dropbox Setting	56
Setting Management	31	Wireless Setting	57
Save As a File	32	Status of Networks in Wireless Setting	57
New Setting File	32	Connecting to an ad-hoc Wi-Fi network	58
Network	33	WEP Setting	62
IP Setting	34	WPA-PSK/ WPA2-PSK Setting	62
IP Assignment	34	A/V Settings	63
DHCP	34	Image Setting	64
Static IP	34	Privacy Mask	64
IPv6 Assignment	34	Image Setting: Day Profile & Night Profile	65
Manually setup the IPv6 address	34	D-WDR & True-WDR	65
DHCPv6	35	Denoise 3D & 2D	66
Automatically generated IPv6 Address	35	Shutter Time	66
Port Assignment	35	Sense-Up	66
Web Page Port	35	AE Compensation	66
HTTPs Port	35	AE Strategymode	66
UPnP	35	User Mode	67
UPnP Port Forwarding:	36	Saturation	67
RTSP Setting	37	AGC	67
		Low Lux Auto-adjust	67
		Digital Image Stabilization	67
		BLC	67
		Anti Fog	67
		Lens Distortion Correction	68



Video Orientation	68	Subject	90
IR LED	68	Interval	90
Day & Night	68	Based on the schedule	90
White Balance	70	Output Setting	90
Default	70	Mode Setting	90
Video Setting	70	RS485	91
Video System	70	Log List	91
Input Resolution	70	SD Card	92
Video System	71	Playback	92
TV Output	71	Record	95
Corridor Mode	71	SD Management	97
Smart Stream Sensitivity	73	Auto Deletion	97
Smart Stream interval	73	Format SD Card	97
Streaming Setting: Basic Mode	74	SD Card Files	97
Resolution	74	Downloading the Files	97
Profile	74	Linking the Files	97
Quality	74	Copy to PC	98
Video Frame Rate	74	NETWORK CONFIGURATION	100
Video Format	74	Configuration I	100
Stream Feature	74	Configuration II	100
RTSP Path	75	Configuration III	101
Streaming Setting: Advanced Mode	76	FACTORY DEFAULT	102
Bitrate Control Mode	76	UNIVERSAL PASSWORD	103
Video Bitrate Limit: (32Kbps~8Mbps)	76	PACKAGE CONTENTS	106
Video Quantitative: 1(Low) ~10(High)	76	MICRO SD CARD COMPATIBILITY (OPTIONAL)	107
GOP Size	76		
Snapshot Setting	77		
3GPP Streaming Setting	77		
Resolution	77		
Video Bitrate	77		
Video Frame Rate	77		
Video Format	77		
RTSP Path	78		
Audio	78		
IP Camera to PC	78		
Adjust Volume	78		
Sound Detection	79		
Event	80		
Event Setting	81		
Motion Detection	81		
Tampering Detection	82		
Record File	84		
Record Time Setting	84		
Network Dis-connected	85		
Network IP Check	85		
Schedule	86		
Schedule	86		
Profile	86		
Profile(1,2,3) Name	86		
Snapshot & Record	86		
Record	86		
Snapshot	87		
Restart IP Camera Automatically	87		
I/O Setup	87		
I/O Connection	88		
I/O PIN Definition	89		
Input Setting	89		
Log	90		

PREFACE

This is a **1/2.8" Sony STARVIS CMOS Sensor IP CAMERA** with a built-in web server. The user can view its real-time video via IE browser. It supports **H.264+**, **H.264** and **M-JPEG** video compression, with smooth and high quality. The video can be stored in Micro SD card and playback remotely.

With a user friendly interface, it is an easy-to-use IP camera for security applications.

PRODUCT SPECIFICATIONS

Main Features:

- 2 Megapixel Box IP Camera
- H.264+/ H.264/ M-JPEG Compression
- Bandwidth Savings up to 50%
- 1080P@30fps
- Support DC Iris
- Support DIS
- ROI Function
- Advanced Smart Stream
- Digital Noise Reduction
- Starvis Sensor
- True Wide Dynamic Range
- Day & Night Switch Time Control Manually
- IR-Cut Filter
- Power over Ethernet Available
- Video Output
- SD Card Backup (Optional)
- Support iPhone/iPad/Android
- Quadruple Streaming
- SDK for Software Integration
- Free Bundle 36 ch Recording Software

Hardware	
CPU	Multimedia SoC
RAM	256MB
Flash	128MB
Image Sensor	1/2.8" Sony STARVIS CMOS Sensor
Lens Changeable	Yes, CS Mount (suggest 5-50mm)
Sensitivity	Color : 0.005 Lux (AGC ON) B / W : 0.001 Lux (AGC ON)
Support DC IRIS	Yes
Wide Dynamic Range	120dB
Signal Noise Ratio	65dB
ICR	Mechanism IR cut Filter
I/O	2 DI / 2 DO
Video Output	Yes
RS-485	Yes
Audio	G.711 (64K) and G.726(32K,24K) audio compression Input : Microphone built-in & 3.5 Ø stereo jack (auto switch) Output: 3.5mm phone jack, Support 2-way.
Power over Ethernet	Yes
Power Consumption	DC 12V : 3.97W PoE Max : 4.56W
Operating Temperature	-20°C ~ 70°C
Dimensions	65mm (W) x 58mm (H) x 132mm (L)
Weight	450 g
Network	
Ethernet	10/ 100 Base-T
Network Protocol	IPv6, IPv4, HTTP, HTTPS, SNMP, SSL, TLS , DNS , ICMP, IGMP, ARP, SNTP, QoS/DSCP, CoS, IEEE 802.1X, RTSP/RTP/RTCP, TCP/IP, UDP, SMTP, FTP, PPPoE, DHCP, DDNS, NTP, UPnP, SAMBA, Bonjour, Google drive, Drop box, Onvif profile S
Wireless (Optional)	
	Wireless 802.11b/g/n
	Security WEP, WPA-PSK, WPA2-PSK
System	
Video Resolution	1920x1080@30fps, 1280x720@30fps, 640x480@30fps

Video Adjust	Mode Selector, Brightness, Contrast, Hue, Saturation, Sharpness, AGC, Night Mode, WDR, Flip, Mirror, Noise Reduction, Day& Night Adjustable, Shutter Time, AE Compensation ,BLC ,DIS ,LDC , White Balance
Features	ROI, Smart Stream, Advanced smart stream, Motion Detection, Privacy Mask, Anti Fog, Tampering Detection, Corridor Mode, Push Video , P2P(Optional)
Quadruple Streaming	Yes
Image Snapshot	Yes
Full Screen Monitoring	Yes
Privacy Mask	Yes, 3 different areas
Compression Format	H.264+/ H.264/ M-JPEG
Video Bitrates Adjust	CBR, VBR
Motion Detection	Yes, 3 different areas
Triggered Action	Mail, FTP, Save to SD card, DO, SAMBA, Dropbox , Google Drive
Pre/ Post Alarm	Yes, configurable
Security	Password protection, IP address filtering, HTTPS encrypted data transmission, 802.1X port-based authentication for network protection, QoS/DSCP
Firmware Upgrade	HTTP mode, can be upgraded remotely
Simultaneous Connection	Up to 10
SD Card Management (Optional)	
Recording Trigger	Motion Detection, IP check, Network break down (wire only), Schedule, DI
Video Format	AVI, JPEG
Video Playback	Yes
Delete Files	Yes
Remote Browsing Requirement	
OS	Windows 10 , Microsoft IE 11.0 or above
Hardware Suggested	Intel Dual Core 2.8G, RAM: 4GB, Graphic card: 128MB
Mobile Support	iOS 8 or above, Android 4.4.2 or above.

***SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTIFICATION.**

PRODUCT INSTALLATION


Monitor Settings

Caution: This setting only applies to Windows 7 system users.


- a. Right-Click on the desktop. Select **Properties**



- b. Change color quality to highest (**32bit**).

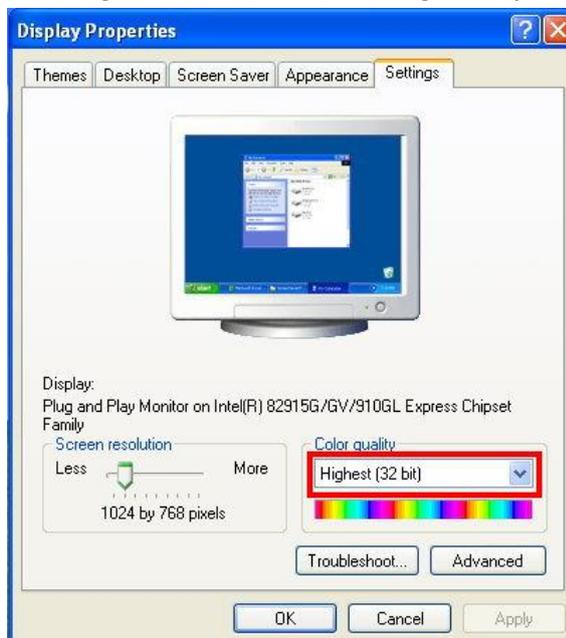


Hardware Installation

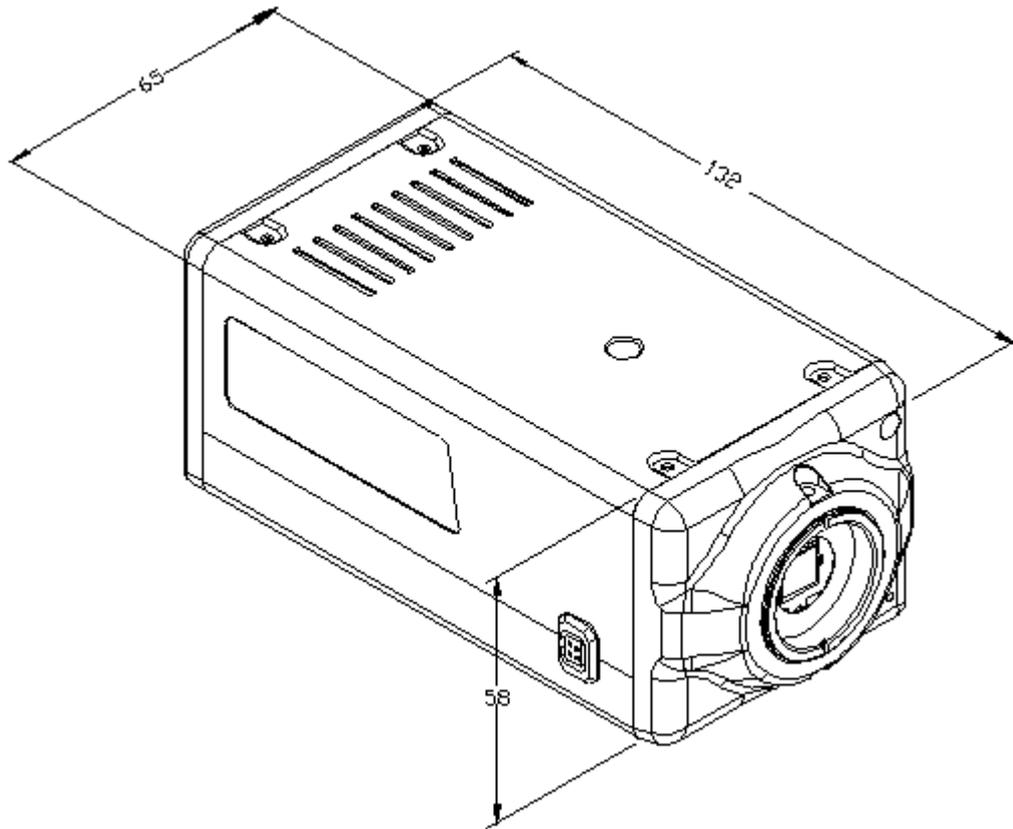

Connector Instruction

Set up configurations based on the network environment.

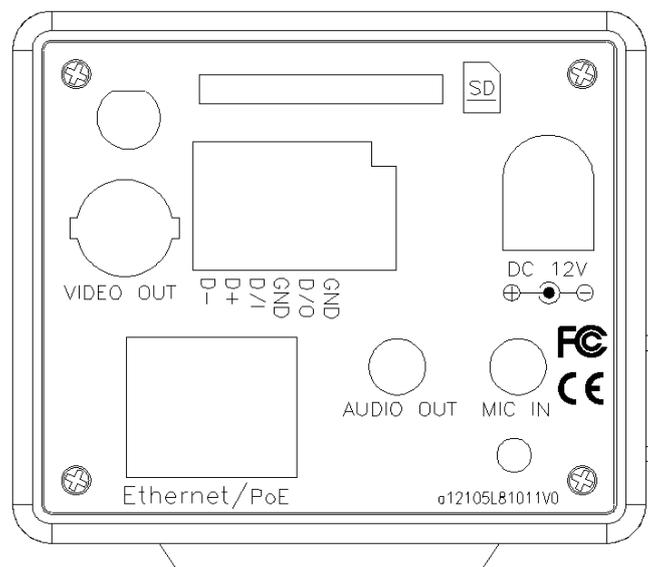

For I/O setting, please refer to [I/O Configuration](#) chapter for more. Please refer to [Micro SD Card Compatibility](#) for choosing a compatible micro SD card or [SD Card](#) for setting up its functions from a network browser.

Wireless Antenna (Optional)

(Pictures based on another camera model)




- Plug the Antenna into the connector while holding the Antenna bar.
- Turn the lock nut to the right until it is totally locked.
- Do not bend or try to straighten the antenna bar.

PoE (Power Over Ethernet)

802.3af, 15.4W **PoE Switch is recommended** (Optional)


Power over Ethernet (PoE) is a technology that integrates power into a standard LAN infrastructure.

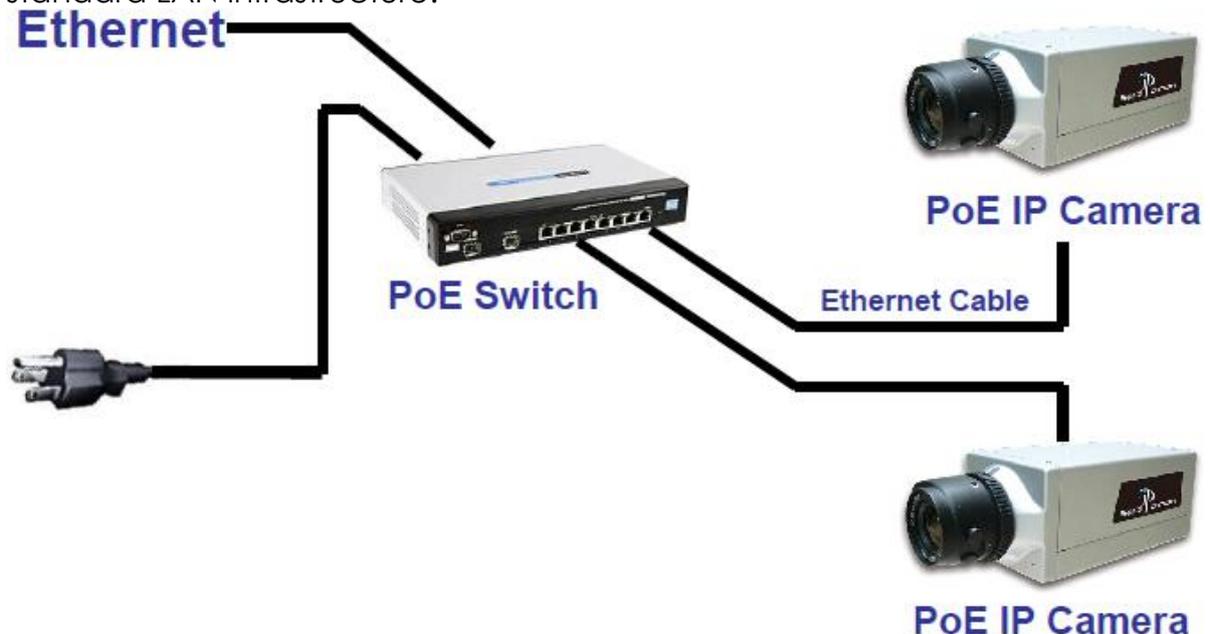

It allows providing power to a network device, such as an IP phone or a network camera, using the same cable for network connection. It eliminates the need for power outlets at the camera locations and enables easier application of uninterruptible power supplies (UPS) to ensure 24 hours a day, 7 days a week operation.

IP ASSIGNMENT

- i. Open the software [IP Scanner](#) to assign the IP address of the IP Camera. Find it in [Applications](#) folder from the CD attached of the product package.
- ii. Execute the English version of **IP Scanner**: [IPScannerENG](#)
- iii. There are 3 kinds of IP configuration.
 - Fixed IP (Public IP or Virtual IP)
 - DHCP (Dynamic IP)
 - Dial-up (PPPoE)
- iv. For Windows XP SP2 or above, a Windows Security Alert may pop up. Choose the network type based on your surveillance environment, and click on **Allow access**.

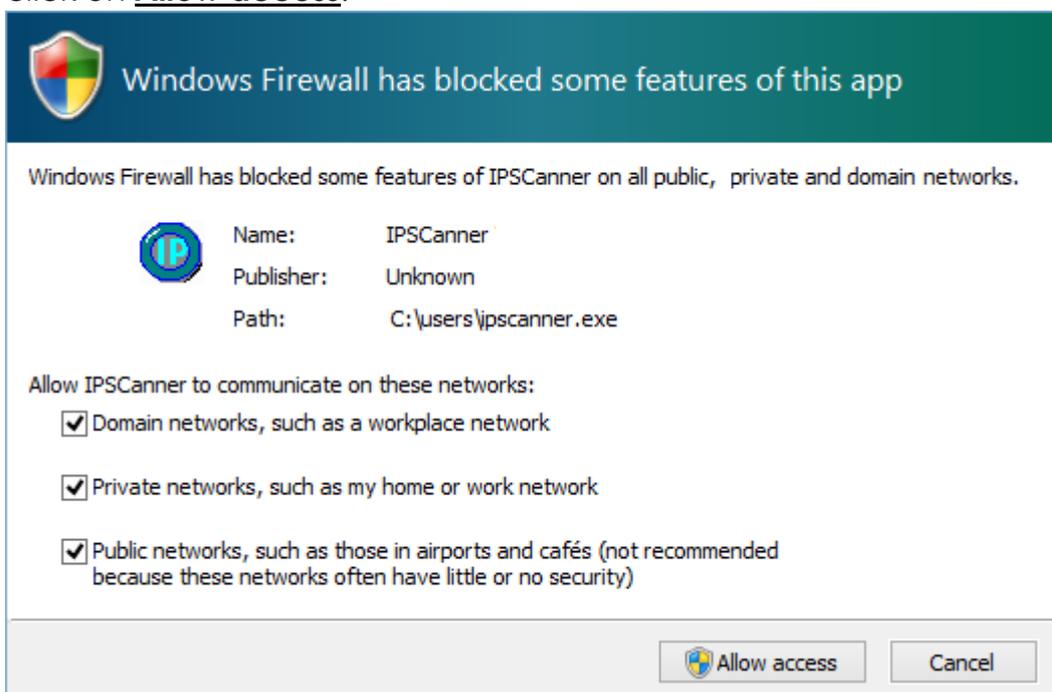

You can select different network cards that you are currently connected to from the drop-down menu at the top right corner. You can also select the online device from a specific network card in **Device lists**, or choose **Select All** to include all network card devices in **Device lists**.

- vii. Please make sure the subnet of the PC IP address and the IP Camera IP address are the same.

The same Subnet

IP Camera IP address: 192.168.1.200

PC IP address: 192.168.1.100

Different Subnets

IP Camera IP address: 192.168.2.200


PC IP address: 192.168.1.100

To Change the PC IP address

Control Panel→Network Connections→Local Area Connection

Properties→Internet Protocol (TCP/IP) →Properties

Make sure your IP Camera and PC are in the same Subnet. If not, change the IP Camera subnet or the PC IP subnet accordingly below.

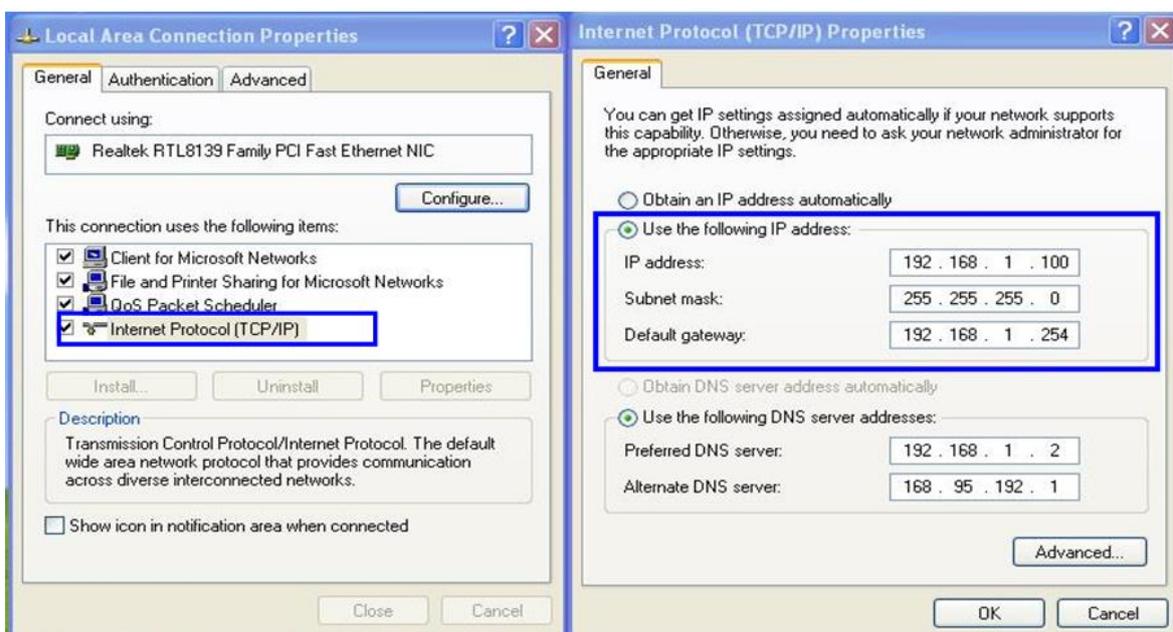


INSTALL ACTIVE CONTROL

For users using IE 6.0 or above

When viewing the camera video for the first time via IE, the browser will ask you to install the **ActiveX** component.

Choose '**Allow**'

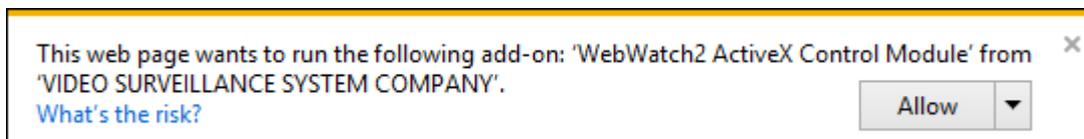


The ActiveX component should then be completed and user will be able to view the live video screen.


If the installation fails, please check the security settings in the IE browser. Follow the steps below:

- 1) Go to **Start-Up Menu**  on the lower left corner of the **Windows**
- 2) Select **Control Panel** 
- 3) Double-click on  **Internet Options**.
- 4) You will then enter the page of **Internet Properties** settings.
- 5) Starting from **Internet Properties**, proceeding steps as below:
 - Security → Custom Level → Security Settings → Download unsigned ActiveX controls → Enable or Prompt (recommended).
 - Security → Custom Level → Security Settings → Initialize and script ActiveX controls not marked as safe → Enable or Prompt (recommended).


i

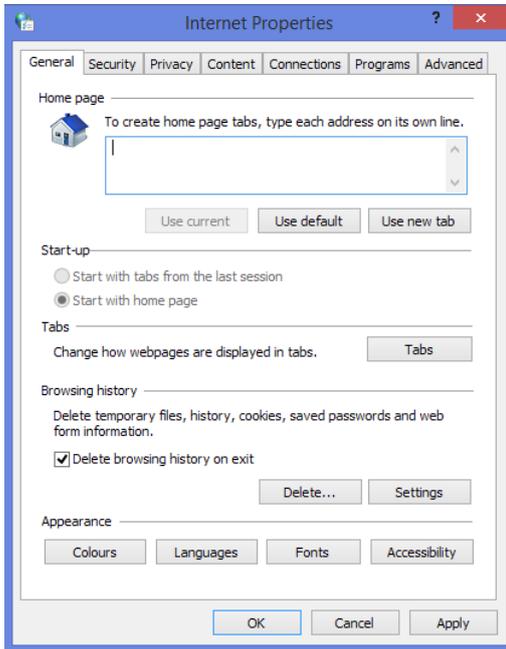


ii

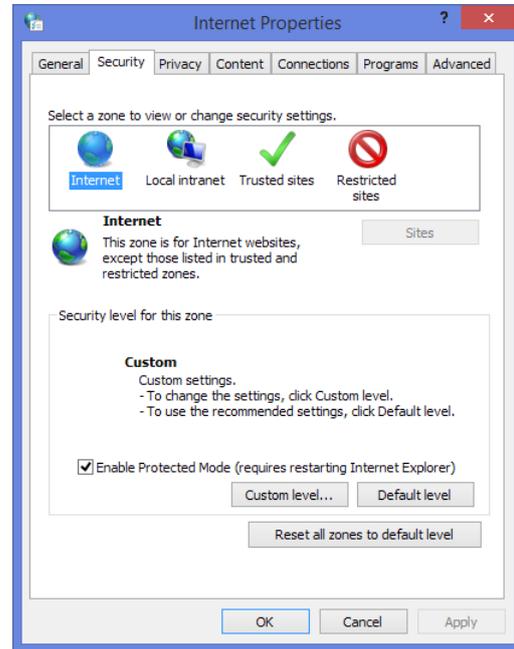

iii

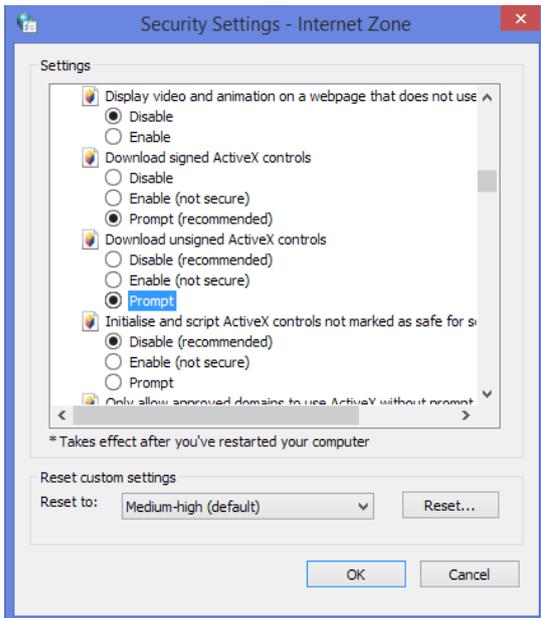


vi

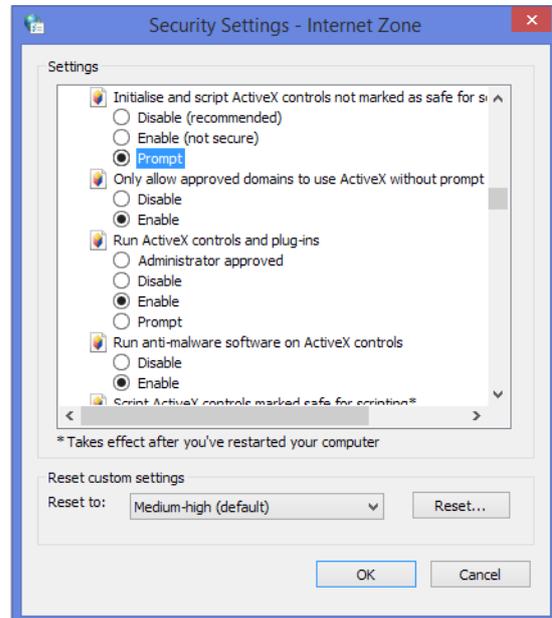


v

When popup the following dialogue box, click **Yes**.

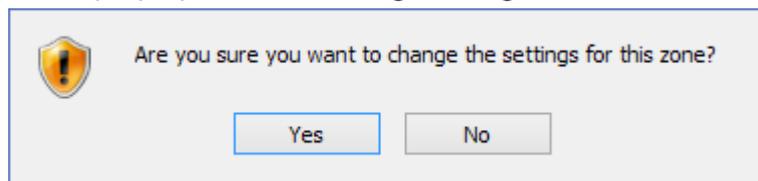

Another Method


Go to: IE→Tools → Internet Options... → Security Tab → Trusted sites → Add the IP address and click **OK**.

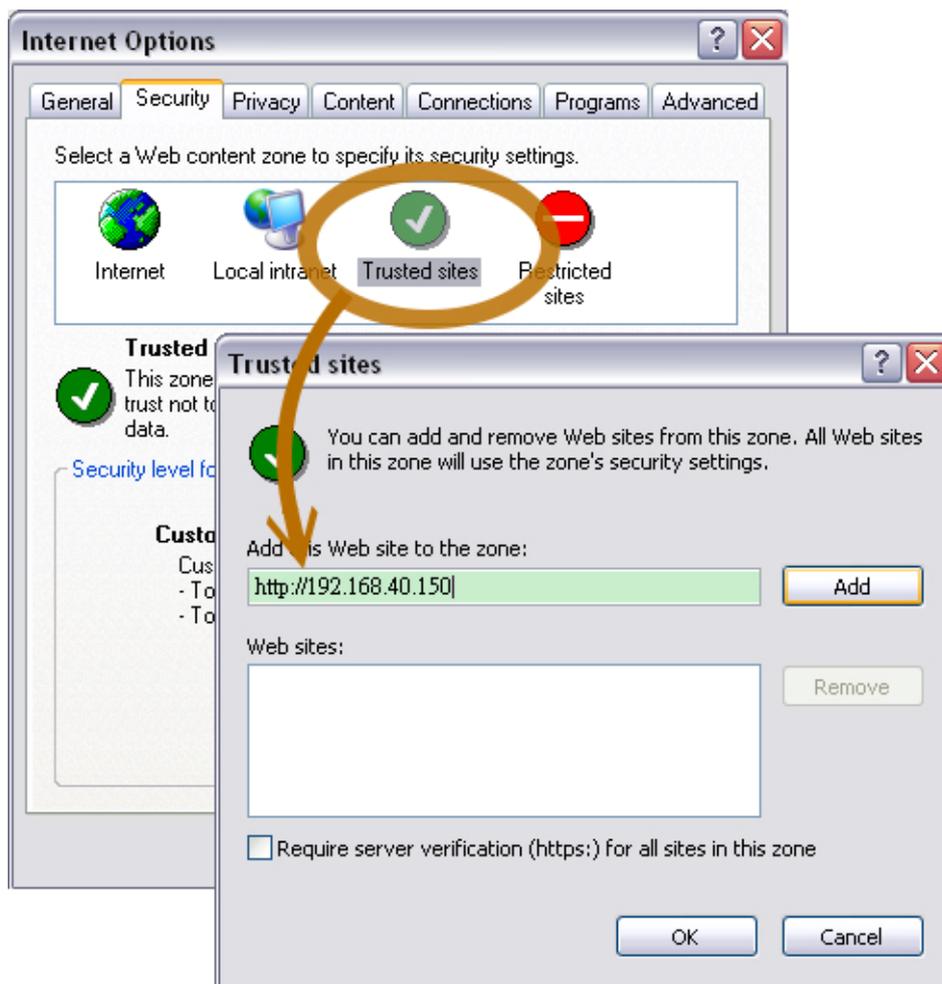

In the site list you can key in one single IP address or a LAN address. For example, if you add **192.168.21.***, all the IP address under **21.*** on the LAN will be regarded as trusted sites.

LIVE VIDEO

Once your [IP Assignment](#) has been completed, log in to the IP camera.

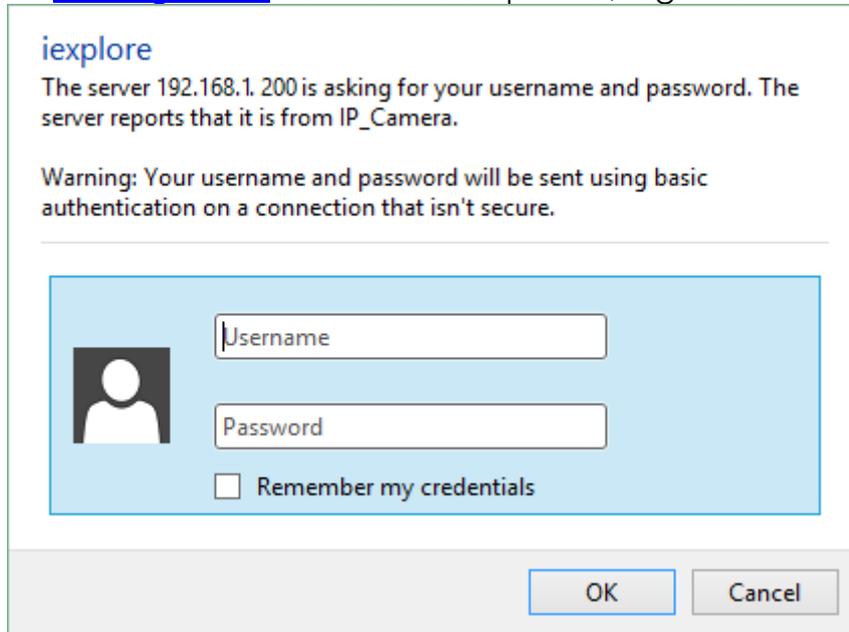

iexplore
The server 192.168.1.200 is asking for your username and password. The server reports that it is from IP_Camera.

Warning: Your username and password will be sent using basic authentication on a connection that isn't secure.

Remember my credentials

OK Cancel

When IP Camera is successfully connected it shows the following interface. Please refer to [Live Video Panel](#) for icons representing different functions.




Please change default password is a sign which flickers on the live view screen as a reminder, to suggest the user to change the default password. You may configure the login settings in [System](#) to secure your account privacy.

Full Screen Mode

Double-clicking on the video screen will enter the full screen mode. Press “Esc” on your computer keyboard or double-click the video screen again for returning to normal screen mode.


Live Video Panel

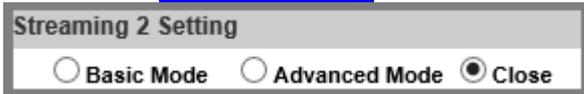- Click  - Get into the administration page.
- Click  - A snapshot preview window will appear.
Choose  to save the current snapshot or choose  to discard it.
- Show the system time, video resolution, and other information.
2015/APR/02 10:14:56 Size:2592x1944
- - Adjust image size by its ratio of 1/2x(default), 1x, and 2x.
- - Select the video streaming source: If the streaming 2 is set closed in [Video Setting](#), this function will not be displayed.


Streaming 2 Setting
 Basic Mode Advanced Mode Close
- Tick on **Chatting** checkbox to enable two-way audio. You may adjust settings from [Audio Setting](#).
- **Online Visitor:** Shows how many people are connected to this device.
- Click on   icons to adjust Zoom In / Zoom Out.
- **DO:** ON OFF - Control the external output device or DO (digital output) connected to this camera.

Submenu


Right-Click the mouse on the live video screen, a pop-up menu will then appear as below.

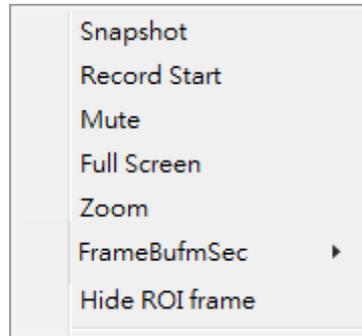

- i. **Snapshot**: Save a JPEG picture
- ii. **Record Start**: Record the video to the local PC. The video format is AVI and you will be asked to set up the directory for the video file. To stop recording, right-click again. Select “Record Stop”.
- iii. **Mute**: Click to turn off the audio. Click again to turn it on.
- iv. **Full Screen**: Full-screen mode.
- v. **Zoom**: Select “zoom” within the pop-up dialogue box and then drag and drop the bar to adjust the zoom factors.




- vi. **Frame Buffm Sec**: This function aims to build a temporary buffer to accumulate several video frames in a LAN network environment. It can make video streaming smooth when the network speed is slow.

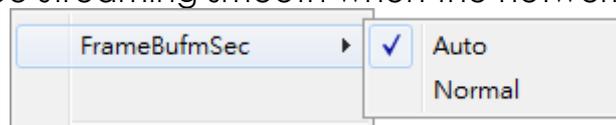

Select **Auto** to allow this function automatically help fix the streaming performance whenever the video happens to be lagging.

Select **Normal** to play the video data based on the current network streaming performance. (Note: the lagging of the video displayed will not be seen as a result of the actual video data)

- vii. **Hide / Show ROI frame:** Once the ROI frame has been set up from [AV Settings](#), there will be frames in colors appearing on the live view. Choose to hide to make the frames invisible, or choose show to keep the frames.

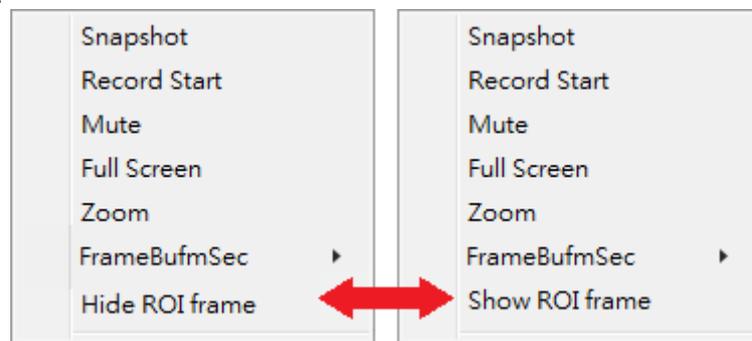

CAMERA CONFIGURATION

System



Click  to get into the administration page. Click  to go back to the [live video](#) page.




The screenshot shows the camera configuration web interface. On the left is a dark sidebar with a menu. The main content area is titled 'System Information' and contains several sections:

- System Information** (Header)
- Server Information**
 - MAC Address: 00:0F:0D:28:92:B0
 - Server Name: IP_Camera Status Bar
 - Language:
 - English
 - 繁體中文
 - 简体中文
 - French
 - Russian
 - Italian
 - Spanish
 - German
 - Portuguese
 - Polish
 - Japanese
- OSD Setting**
 - Time Stamp: Enabled Disabled
 - Text: Enabled Disabled
 - OSD_Display [Text Edit](#)
- Time Setting**
 - Server Time: 2018/1/12 0:26:04 Time Zone: GMT+08:00
 - Date Format: yy/mm/dd mm/dd/yy dd/mm/yy
 - Time Zone: GMT+08:00
 - Enable Daylight Saving:
 - NTP :
 - NTP Server : pool.ntp.org
 - Update : 6 Hour
 - Time Shift : 0 Minutes [-1440..1440]
 - Synchronize with PC's time
 - Date : 2018/4/11
 - Time : 15:46:54
 - Manual
 - Date : 2018/4/11
 - Time : 15:46:51
 - The date and time remain the same

An 'Apply' button is located at the bottom right of the configuration area.

System Information

Server Information


Set up the camera name, language, and the camera time for displaying on [live video](#) mode.



The screenshot shows a configuration window titled "Server Information". It contains the following fields and options:

- MAC Address:** A text box containing "00:0F:0D:2C:89:FE".
- Server Name:** A text box containing "Camera" and a checkbox labeled "Status Bar".
- LED Indicator:** Radio buttons for "ON" (selected) and "OFF".
- Language:** Radio buttons for "English" (selected), "繁體中文", "简体中文", "French", "Russian", "Italian", "Spanish", "German", "Portuguese", "Polish", and "Japanese".

- **MAC Address:** The given identification specifically assigned for each camera model. Every MAC address is different, and cannot be modified.
- **Server Name:** This is the Camera name which will also be shown on [IP Scanner](#). Tick the checkbox of **Status Bar** and click **Apply** at the right bottom of the page to display the **Server Name** in [live video](#). For example, if you input **DEMO**, then the word **Camera** will be displayed at live video mode at the bottom.
DEMO SEP/17/2018 13:52:25 H.264+ Size:3840x2160
- **LED Indicator:** Turn on/off the LED indicator on the camera.
- **Language:** English and other languages can be selected. When a language preference is selected, the following dialogue box will pop up to confirm the change.

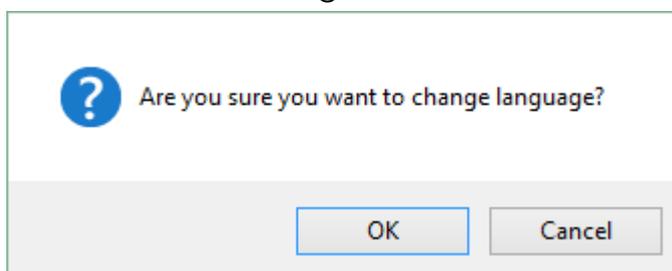

OSD Setting

You can adjust the **Position** for the **Enabled** option of **Time Stamp** or **Text** which will be displayed on [live video](#) screen.

OSD Setting

Time Stamp: Enabled Disabled

Text: Enabled Disabled

OSD_Display [Text Edit](#)

Click [Text Edit](#) to edit the OSD content which is defaulted as **OSD_Display**.

Text Edit



Text Edit

Text

Size ▼

Transparency ▼

Upgrade

Text: Input the arbitrary content of the OSD on [Live video](#) screen.

Size: Adjust the size of the OSD text on [Live video](#) screen.

Transparency: Adjust the transparency of the OSD text on [Live video](#) screen.

Click the **Upgrade** button to apply settings.

Time Setting

Time Setting

Server Time: 2015/7/28 12:43:57 Time Zone: GMT+08:00

Date Format: yy/mm/dd mm/dd/yy dd/mm/yy

Time Zone:

Enable Daylight Saving:

DST Start:	Month		Day of Week	Time
	<input type="text" value="Mar"/>	<input type="text" value="2nd"/>	<input type="text" value="Sun"/>	<input type="text" value="12 am"/>
DST End:	<input type="text" value="Nov"/>	<input type="text" value="1st"/>	<input type="text" value="Sun"/>	<input type="text" value="12 am"/>

NTP :

NTP Server :

Update : Hour

Time Shift : Minutes [-1440..1440]

Synchronize with PC's time

Date :

Time :

Manual

Date :

Time :

The date and time remain the same

Assign the formation to display **Year/Month/Date** on [Live video](#) screen, as well enable **Daylight Saving** and other options.

EasyLink (Optional)


EasyLink

EasyLink ID:


QR Code: 

Install **IP Motion App** on your mobile phone to access **EasyLink** operation which allows user to watch IP camera live view on self-owned mobile phones. Once the installation is done, either enter the **EasyLink ID** from the IP camera web browser, or simply scan the **QR Code** to help you log in to your IP camera through **IP Motion App** and watch the live view.

For iOS

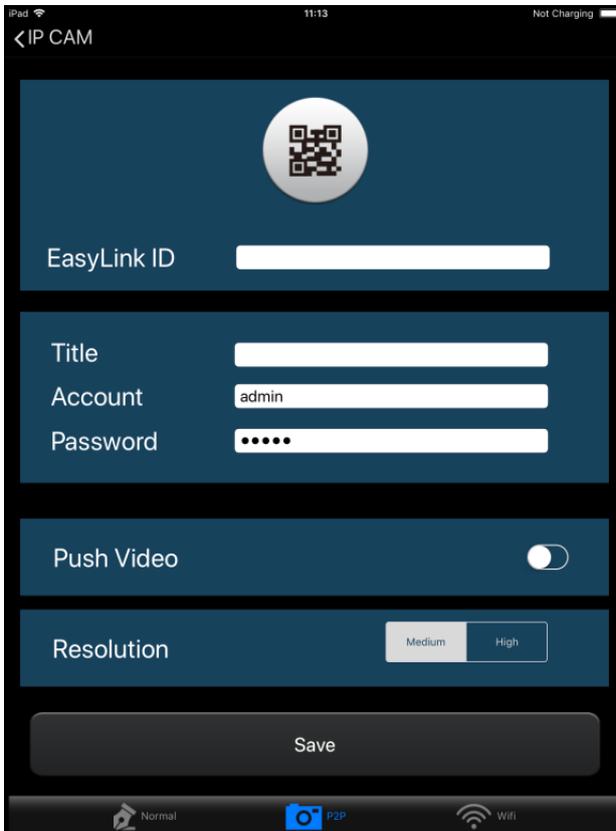

For Android

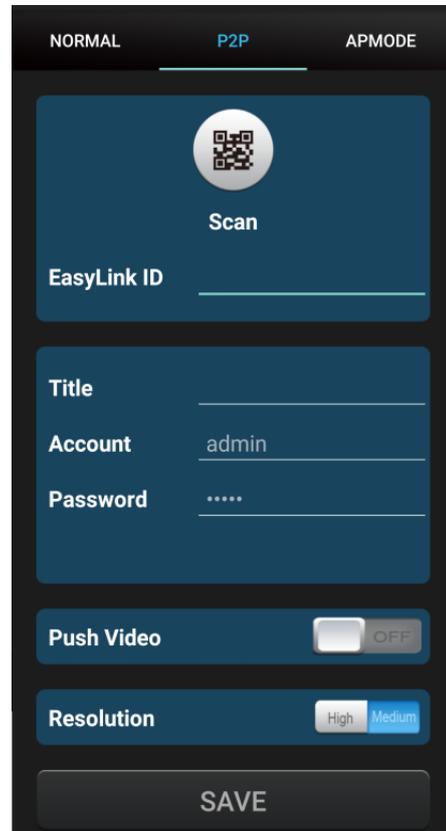

Read more about operating **IP Motion App** from the user's manual document inside the folder [User Manual Mobile Phone APP](#) which comes as part of the **CD contents**.

Note: Your smartphone must be equipped with a camera and featured with a QR code scanner application.

User Management

User Management

Anonymous User Login

YES NO

Universal Password (differs by IP Address)

YES NO

Add User

Username:
 Password:
 Confirm:

User List

Username	User Group	Modify	Remove
admin	Administrator	Edit	-----
grace	Guest	Edit	Remove

Default Account

Show reminder message [Please change IP Cam default password]

Anonymous User Login

Select **Yes** for allowing access to watch live video of the IP camera without having to enter username and password. Yet when entering the configuration page of the IP camera, the system will do otherwise. Select **No** for requiring a username and login to access the camera.

Universal Password

Select **Yes** for allowing login to this IP camera by universal password. Please refer to [Universal Password](#) chapter for more explanations. Select **No** for disabling universal password.

Add User

The IP Camera supports 2 different users: **Administrator** and **Guest**.

Administrator can operate everything. **Guest** has the right to access [Live view](#), time sync, location setting, playback viewing and check playlist.

User List


Type the user name and password, then click **Add/Set**. The guest user can only browse live video page and is not allowed to enter the configuration page. Click **Edit** or **Remove** in the user list to modify them. The system will ask

you to input the password in the pop-up window before you edit the user information.

Default Account

Please change default password is a sign which appears on the live view screen as a reminder, suggesting the user to change the default password. Click the checkbox to enable/disable the reminder message.

System Update

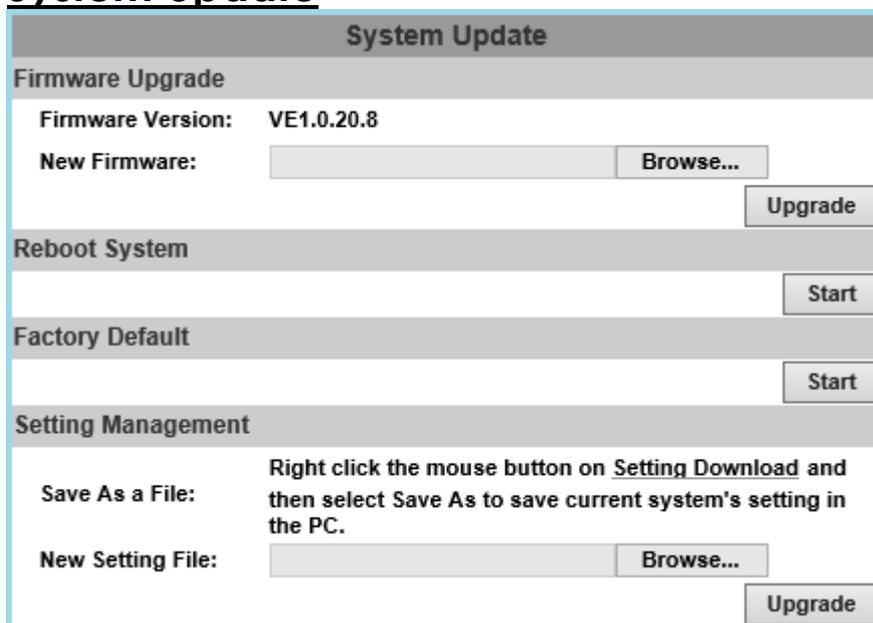

The screenshot shows a web interface titled "System Update" with the following sections:

- Firmware Upgrade**: Shows "Firmware Version: VE1.0.20.8". Below it is a "New Firmware:" field with a "Browse..." button and an "Upgrade" button.
- Reboot System**: A "Start" button.
- Factory Default**: A "Start" button.
- Setting Management**: Includes a "Save As a File:" section with instructions: "Right click the mouse button on Setting Download and then select Save As to save current system's setting in the PC." Below this is a "New Setting File:" field with a "Browse..." button and an "Upgrade" button.

Firmware Upgrade

To update the firmware online, click **Browse...** to select the firmware, and then click **Upgrade** to proceed.

Reboot System

Restart the IP camera.

Factory Default

Delete all the settings of this IP camera.

Setting Management

The user can download the current settings to PC, or upgrade from previous saved settings.

Save As a File

Right-click the mouse button on **Setting Download** → Select **Save AS...** to save current IP Camera settings in PC → Select saving directory → Save

New Setting File

To upgrade new settings, click **Browse** to search previous settings from a pop-up window, then click **Open** → **Upgrade** → Settings update confirm. Finally, click **index.html**. to returning to main page.

Network

Click  to get into the administration page. Click  to go back to the [live video](#) page.



The screenshot displays the IP Solutions administration interface. On the left is a dark sidebar with a menu. The main content area is titled 'System Information' and contains several sections:

- System Information**
 - Server Information:
 - MAC Address: 00:0F:0D:28:92:B0
 - Server Name: IP_Camera Status Bar
 - Language:
 - English
 - 繁體中文
 - 简体中文
 - French
 - Russian
 - Italian
 - Spanish
 - German
 - Portuguese
 - Polish
 - Japanese
- OSD Setting**
 - Time Stamp: Enabled Disabled
 - Text: Enabled Disabled
 - OSD_Display [Text Edit](#)
- Time Setting**
 - Server Time: 2018/1/12 0:26:04 Time Zone: GMT+08:00
 - Date Format: yy/mm/dd mm/dd/yy dd/mm/yy
 - Time Zone: GMT+08:00
 - Enable Daylight Saving:
 - NTP :
 - NTP Server: pool.ntp.org
 - Update: 6 Hour
 - Time Shift: 0 Minutes [-1440..1440]
 - Synchronize with PC's time
 - Date: 2018/4/11
 - Time: 15:46:54
 - Manual
 - Date: 2018/4/11
 - Time: 15:46:51
 - The date and time remain the same

An **Apply** button is located at the bottom right of the main content area.

Enter the Network by clicking on titles from IP Setting, Advanced, PPPoE & DDNS and Server Settings.

IP Setting

IP Assignment

The IP Camera supports DHCP and static IP.

IP Setting	
IP Assignment	
<input type="radio"/> DHCP	
<input checked="" type="radio"/> Static	
IP Address:	<input type="text" value="192.168.1.200"/>
Subnet Mask:	<input type="text" value="255.255.255.0"/>
Gateway:	<input type="text" value="192.168.1.254"/>
DNS 0:	<input type="text" value="168.95.1.1"/>
DNS 1:	<input type="text" value="168.95.192.1"/>

DHCP

The IP Camera will get all the network parameters automatically.

Static IP

Type-in the IP address subnet mask, gateway, and DNS.

IPv6 Assignment

By enabling DHCPv6 you can configure the following IPv6 address settings:

IPv6 Assignment	
<input checked="" type="checkbox"/> IPv6 Enabled:	
<input checked="" type="checkbox"/> Manually setup the IPv6 address:	
IPv6 Address/Prefix:	<input type="text" value="::"/> /
	<input type="text" value="64"/>
IPv6 Gateway:	<input type="text" value="::"/>
IPv6 DNS:	<input type="text" value="::"/>
DHCPv6:	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
IPv6 Address:	fe80::20f:dff:fe00:284d

Manually setup the IPv6 address

Key-in the Address, Gateway, and DNS.


DHCPv6

If you have a DHCPv6 server, enable it to assign the IPv6 automatically. The assigned IP address will be displayed alongside.

Automatically generated IPv6 Address

Indicates a virtual IPv6 address automatically generated by the IP camera. This virtual IPv6 address cannot be used on WAN.

Use IPv6 address to access the IP camera. Open a web browser and input **[IPv6 address]** in its address bar. The **[]** parentheses mark is necessary.

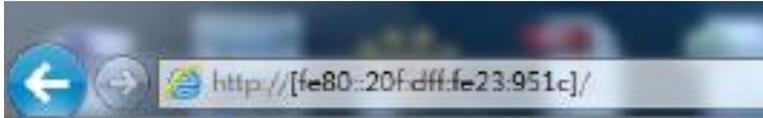

Port Assignment

The user might need to assign a different port to avoid conflicts when setting up the IP.

Port Assignment	
Web Page Port:	<input type="text" value="80"/>
HTTPS Port:	<input type="text" value="443"/> HTTPS Setting

Web Page Port

Setup the web page connecting port and video transmitting port (Default: 80)

HTTPs Port

Setup the https port(Default: 443)

UPnP

UPnP	
UPnP:	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled
UPnP Port Forwarding:	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
External Web Port:	<input type="text" value="80"/>
External HTTPS Port:	<input type="text" value="443"/>
External RTSP Port:	<input type="text" value="554"/>

This IP camera supports UPnP, if this service is enabled on your computer, the camera will automatically be detected and a new icon will be added to **My Network Places**.

UPnP Port Forwarding:

Enable UPnP Port Forwarding for accessing the IP Camera from the Internet; this option allows the IP Camera to open ports on the router automatically so that video streams can be sent out from a LAN. There are three external ports for being set: **Web Port**, **Http Port** and **RTSP** port. To utilize of this feature, make sure that your router supports **UPnP** and is activated.


Note: UPnP must be enabled on your computer.
Please follow the procedure to activate UPnP:

<Approach 1>


- i. Open the **Control Panel** from the **Start Menu**
- ii. Select **Add/Remove Programs**
- iii. Select **Add/Remove Windows Components** & open **Networking Services** section
- iv. Click **Details** and select **UPnP** to setup the service.
- v. The IP device icon will be added to **My Network Places**.
- vi. The user may double click the IP device icon to access IE browser

<Approach 2>

- i. Open My **Network Space**
- ii. Click **Show icons for networked UPnP devices** in the tasks column on the left.

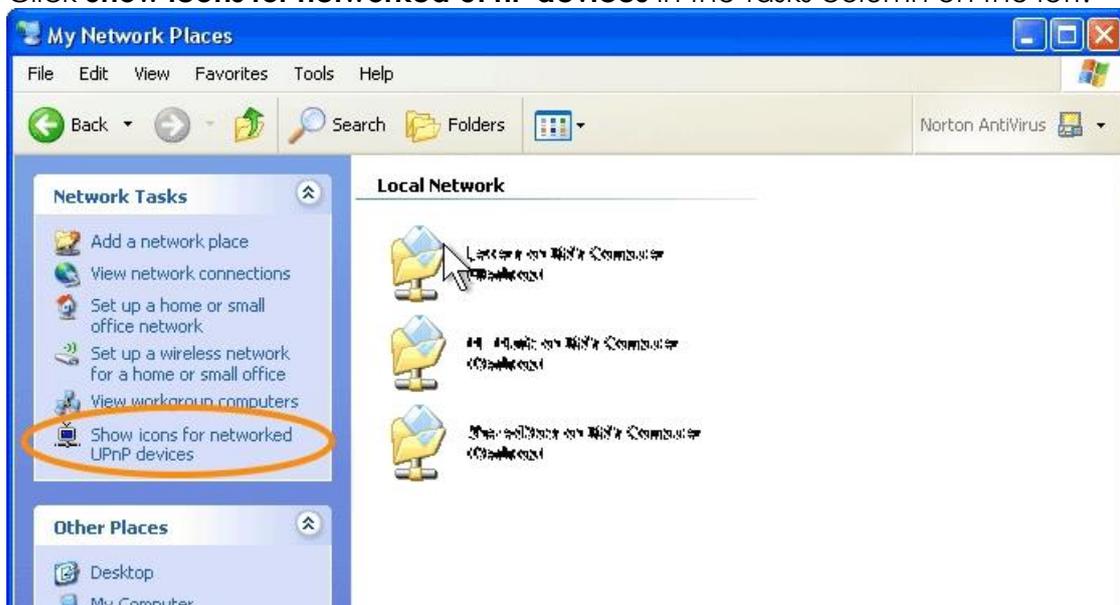

- iii. Windows might ask your confirmation for enabling the components. Click **Yes**.
- iv. Now the IP device is displayed under the LAN.
- v. Double-click the icon to access the camera via web browser.
- vi. Click **Hide icons for networked UPnP devices** on the left to disable UPnP.

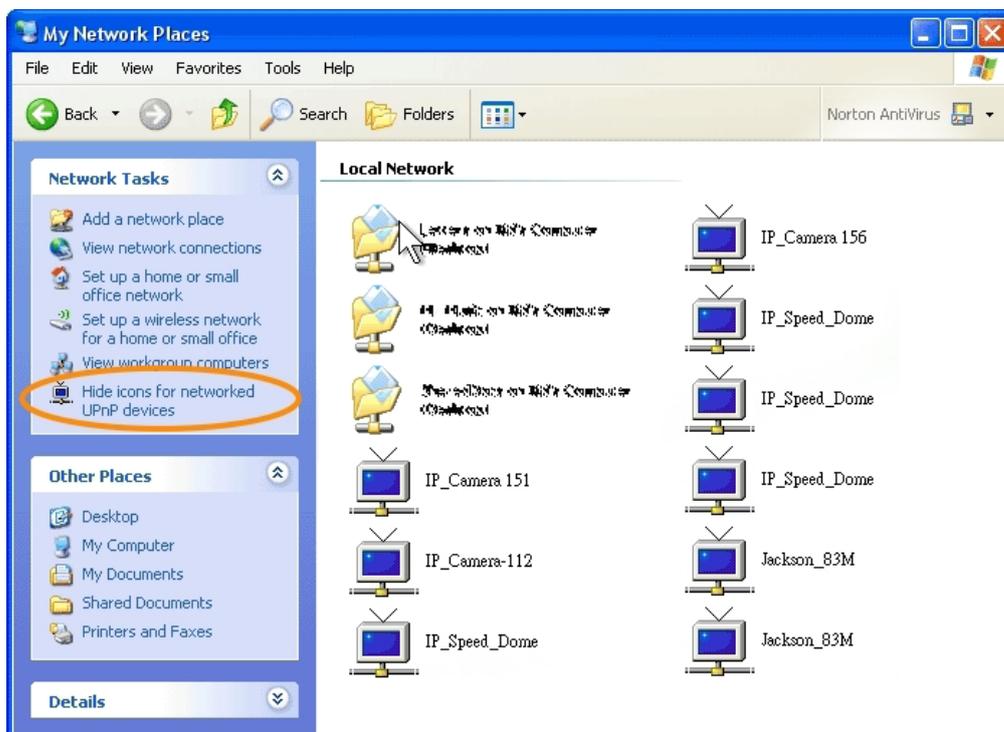

RTSP Setting

RTSP Setting		
RTSP Server:	<input checked="" type="radio"/> Enabled	<input type="radio"/> Disabled
RTSP Authentication:	Disable ▾	
RTSP Port :	554	
RTP Start Port:	5000	[1024..9997]
RTP End port:	9000	[1027..10000]

If you have a media player that supports RTSP protocol, you can use it to receive video streaming from the IP camera. The RTSP address can be set for two streaming transmissions respectively.

RTSP Server

Choose Enabled or Disabled.

Disable means everyone who knows your camera IP Address can link to your camera via RTSP. No username and password are required. Under Basic and Digest authentication mode, the camera asks for a username and password before allows access. The password is transmitted as a clear text under basic mode, which provides a lower level of security than under digest mode. Make sure your media player supports the authentication schemes.

RTSP Port

Setup port for RTSP transmitting (Default: 554)

RTP Start and End Port

In RTSP mode, you can use TCP and UDP for connecting. TCP connection uses RTSP Port (554). UDP connection uses RTP Start & End Port.

Multicast Setting (Based on the RTSP Server)

Multicast Setting (Based on the RTSP Server)		
Streaming 1:		
IP Address:	<input type="text" value="234.5.6.78"/>	[224.3.1.0 ~ 239.255.255.255]
Port:	<input type="text" value="6000"/>	[1 ~ 65535]
TTL:	<input type="text" value="15"/>	[1 ~ 255]
Streaming 2:		
IP Address:	<input type="text" value="234.5.6.79"/>	[224.3.1.0 ~ 239.255.255.255]
Port:	<input type="text" value="6001"/>	[1 ~ 65535]
TTL:	<input type="text" value="15"/>	[1 ~ 255]

Multicast is a bandwidth conservation technology. This function allows several users to share the same packet sent from the IP camera. For using Multicast, appoint here an IP Address and port. TTL means the life time of packet, the larger the value is, the more users can receive the packet. **For using Multicast, be sure to enable the function Force Multicast RTP via RTSP in your media player. Then key in the RTSP path of your camera: rtsp ://(IP address)/ to receive the multicast.**

ONVIF

ONVIF		
ONVIF:	<input checked="" type="radio"/> v2.10/v1.02	<input type="radio"/> v1.01 <input type="radio"/> Disabled
Security:	<input type="radio"/> Enabled	<input checked="" type="radio"/> Disabled
RTSP Keepalive:	<input checked="" type="radio"/> Enabled	<input type="radio"/> Disabled

Choose your ONVIF version and settings.

ONVIF

Under ONVIF connection, the video will be transmitted by RTSP. Be sure to enable the RTSP server in IP setting, otherwise the IP Camera will not be able to receive the video via ONVIF.

Security

By selecting **Disable**, the username and password are not required for accessing the camera via ONVIF. By selecting **Enable** the username and password are necessary.

RTSP Keepalive


When the function is enabled, the camera will check once in a while if the camera via ONVIF is still connected. If the connection has been broken, the camera will stop transmitting video to the user.

Bonjour

Bonjour	
Bonjour:	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
Bonjour Name:	<input type="text" value="IP_Camera"/> @00:0F:0D:00:28:4D

This function allows Apple systems to connect to this IP camera. On **Bonjour Name** key-in the name here. The web browser **Safari** also has a Bonjour function. Tick **Include Bonjour** in the bookmark setting, for the IP camera to appear under the Bonjour category.


Click the icon to connect to the IP camera. The Bonjour function on Safari browser doesn't support HTTPS protocol. If on the camera you select **https**, the camera will appear on Safari's bookmarks but it cannot be accessed. Take as a reference the following image:

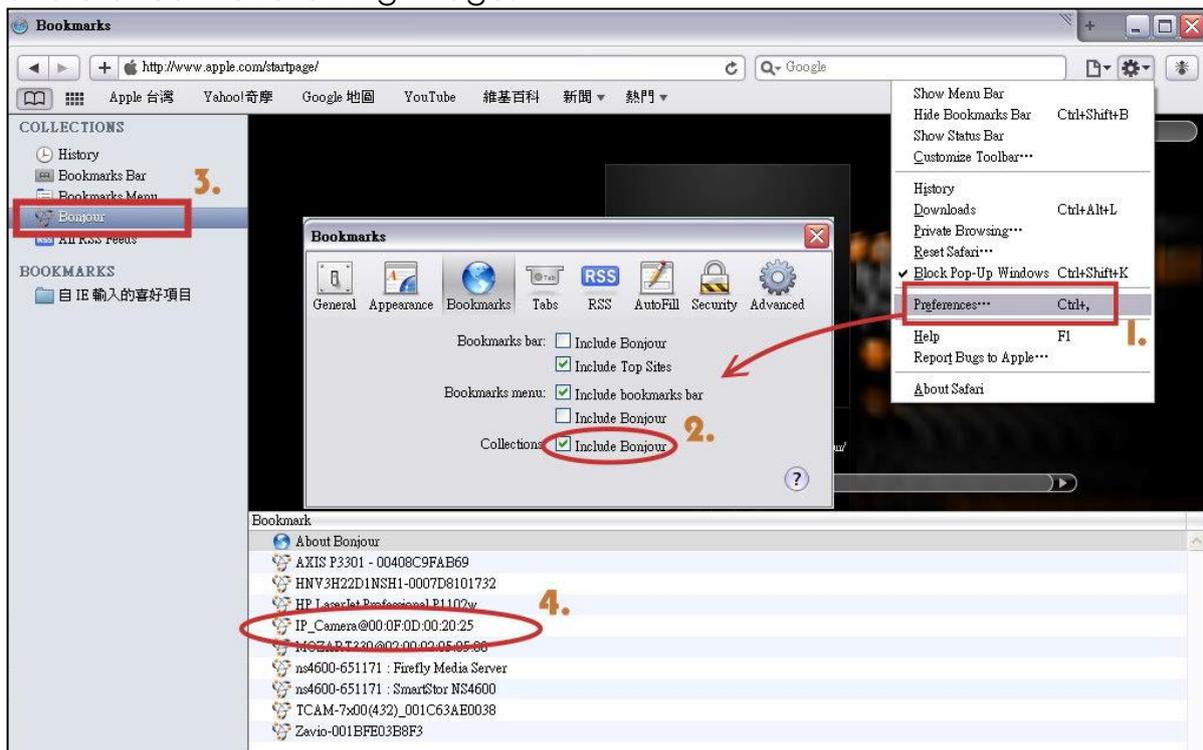

LLTD

LLTD (Link Layer Topology Discovery)	
LLTD:	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled

If your PC supports LLTD, enable this function for allowing checking the connection status, properties, and device location (IP address) in the network map. If the computer is running Windows Vista or Windows 7, you can find LLTD through the path: Control Panel → Network and Internet → Network and Sharing Center → Click **See full map**.

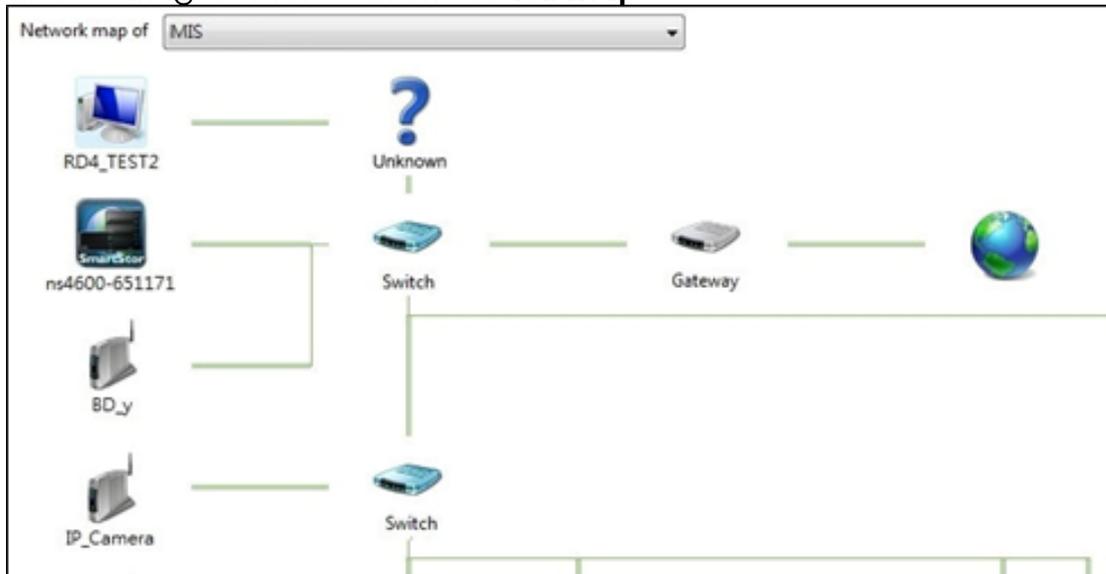

Advanced


HTTPS Setting

(Hypertext Transfer Protocol Secure)

When the users access cameras via Https protocol, the transmitted information will be encrypted, increasing the security level.

HTTPS Setting	
Created Request	
Subject:	C=TW , ST= , L= , O= , OU= , CN=
Date:	2020/Mar/11 17:46:44
<input type="button" value="Content"/> <input type="button" value="Remove"/> <input type="button" value="Download"/>	
Installed Certificate	
Subject:	C=TW , ST= , L= , O= , OU= , CN=
Date:	Mar 14 08:45:42 2038 GMT
<input type="button" value="Content"/> <input type="button" value="Remove"/> <input type="button" value="Download"/>	
Connection Types	
<input type="checkbox"/> Only TLS1.2	
HTTP <input type="button" value="v"/>	

Connection Types

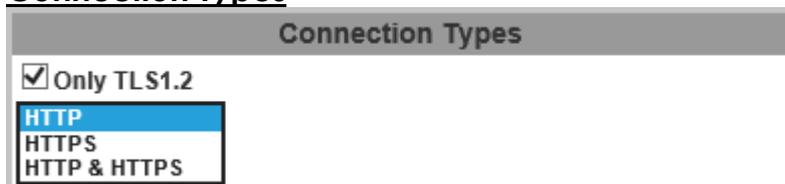

TLS is the abbreviation of **Transport Layer Security**. Many websites send data with connection established by this protocol to. Tick **Only support TLS1.2** checkbox with mouse to enable. Select the connection type:

HTTP

User can access the camera via HTTP path but cannot access it via HTTPS path.

HTTPS


User can access the camera via HTTPS path but cannot access it via the HTTP path.

HTTP & HTTPS

Both the Http and Https path can be used to access the camera. When you change the connection type settings, it may cause connection error or disconnection error if you switch the protocol directly. Therefore, **HTTP & HTTPS** mode is necessary.

If you want to change from Http to Https, please switch to **HTTP & HTTPS** mode first, and then switch to **HTTPS** mode and vice versa.

The Https protocol has a verifying mechanism. When the user access a website via Https, the browser will check the certificate of that domain and verify its trustiness and security. Certificate generation process:

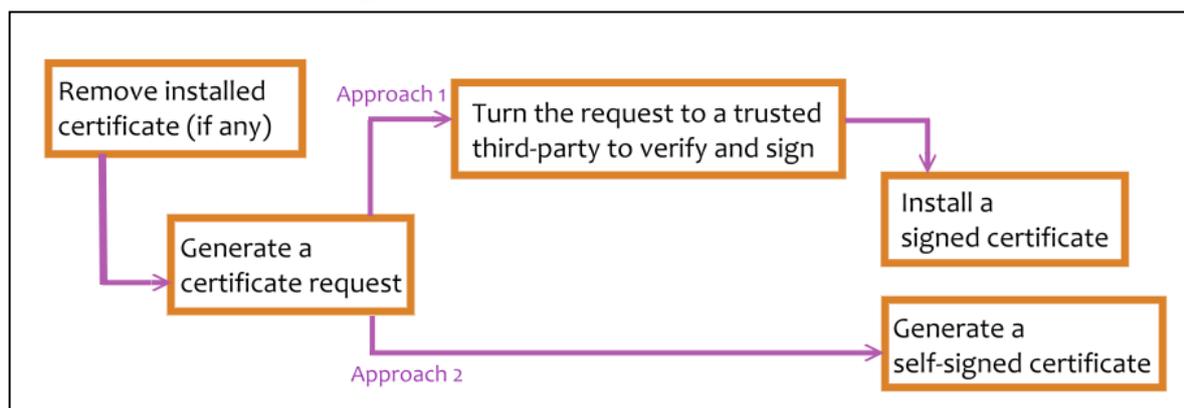

Remove Existing Certificate

Before you generate a new certificate, please remove the installed one. Select the **HTTP** connection type and click **Remove**. If a dialog box pops up to ask you to confirm, click **Yes**.

HTTPS Setting

Created Request

Subject:

Date:

Installed Certificate

Subject:

Date:

Download Request

Click Download to save the CSR (Certificate Signing Request) file. Select **Save** from the pop-up window and assign the download directory path.

Do you want to open or save `request_public_key.csr` from `192.168.81.110`?

Created Request

Fill-in the following form and click **apply**.

Https Setting

Create Request

Country:

State or province:

Locality:

Organization:

Organizational Unit:

Common Name:

Country: Country where the company is located

State or province: The state or province where the company is located


Locality: The name of the city where the company is located

Organization: Needs to be consistent with legally registered name

Organizational Unit: Company department, you can fill in its common name

Common Name: The name of the domain you want to secure

After generating a certificate request, if you choose to turn it & verify it by a trusted third-party, click **Content** and copy all the request content.

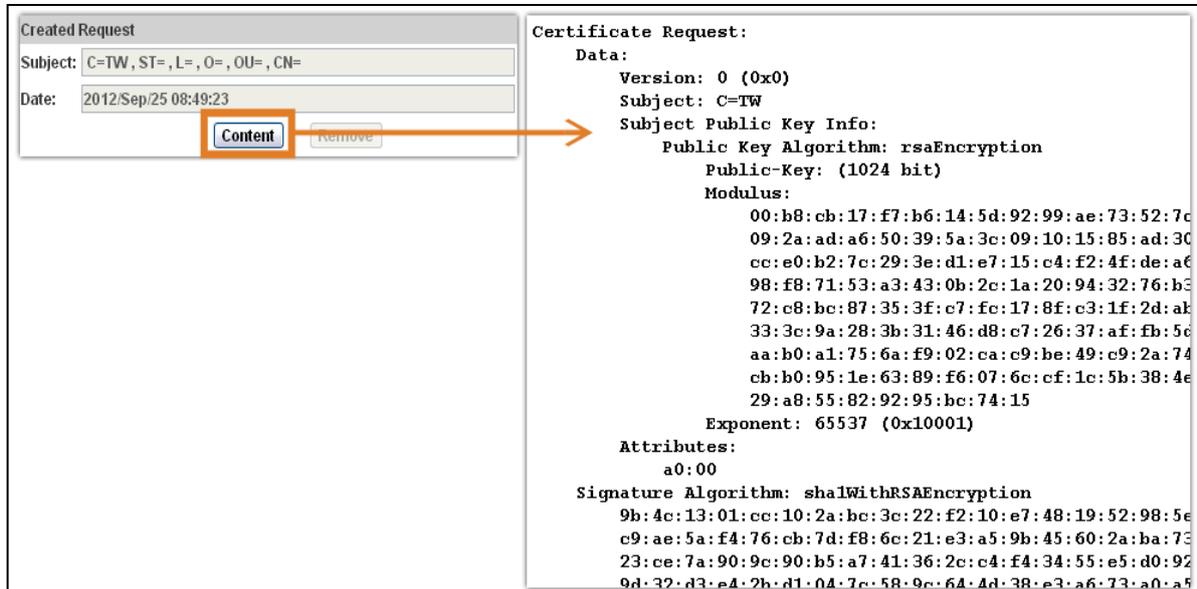


According to the certificate source, there are two ways to install the certificate: If you had sent the certificate request for signing and receiving a signed certificate, click **browse** and find the certificate file in your computer. Click **Apply** to install it.

If you choose to generate a self-signed certificate, fill-in the following forms and set the validity day, click **Apply** to finish installed it.



After finishing the installation, click on **Content** to call out and check the certificate content.

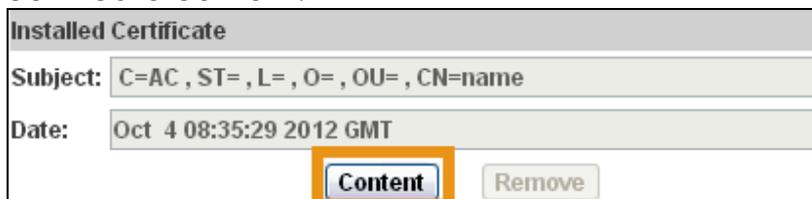


To use Https to access the camera, open your browser, and key-in **https:// (IP address)/** in the address bar. Now your data will be transmitted via encrypted communications. The browser will check your certificate status. It might show the following warning message:



Meaning that certificate is self-signed or signed by a distrusted institution. Click **Proceed anyway** for continuing to the camera page.

SNMP (Simple Network Management Protocol)

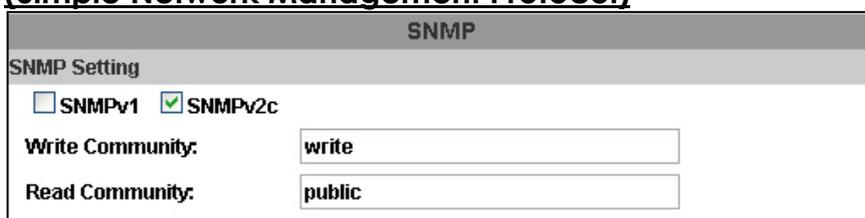

SNMPv1 or SNMPv2: Write the name of both Write Community and Read Community.

SNMPv3: Set the Security Name, Authentication Type, Authentication Password, Encryption Type, Encryption Password of Write mode and Read mode.

SNMPv3

Write Security Name:

Authentication Type: MD5 SHA

Authentication Password:

Encryption Type: DES AES

Encryption Password:

Read Security Name:

Authentication Type: MD5 SHA

Authentication Password:

Encryption Type: DES AES

Encryption Password:

Enable **SNMPv1/SNMPv2 Trap** for detecting the Trap server. Please set what event needs to be detected.

SNMPv1/v2c Trap

Trap Address:

Trap Community:

Trap Event:

- Cold Start
- Setting Changed
- Network Disconnected
- V3 Authentication Failed
- 4G Signal strength
- SDCard Insert/Remove

- **Cold Start**: The camera starts up or reboots.
- **Settings Changed**: The SNMP settings have been changed.
- **Network Disconnected**: The network connection was broken down (The camera will send trap messages after the network is connected again).
- **V3 Authentication Failed**: A SNMPv3 user account tries to get authentication but failed. (Due to incorrect password or community)
- **4G Signal strength**: When the 4G signal is found to be too low, the camera will send a notification message.
- **SD Card Insert / Remove**: A Micro SD card is inserted or removed.

Access List

Enable **IP address filter** to allow/reject some IP address a network access. There are two options: **single** and **range**.

IP FILTER

IP Address Filter Setting

Enable ip address filter

IPv4 Setting:

allow
 deny

address: -

IPv4 List:

No.	IP Address	Filter	Action
1	192.168.50.159	Allow	<input type="button" value="remove"/>
2	192.168.50.151 - 192.168.50.161	Deny	<input type="button" value="remove"/>
3			<input type="button" value="remove"/>
4			<input type="button" value="remove"/>
5			<input type="button" value="remove"/>
6			<input type="button" value="remove"/>
7			<input type="button" value="remove"/>
8			<input type="button" value="remove"/>
9			<input type="button" value="remove"/>
10			<input type="button" value="remove"/>

Allow admin ip address always access this device

Admin ip address:

Check the **Enable ip Address filter**, enter the IP address you want to deny access. Input the IP address you would like to deny entry, select "**deny**" and click the "**Add**" icon to add this IP address to the rejection list, the user with that IP address connecting to the camera will be blocked.

You can also choose to set a range of IP addresses to deny access, but allow several other IP address in the range to access the camera. The above picture is an example. Users with IP addresses between 192.168.50.151 ~ 161 will not be able to connect to this camera, only 192.168.50.159 is allowed to connect.

Note: When using this method, the order of the conditions of "Allow" in the list must be the input entry above the entry of "deny".

If we reverse the entry order to:

Deny: 192.168.50.151~192.168.50.161 being the first on the IPv4 list


Allow: 192.168.50.159 being the second on the IPv4 list

Due to the order being set, the user using **192.168.50.159** IP address will then be unable to connect to this camera. Other IP addresses will be allowed access if not enlisted in the access list.

QoS/DSCP

(Quality of Server/Differentiated Services Code-point)

DSCP specifies a simple mechanism for classifying and managing network traffic; and provide QoS on IP networks. DSCP is a 6-bit in the IP header for packet classification purpose. Please define it for **Live Stream, Event / Alarm and Management**.

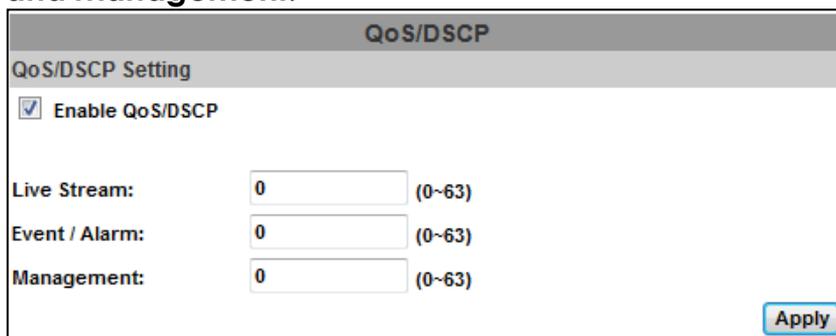

The screenshot shows a web interface titled "QoS/DSCP". Under "QoS/DSCP Setting", there is a checked checkbox for "Enable QoS/DSCP". Below this, there are three rows of input fields: "Live Stream:" with a value of "0" and a range "(0~63)", "Event / Alarm:" with a value of "0" and a range "(0~63)", and "Management:" with a value of "0" and a range "(0~63)". An "Apply" button is located at the bottom right of the form.

IEEE 802.1x

It is an IEEE standard for port-based Network Access Control. It provides an authentication mechanism to a device on LAN/WLAN.

The EAPOL protocol supports service identification and optional point to point encryption over the local LAN segment.



Please check what version supports the authenticator and authentication server. This camera supports EAP-TLS method. Enter the ID, password issued by the CA, then upload related certificates.

IEEE 802.1x/EAP-TLS

IEEE 802.1x Setting

Enable IEEE 802.1x

Eapol version: v1 v2

Identity:

Private key password:

CA certificate:

Status:

Client certificate:

Status:

Client private key:

Status:

PPPoE & DDNS

PPPoE Setting

PPPoE Setting


Enabled Disabled

Username:

Password:

Select **Enabled** to use PPPoE. Key-in the the Username and password for ADSL connection.

Send mail after PPPoE dialed

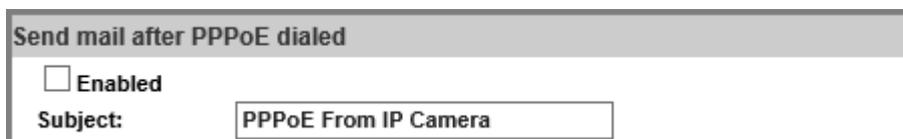


Send mail after PPPoE dialed

Enabled

Subject:

When connected to the internet, the camera will send a mail to a specific mail account.

DDNS Setting

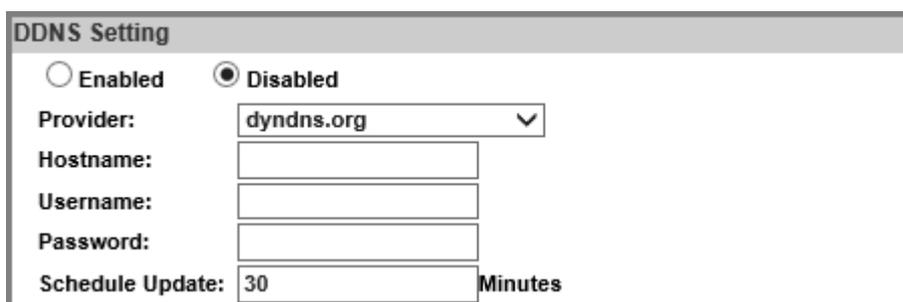

DDNS Setting

Enabled Disabled

Provider:

Hostname:


Username:

Password:

Schedule Update: Minutes

camddns as an example: Enable this service→Input username→IP schedule update→Default: 5 minutes→Click **Apply**
Check results from the message presented inside the **State** field.

State

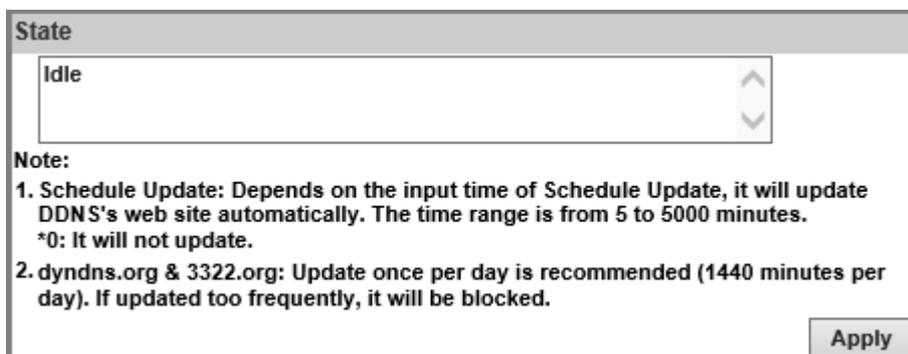

State

Note:

1. Schedule Update: Depends on the input time of Schedule Update, it will update DDNS's web site automatically. The time range is from 5 to 5000 minutes.
*0: It will not update.
2. dyndns.org & 3322.org: Update once per day is recommended (1440 minutes per day). If updated too frequently, it will be blocked.

(1) **Updating:** Information update

(2) **Idle:** Stop service

(3) **DDNS registration successful, can now log by**
<http://<username>.ddns.camddns.com>: Register successfully.


(4) **Update Failed, the name is already registered:** The user name has already been used. Please change it.

(5) **Update Failed; please check your internet connection:** Network connection failed.


(6) **Update Failed, please check the account information you provided:** The server, user name, and password may be wrong.

Server Settings

There are several server types available. Select the item to display detailed configuration options. You can configure either one or all of them.

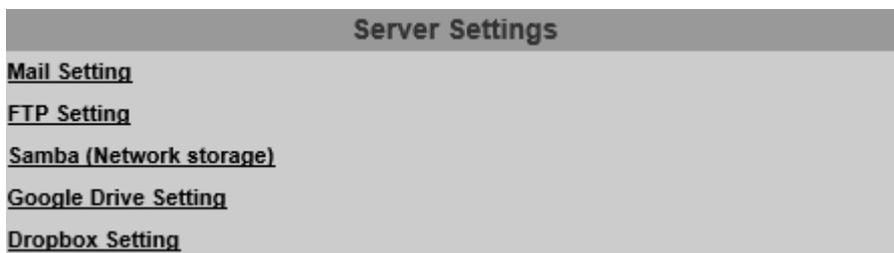

Click **Apply** to save settings at the bottom of **Server Settings**, then click **Test** icon to test the server connection. A message box will tell you **OK!** if it works, and a test document will be created in the location.

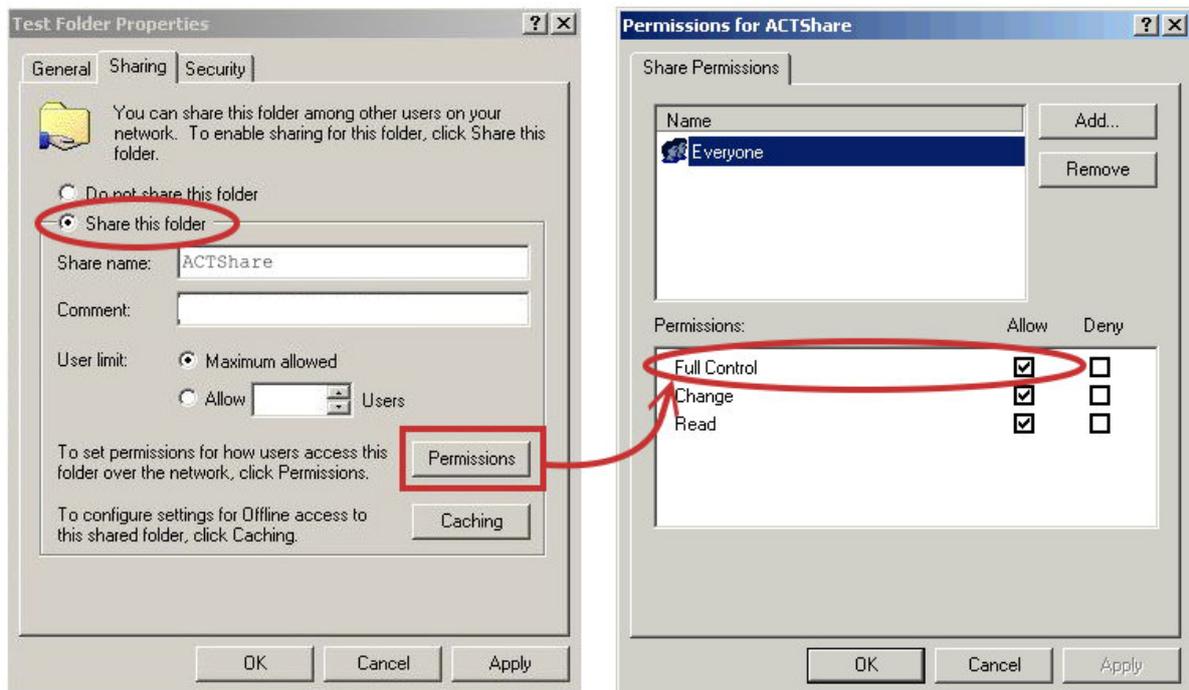

If the testing fails, check the sharing setting of your location folder. The folder properties must be **shared** and the permissions must be **Full Control**.

Mail Setting

To send out the video via mail of FTP, set up the configuration first.

Server Settings

Mail Setting

Login Method:	Account <input type="button" value="v"/>	
Mail Server:	<input style="width: 95%;" type="text"/>	
Username:	<input style="width: 95%;" type="text"/>	
Password:	<input style="width: 95%;" type="text"/>	
Sender's Mail:	<input style="width: 95%;" type="text"/>	
Receiver's Mail:	<input style="width: 95%;" type="text"/>	
Bcc Mail:	<input style="width: 95%;" type="text"/>	
Mail Port:	25	(Default 25)

TLS Secure Connect

FTP Setting

Samba (Network storage)

Click **Apply** to confirm settings at the bottom of **Server Settings**, then click **Test** icon to test the server connection.

FTP Setting

To send out the video via mail of FTP, please set up the configuration.

Server Settings

Mail Setting

FTP Setting

FTP Server:	<input style="width: 95%;" type="text"/>	
Username:	<input style="width: 95%;" type="text"/>	
Password:	<input style="width: 95%;" type="text"/>	
Port:	21	
Path:	<input style="width: 95%;" type="text" value="/"/>	
Mode:	PORT <input type="button" value="v"/>	
Create the folder:	Yes <input type="button" value="v"/>	(ex:Path/20100115/121032m.avi)

Samba (Network storage)


Google Drive Setting

Dropbox Setting

Click **Apply** to confirm settings at the bottom of **Server Settings**, then click **Test** icon to test the server connection.

Samba (Network Storage)

Select this option to send the media files via a neighbor network when an event is triggered.

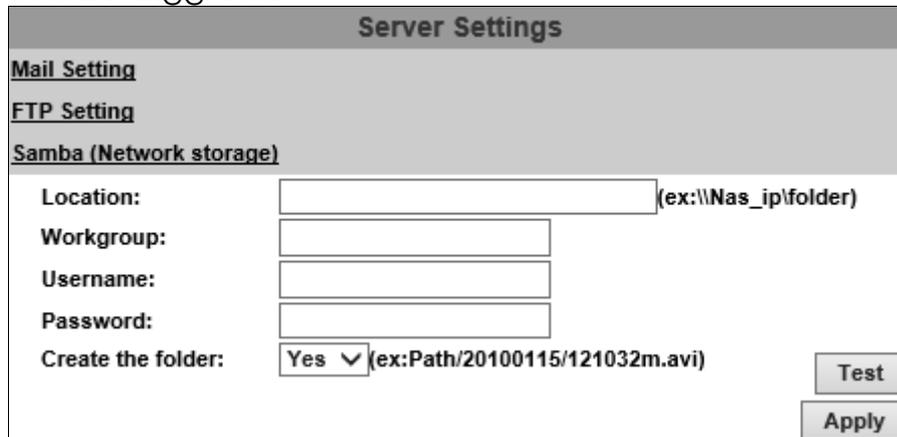


The screenshot shows the 'Server Settings' window with the 'Samba (Network storage)' section selected. The 'Location' field contains '(ex:\\Nas_ip\folder)'. The 'Workgroup', 'Username', and 'Password' fields are empty. The 'Create the folder' dropdown is set to 'Yes' with the example path '(ex:Path/20100115/121032m.avi)'. There are 'Test' and 'Apply' buttons at the bottom right.

Click **Apply** to confirm settings at the bottom of **Server Settings**, then click **Test** icon to test the server connection.

Google Drive Setting


Select this option to send the media files unto the cloud server Google Drive whenever an event is triggered.

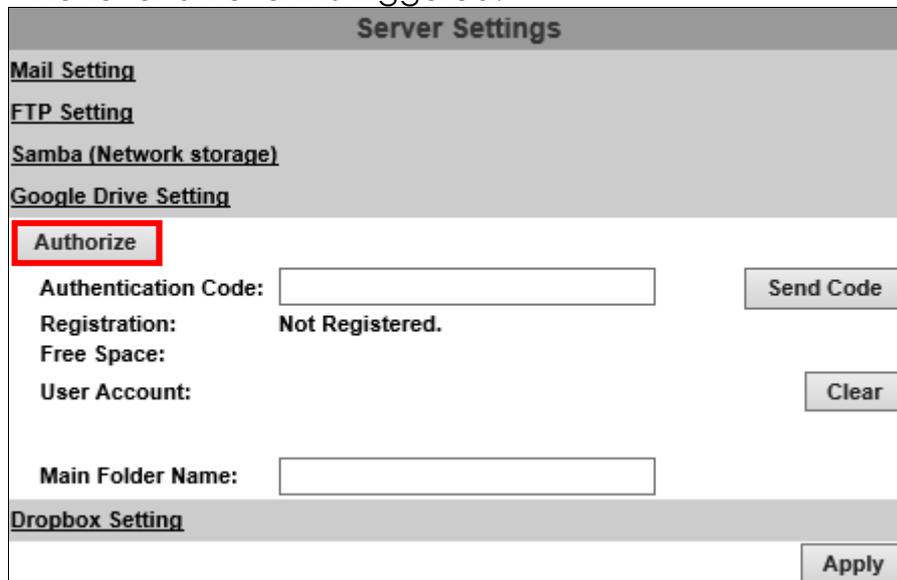


The screenshot shows the 'Server Settings' window with the 'Google Drive Setting' section selected. The 'Authorize' button is highlighted with a red box. Below it, there is an 'Authentication Code' field, a 'Send Code' button, and a 'Registration' status of 'Not Registered.'. There are also 'Free Space' and 'User Account' fields with a 'Clear' button. At the bottom, there is a 'Main Folder Name' field and an 'Apply' button.

You will have to sign in to the [Google Drive](#) network before you start the operation. If you have not yet been a Google user, the [online registration](#) will be required, and you will need to [sign in](#) first as a Google account user. Below are the steps:


- i. Click **Authorize** to begin the online-registration operation. A window will pop up and require you to sign in for a Surveillance Client account directed by Google Drive server.

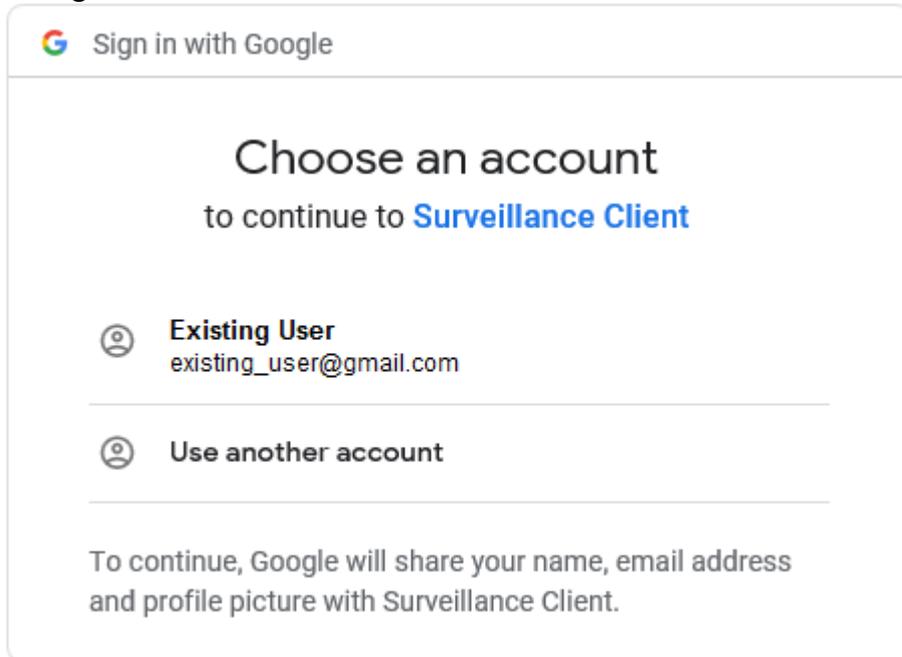

- ii. Choose **Existing User** to continue the operation if you have already owned a Google Drive account. Otherwise, you may choose **Use another account** and sign in as another Google account user.

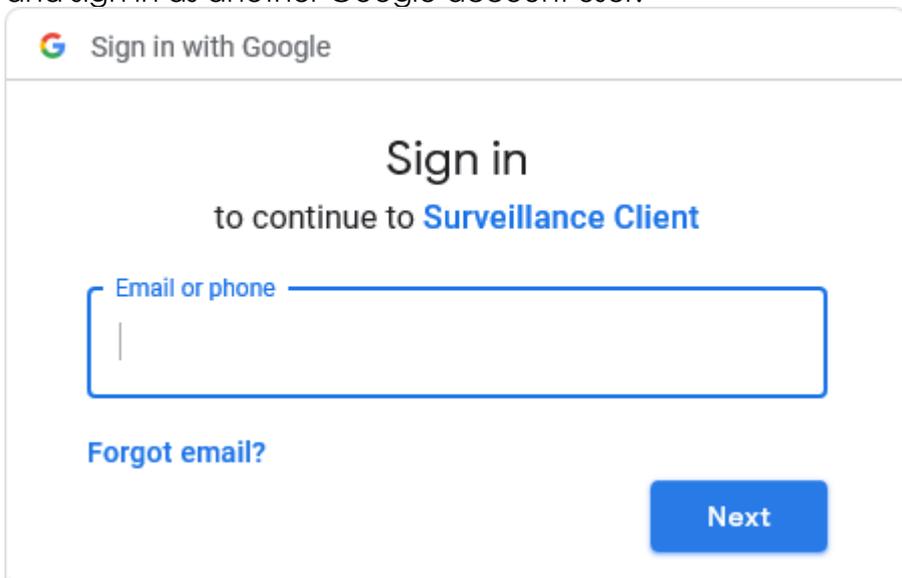


iii. Enter the password and click **Next**.

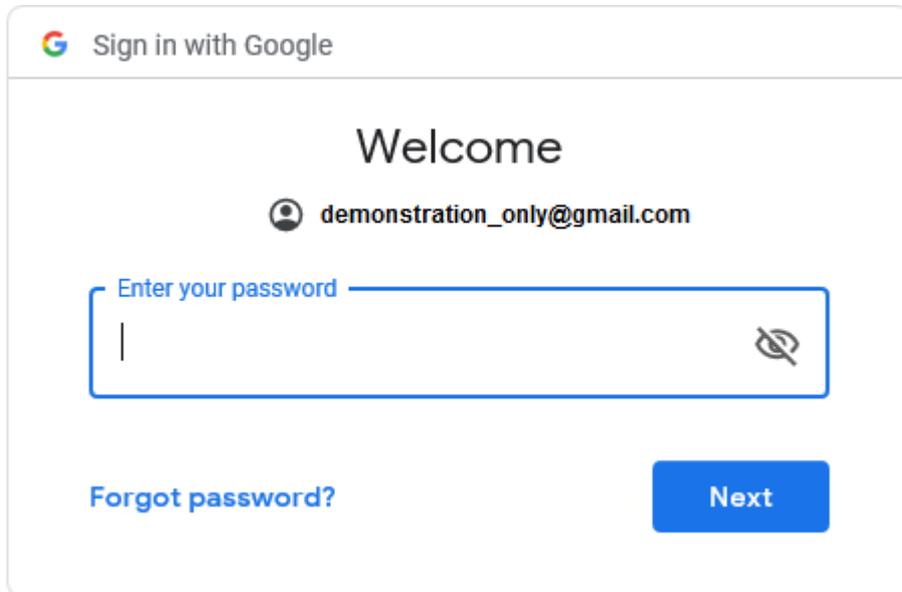


The screenshot shows a 'Sign in with Google' dialog box. At the top, it says 'Sign in with Google'. Below that, it says 'Welcome' and shows a profile icon next to the email address 'demonstration_only@gmail.com'. There is a password input field with the placeholder text 'Enter your password' and a visibility toggle icon. At the bottom, there is a link for 'Forgot password?' and a blue 'Next' button.

iv. Click **Allow**.

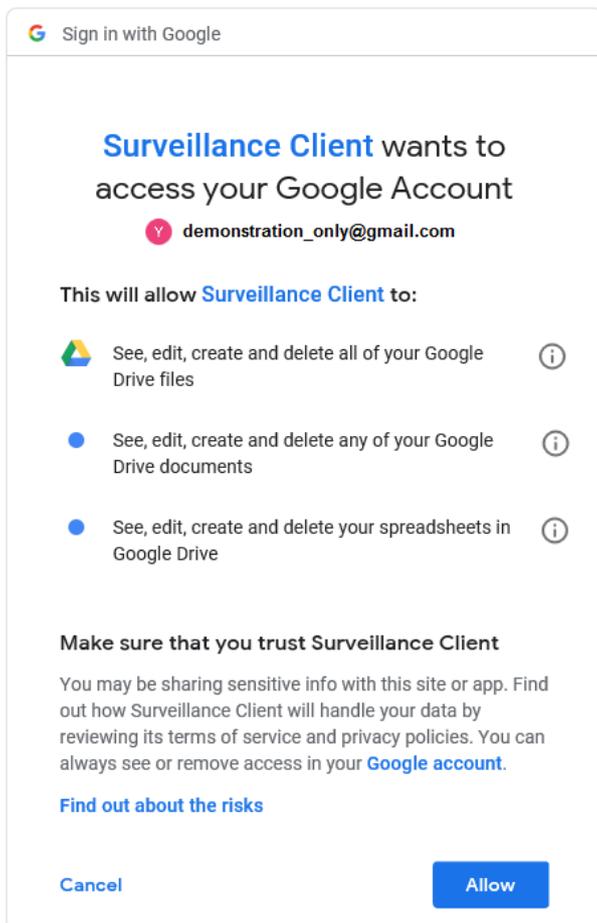


The screenshot shows a 'Sign in with Google' dialog box for a permission request. At the top, it says 'Sign in with Google'. The main heading is 'Surveillance Client wants to access your Google Account' with a red 'Y' icon and the email address 'demonstration_only@gmail.com'. Below this, it says 'This will allow Surveillance Client to:' followed by three permissions, each with an information icon: 'See, edit, create and delete all of your Google Drive files', 'See, edit, create and delete any of your Google Drive documents', and 'See, edit, create and delete your spreadsheets in Google Drive'. A section titled 'Make sure that you trust Surveillance Client' contains a warning: 'You may be sharing sensitive info with this site or app. Find out how Surveillance Client will handle your data by reviewing its terms of service and privacy policies. You can always see or remove access in your Google account.' Below this is a link 'Find out about the risks'. At the bottom, there are 'Cancel' and 'Allow' buttons.


- v. **Authentication Code** will be generated by Google server.

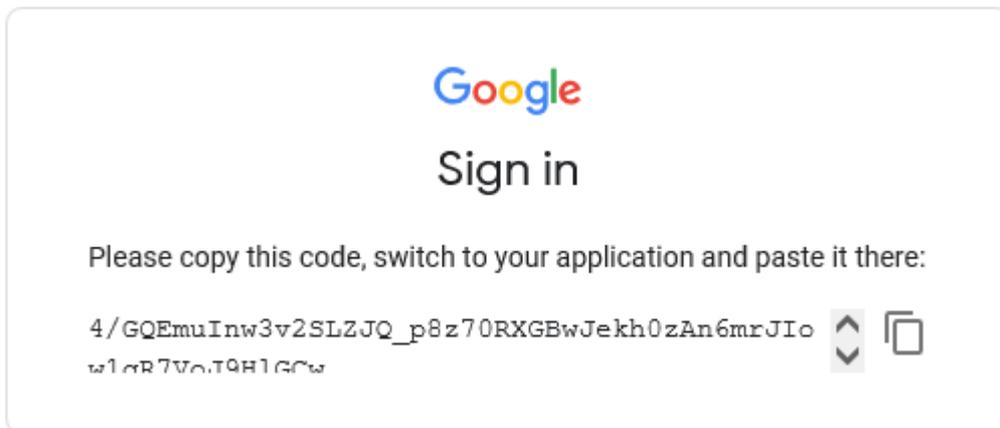


- vi. Paste the **Authentication Code** acquired from Google server in the required field, input the **Main Folder Name** of your preference and click **Send Code**.

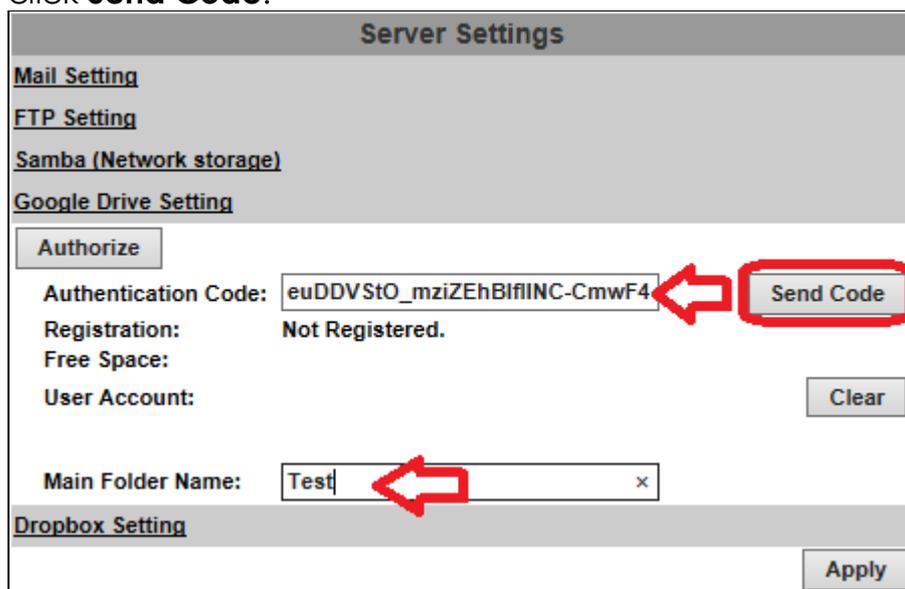

- vii. Please wait for around 15 seconds before clicking OK.

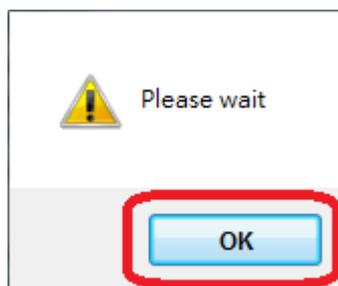

- viii. If the application is successful, you will be able to see a list of status displayed, as circled in red in the demonstration image.

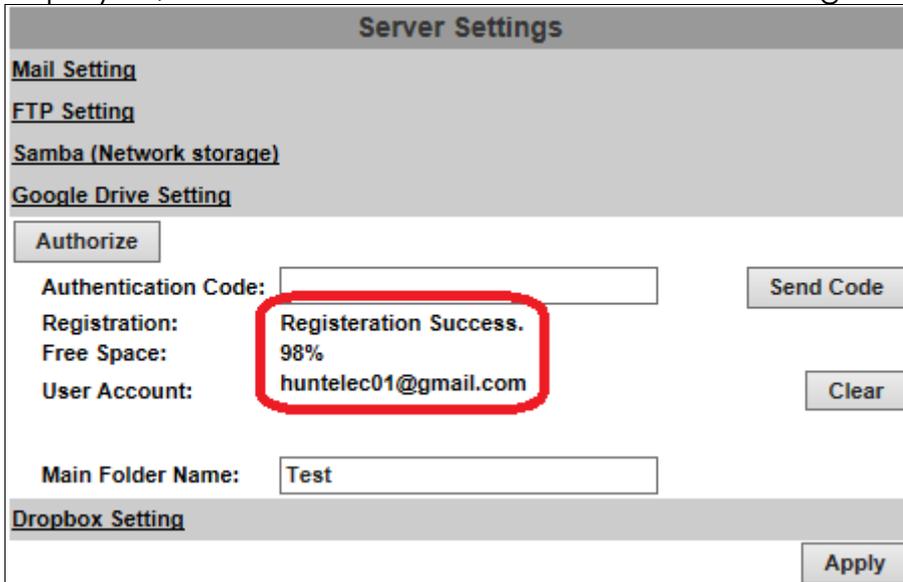


The screenshot shows the 'Server Settings' interface. It has a grey header with the title 'Server Settings'. Below the header are several sections: 'Mail Setting', 'FTP Setting', 'Samba (Network storage)', and 'Google Drive Setting'. Under 'Google Drive Setting', there is an 'Authorize' button, an 'Authentication Code' input field with a 'Send Code' button, a 'Registration' status box (circled in red) showing 'Registration Success. 98%' and 'User Account: huntelec01@gmail.com' with a 'Clear' button, and a 'Main Folder Name' input field with the value 'Test'. At the bottom of the Google Drive section is an 'Apply' button.

Click **Apply** to confirm settings at the bottom of **Server Settings**. Click **Clear** to delete the current account registered for this server.

Dropbox Setting

Select this option to send the media files unto the cloud server Dropbox whenever an event is triggered.

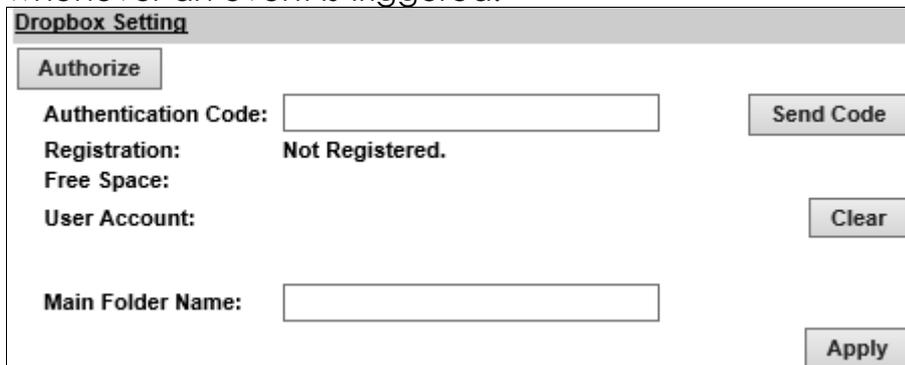

The screenshot shows the 'Dropbox Setting' interface. It has a grey header with the title 'Dropbox Setting'. Below the header is an 'Authorize' button, an 'Authentication Code' input field with a 'Send Code' button, a 'Registration' status box showing 'Not Registered.', a 'Free Space' label, a 'User Account' label with a 'Clear' button, and a 'Main Folder Name' input field. At the bottom of the interface is an 'Apply' button.

You will have to sign in to [Dropbox](#) network first. If you do not own an account, you will need to register one for free. If you have already created a Dropbox account, click **Authorize** to start the operation.

A window from the Dropbox server will open to ask you for signing-in.

Enter **Authentication Code** in the required field and click **Send Code**.

Click **Clear** to delete the current account registered for this server.

Click **Apply** to confirm settings at the bottom of **Server Settings**.

Please refer to [Google Drive Setting](#) for the same setup procedure.

Wireless Setting

(Optional, support 802.11 b/g/n)

For setting up the IP camera via wireless network, first, use the Ethernet cable to connect the camera.

Wireless Setting			
Status of Wireless Networks			
SSID	Mode	Security	Signal Strength
H	Infrastructure	WPA2PSK/AES	86
IPCAM	Infrastructure	WPA2PSK/AES	45
000000000000	Infrastructure	WPA2PSK/AES	26
R	Infrastructure	WPA1WPA2PSK/AES	57
T	Infrastructure	WPA2PSK/AES	26
TEST	Infrastructure	WPA1WPA2PSK/TKIPAES	44
e	Infrastructure	WPA1WPA2PSK/TKIPAES	26
G	Infrastructure	WPA2PSK/TKIPAES	26
D	Infrastructure	WPA1WPA2PSK/TKIPAES	26

After finishing & saving the wireless settings, remove the Ethernet cable.

Note: The IP address is the same under both wireless and wired network. If the Ethernet cable is plugged in the camera, the IP camera will use it to link to the Internet instead of the wireless router.

Status of Networks in Wireless Setting

The camera scans and shows the SSID, Mode, Security, and Signal strength of the wireless network.

Wireless Setting	
MAC Address:	00:0D:F0:64:27:AC
Mode:	Ad-hoc
Operation Mode:	Auto
SSID:	Default
Domain:	FCC (1~11Ch)
Channel:	6
Security:	None

Mode: Infrastructure mode is used to link to the wireless router.


Ad-hoc mode is used to link to the PC directly.

Domain and **Channel** options appear only in the Ad-hoc mode.


Ad-hoc is a short term derived from wireless ad hoc network, known as **WANET**. This type of network is only established temporarily, and does not rely on a pre-existing network through a router or Wireless Access Point.

Connecting to an ad-hoc Wi-Fi network


This demonstration is done manually and specifically applied to Windows 8.1 since Windows 8.1 no longer shows Ad-hoc network in the Wi-Fi list. Go to "Control Panel", then "Network and Internet".

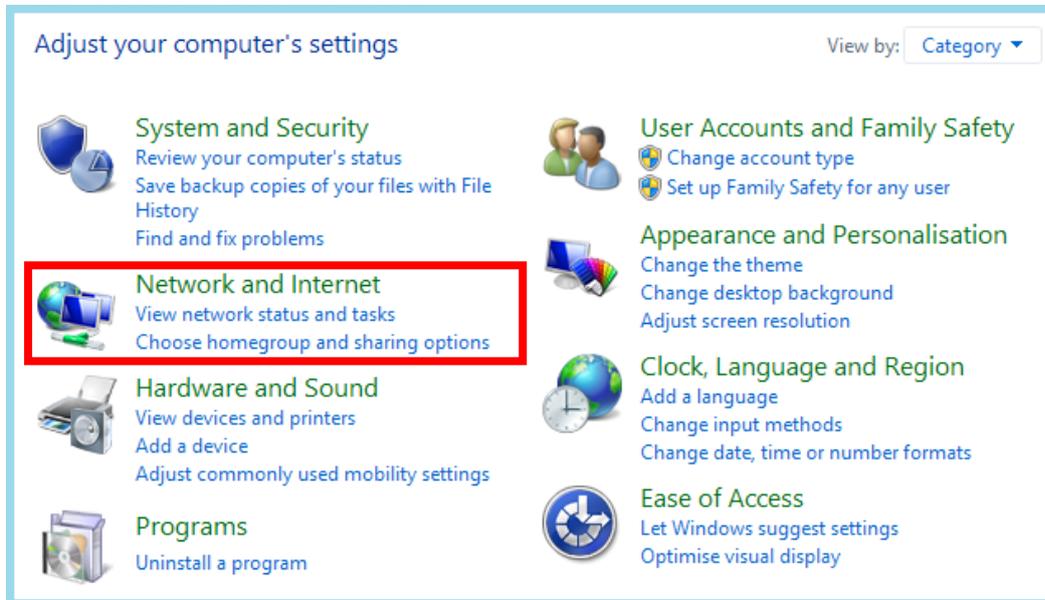


Click "Network and Sharing Center".

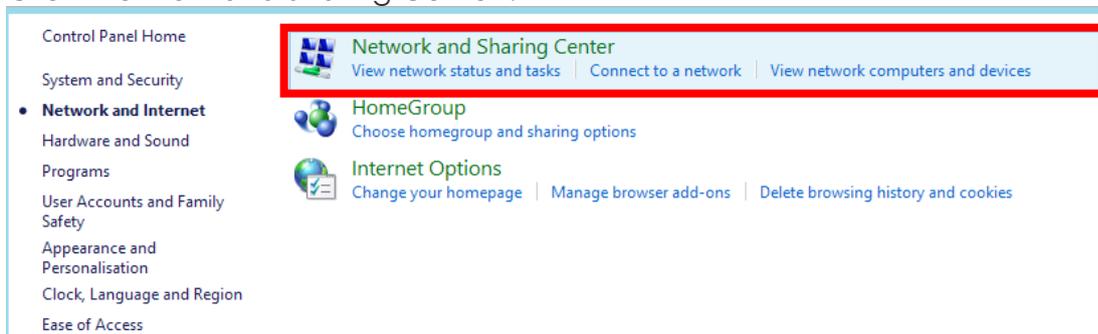


Click "Set up a new connection or network".

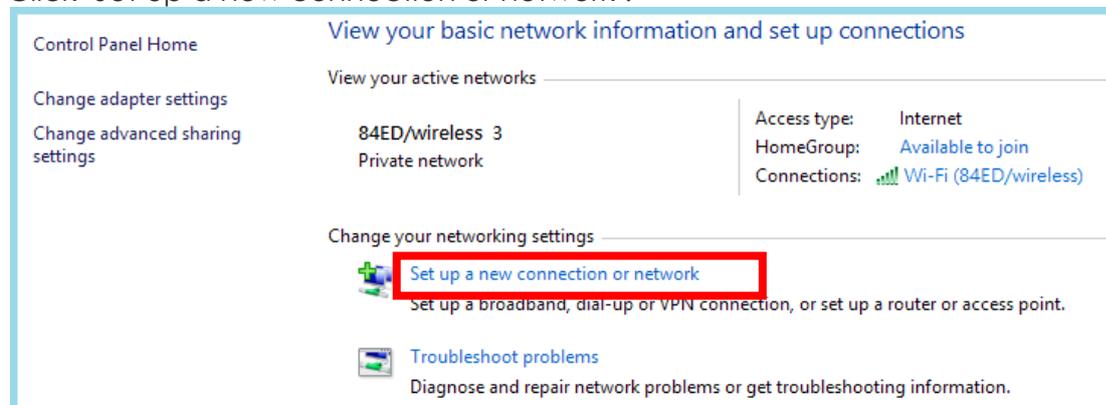


Double click "Manually connect to a wireless network".

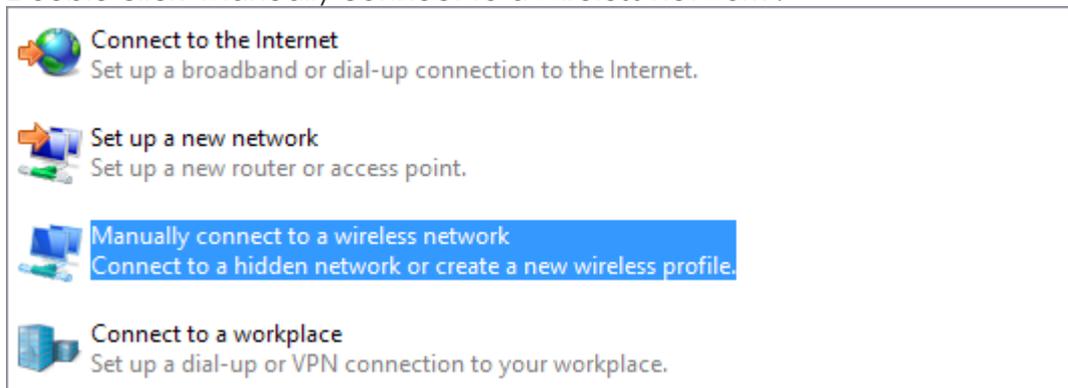


Enter the SSID of the ad-hoc network (as shown by "netsh wlan show networks") into the "Network name" field. Configure security settings accordingly.

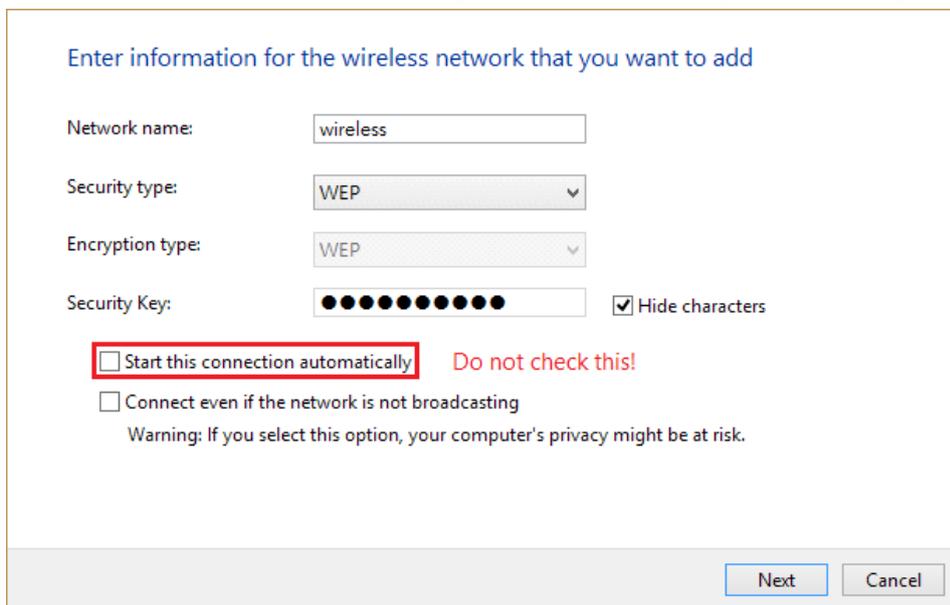

Make sure "Start this connection automatically" is unchecked. Click "Next", then "Close". Open the search window (Windows key+Q) & search for "cmd"

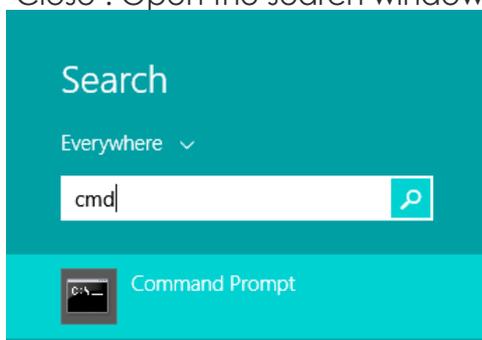


Run the command to open up a new window.

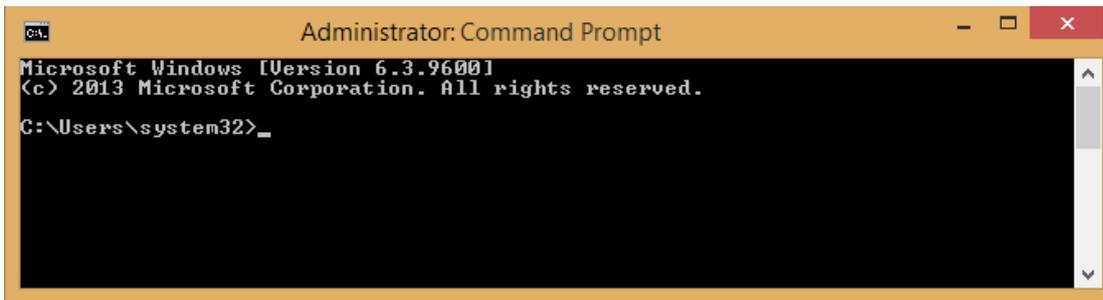

```
Administrator: Command Prompt
Microsoft Windows [Version 6.3.9600]
(c) 2013 Microsoft Corporation. All rights reserved.
C:\Users\system32>
```

Enter the messages below.

- (1) > netsh wlan set profileparameter <ssid> connectiontype=ibss
- (2) > netsh wlan connect <ssid>

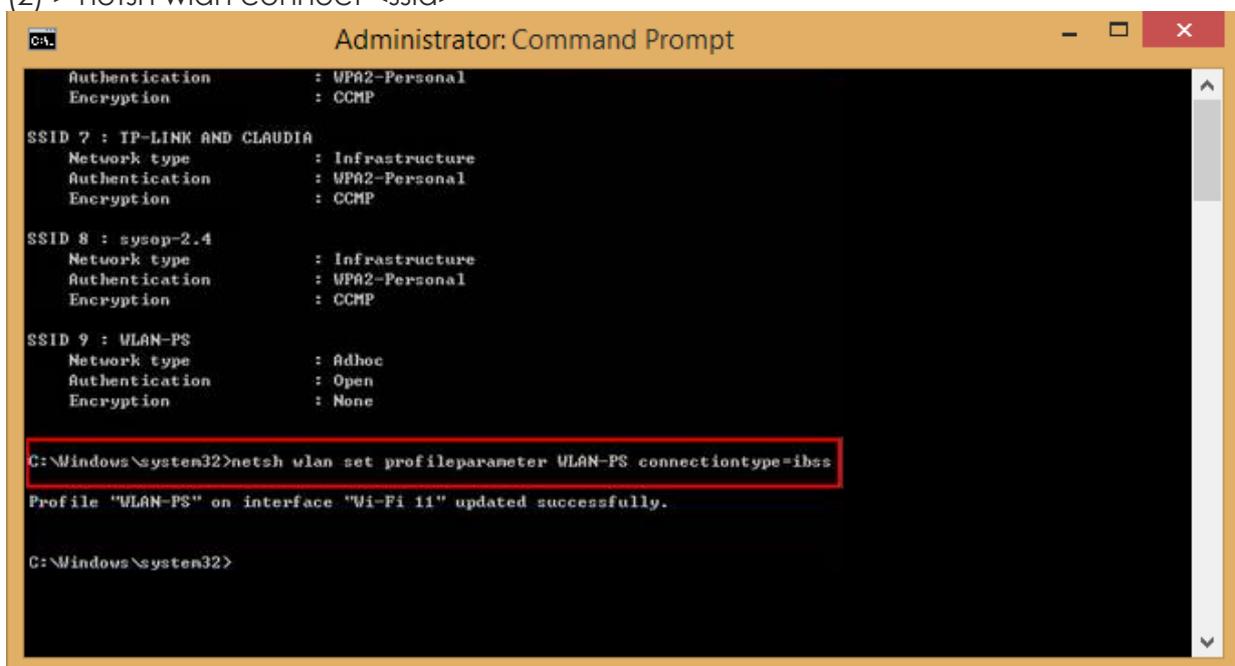

```
Administrator: Command Prompt
Authentication : WPA2-Personal
Encryption : CCMP

SSID 7 : IP-LINK AND CLAUDIA
Network type : Infrastructure
Authentication : WPA2-Personal
Encryption : CCMP


SSID 8 : sysop-2.4
Network type : Infrastructure
Authentication : WPA2-Personal
Encryption : CCMP

SSID 9 : WLAN-PS
Network type : Adhoc
Authentication : Open
Encryption : None

C:\Windows\system32>netsh wlan set profileparameter WLAN-PS connectiontype=ibss
Profile "WLAN-PS" on interface "Wi-Fi 11" updated successfully.

C:\Windows\system32>
```

Now **Ad-hoc** mode is available after the IP settings completion.

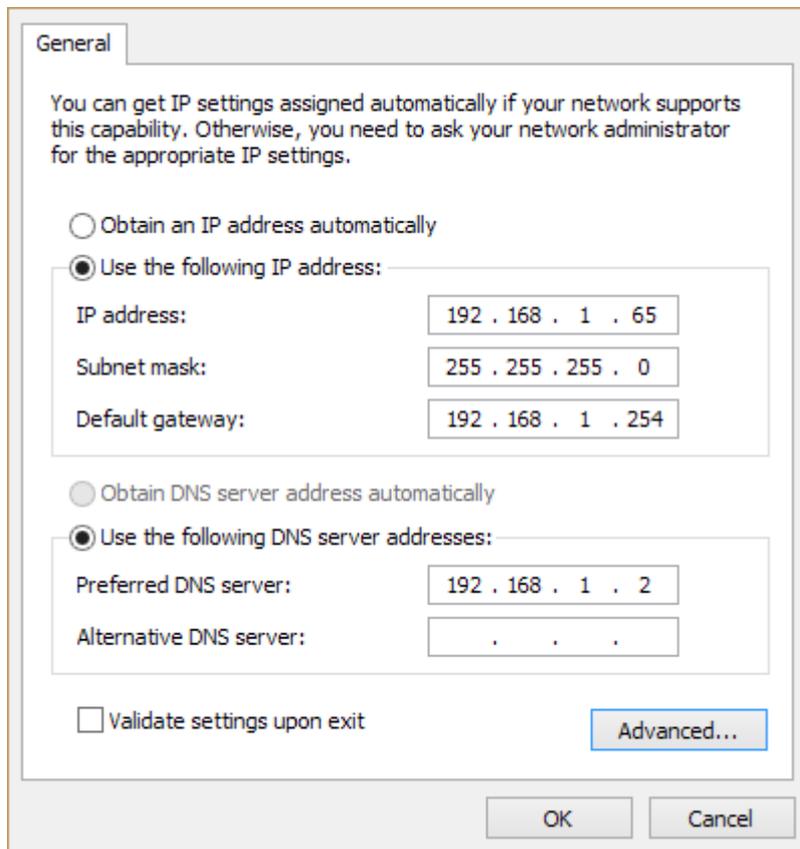

General

You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.

Obtain an IP address automatically

Use the following IP address:

IP address:

Subnet mask:

Default gateway:

Obtain DNS server address automatically

Use the following DNS server addresses:

Preferred DNS server:

Alternative DNS server:

Validate settings upon exit

[Advanced...](#)

OK Cancel

- **SSID:** The ID of the wireless network service.
- **Domain:** The wireless network standards are different in each region. Please select the wireless standard of your location. FCC is the American standard. ETSI is the European standard. JP is the Japanese standard.
- **Channel:** Assign a channel for the camera in order to avoid interference.
- **Security:** Select WEP, WPA-PSK, or WPA2-PSK according to your wireless router settings.

WEP Setting

WEP Setting	
Authentication:	Shared Key <input type="button" value="v"/>
Encryption:	64 bit <input type="button" value="v"/>
Key Type:	HEX <input type="button" value="v"/> (10 character max)
Key 1:	<input type="radio"/> <input type="text"/>
Key 2:	<input checked="" type="radio"/> <input type="text"/>
Key 3:	<input type="radio"/> <input type="text"/>
Key 4:	<input type="radio"/> <input type="text"/>

- **Authentication:** Open System or Shared Key, according to your wireless router.
- **Encryption:** The option determines the length of the key password. In **HEX** type, 10 characters are allowed if you select 64 bit; 26 characters are allowed if you select 128bit; In **ASCII** type, 5 characters are allowed if you select 64 bit; 13 characters are allowed if you select 128bit.
- **Key Type:** In **HEX** type, the key password can only be hexadecimal numbers. In **ASCII** type, the key password can be any letter and number. (Capital and lowercase letters are regarded as different.)
- **Key 1~4:** Key in the key password according to your wireless router setting. The length and type must be consistent with the settings above.

WPA-PSK/ WPA2-PSK Setting

WPA-PSK Setting	
Encryption	TKIP <input type="button" value="v"/>
Pre-Shared Key:	<input type="text" value="23133690"/> (ASCII format, 8~63)

- **Encryption:** TKIP or AES, according to your wireless router.
- **Pre-Shared Key:** Key-in the key password according to your wireless router settings. Any letters and numbers are allowed. (Capital and lowercase letters are regarded as different.)

A/V Settings



Click  to get into the administration page. Click  to go back to the [live video](#) page.




System Information

Server Information

MAC Address: 00:0F:0D:28:92:B0

Server Name: IP_Camera Status Bar

Language: English 繁體中文 简体中文 French
 Russian Italian Spanish German
 Portuguese Polish Japanese

OSD Setting

Time Stamp: Enabled Disabled

Text: Enabled Disabled

OSD_Display [Text Edit](#)

Time Setting

Server Time: 2018/1/12 0:26:04 Time Zone: GMT+08:00

Date Format: yy/mm/dd mm/dd/yy dd/mm/yy

Time Zone: GMT+08:00

Enable Daylight Saving:

NTP:

NTP Server: pool.ntp.org

Update: 6 Hour

Time Shift: 0 Minutes [-1440..1440]

Synchronize with PC's time

Date: 2018/4/11

Time: 15:46:54

Manual


Date: 2018/4/11

Time: 15:46:51

The date and time remain the same

Image Setting

Camera offers preview of the result made in [Image Setting](#).

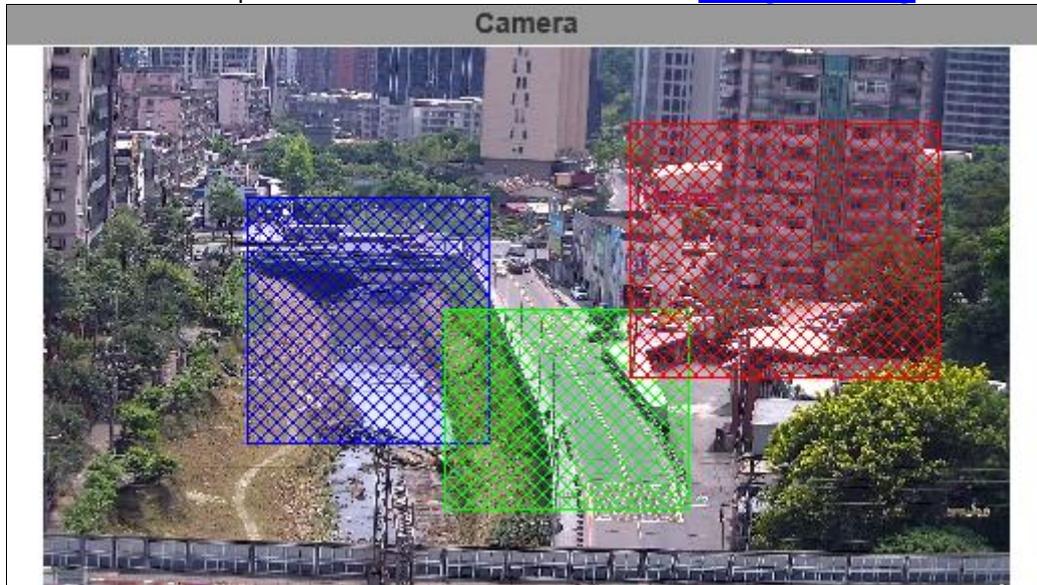


Privacy Mask

An area on the monitoring screen can be masked as a block of particular color only in [live view](#) for security and privacy purposes, but will not be visible in the video recorded. You can create up to 3 privacy masks.



Click any **Area 1/2/3** button first, and then draw an area on the preview image screen with mouse. Click **Save** to apply settings and create the mask.

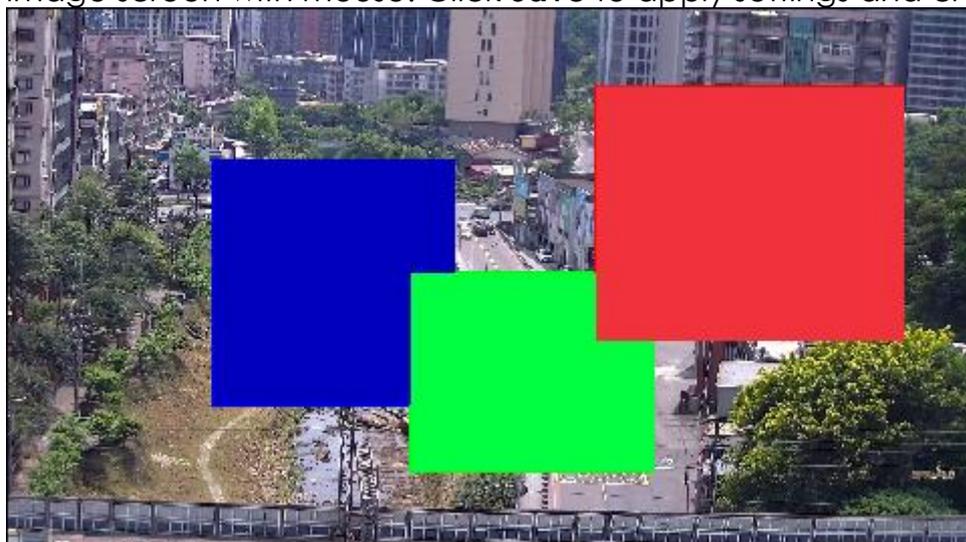

Discard the masked area previously set by clicking **Area 1/2/3** button again, and click **Save** to confirm.

Image Setting: Day Profile & Night Profile


Settings can be adjusted under **Day Profile** & **Night Profile** drop-down lists. Such as **Brightness, Contrast, Hue, and Sharpness...etc.**

Image Setting	Day Profile	Night Profile
Brightness:	0 ▾	0 ▾
Contrast:	0 ▾	0 ▾
Hue:	0 ▾	0 ▾
Sharpness:	0 ▾	0 ▾

Activate them by enabling **Times Mode** from **Day & Night** and assign settings under each profile. Configurations from both Day & Night Profiles will be adjusted between daytime and night time. Different **Brightness, Contrast, Hue,** and **Sharpness** values can be adjusted here.

D-WDR & True-WDR

Click Video Setting from **A/V Settings** menu first.

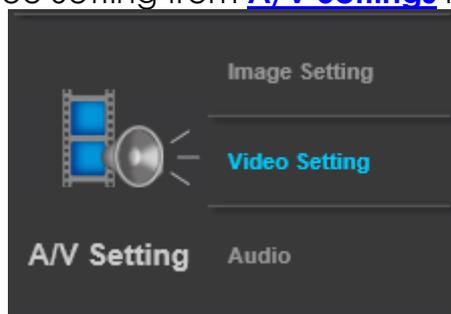

There are two types of **Image Settings** to switch from depending on what **Input Resolution** from **Video Setting** you have applied to the camera.

Input Resolution without WDR feature=D-WDR

Video Setting	
Input Resolution:	1920x1080 @ 30fps ▾

It enables the camera to reduce the contrast in the view to avoid dark zones as a result of over & under exposure.

D-WDR:	2 ▾	2 ▾
Denoise 3D:	3 ▾	3 ▾
Denoise 2D:	2 ▾	2 ▾
Shutter Time:	1/1000 ▾	1/1000 ▾
AE Compensation:	0 ▾	0 ▾
AE Strategymode:	Highlight priority ▾	

Input Resolution with WDR feature=True WDR

Video Setting	
Input Resolution:	1920x1080_2WDR @ 30fps ▾

It enables the camera to combine the over & under exposures to smooth out dark zones for best image quality.

True WDR:	4 ▾	2 ▾
Denoise 3D:	3 ▾	3 ▾
Denoise 2D:	2 ▾	2 ▾
Shutter Time:	Outdoor ▾	Outdoor ▾
Sense-Up:	1/20 ▾	
AE Compensation:	0 ▾	0 ▾
AE Strategymode:	Lowlight priority ▾	

Click to assign an input resolution for captured video files. Features vary in FPS (frames-per-second) and options will be modified in **Image Setting**. Go back to [Image Setting](#) where you can operate a different set of settings.

Denoise 3D & 2D

Filter the noise and blur from the image and show a clearer view. You can set the values for **3D & 2D** filters.

Shutter Time

Choose the location of your camera or a fixed shutter time. The shorter the shutter time is the less light the camera receives and the image becomes darker. **Note:** When you select a number in **Shutter Time**, the shutter time will vary in a range and be controlled by camera automatically.

Sense-Up:	1/20 ▾	
AE Compensation:	0 ▾	0 ▾
AE Strategymode:	Lowlight priority ▾	

Sense-Up

This function increases the sensitivity of camera to get brighter image at night. The smaller value you select, the slower shutter speed becomes. So that the image will get brighter, and moving subjects might be blurred.

AE Compensation

Assign levels of exposure to help lighten or darken the camera view. Assigning a bigger/smaller number creates a lighter/darker image.

AE Strategymode

Select **Lowlight Priority** or **Highlight Priority** to adjust the view in preference of lightening or darkening the contrast.

User Mode:	Automotive ▾
Saturation:	0 ▾
AGC:	40x ▾
Low Lux Auto-adjust:	<input checked="" type="checkbox"/>
Digital Image Stabilization:	<input type="checkbox"/> Enable
Anti Fog:	<input type="checkbox"/> Enable
Lens Distortion Correction:	Off ▾
Video Orientation:	<input checked="" type="checkbox"/> Flip <input checked="" type="checkbox"/> Mirror
IR LED:	Auto ▾

User Mode

Select **Normal** mode for general situations, or select **Automotive** mode if the monitoring operation takes place at a traffic site. The camera will adjust its [Shutter Time](#), [AGC](#), [D-WDR](#) and [Denoise](#) filter settings regarding the lighting condition of the environment.

Saturation

Adjust the saturation values here.

AGC

The sensitivity of the camera can be adjusted according to its environmental lighting. Enable this function to get brighter images on low light, but the level of noise may also increase.

Low Lux Auto-adjust

Click to enable the camera to adjust its low lux level automatically in different lighting environments.

Digital Image Stabilization

Enable this function to reduce blurriness occurred during the motion of a camera and helps compensate the captured image quality when camera shakes. Please note: Digital Image Stabilization & Lens Distortion Correction may not be recommended to be in operation at the same time for which may cause image loss.

BLC

BLC:	<input checked="" type="radio"/> OFF <input type="radio"/> BLC
------	--

Back light compensation. This function is used to make the dark zone resulting from back light lighter and clearer.

Anti Fog

Improve the image clarity on environments presenting high levels of fog or smoke.

Lens Distortion Correction

Straighten the curves in the borders of the image caused by the lens angles.

Video Orientation

Flip or mirror the image.

IR LED

Choose **Auto** to enable IR LED to help the camera observe a clearer view when the lighting condition of the monitored site becomes low. However, if the lighting condition is always at a satisfactory level, you may set it to **off**.

Day & Night

Day & Night:	<div style="border: 1px solid black; padding: 2px;"> <div style="background-color: #0070C0; color: white; padding: 2px;">Light Sensor Mode</div> <div style="padding: 2px;">Color Mode(Day)</div> <div style="padding: 2px;">B/W Mode(Night)</div> <div style="padding: 2px;">Times Mode</div> <div style="padding: 2px;">Synchronize with DI input</div> </div>
--------------	--

Adjust the camera to detect the light level for different environments. Settings vary when modes are shifted. An extra sub-function may appear to be available after a setting is adjusted.

Light Sensor Mode

Day & Night:	Light Sensor Mode	
Night to Day Interval:	6 (second)	Day to Night Interval: 6 (second)
Night to Day Lux:	7 lux (about)	Day to Night Lux: 3 lux (about)
Current Lux:	over 55 lux (about)	
IR Intensity:	Far	
White Balance:	Auto	
Red Gain:	0	Blue Gain: 0
Outdoor Threshold:	0	Indoor
		Default

The image will turn black & white at night to keep a clear image. To set light sensor mode, appoint a lux standard of switching day & night. Current lux values in the menu are provided for reference.

Color Mode (Day)

Day & Night:	Color Mode(Day)	
White Balance:	Auto	
Red Gain:	0	Blue Gain: 0
Outdoor Threshold:	0	Indoor
		Default

Recommended to use for day time.

B/W Mode (Night)

Day & Night:	B/W Mode(Night) ▼	
IR Intensity:	Far ▼	
White Balance:	Auto ▼	
Red Gain:	0 ▼	Blue Gain: 0 ▼
Outdoor Threshold:	0 ▼	Indoor
		Default

Recommended to use for night time.

Times Mode

Day & Night:	Times Mode ▼	
Time: Day:	05:00	Night: 17:00 (HH:MM) Save Times
IR Intensity:	Far ▼	
White Balance:	Auto ▼	
Red Gain:	0 ▼	Blue Gain: 0 ▼
Outdoor Threshold:	0 ▼	Indoor
		Default

Set the values in Brightness, Contrast, Sharpness, and Denoise(3D&2D) for both Day & Night Profile to be performed according to the Time arranged from Day & Night.

Time: The user can define when the daytime (Day) starts by filling in the digits such as 05:00 or 12:35. (Hours range: 0~23, minutes range: 0~59)

The example is as below: Time: Day: 05:00 Night: 17:00 (HH:MM)

If the time range is inaccurate, a window will pop up to remind you.

Same way applies to filling the nighttime (Night).

Synchronize with DI input

Day & Night:	Synchronize with DI input ▼	
IR Intensity:	Far ▼	
White Balance:	Auto ▼	
Red Gain:	0 ▼	Blue Gain: 0 ▼
Outdoor Threshold:	0 ▼	Indoor
		Default

The settings are adjusted according to the DI input functions.

Night to Day Interval & Day to Night Interval:

Set up the duration of how long before the Day time shifts to Night time (or the other way around).

Day to Night Lux & Night to Day Lux

Appoint desired lux values as a standard for switching **Night to Day Interval** & **Day to Night Interval**.

Current Lux

Provided as a reference to adjust **Day to Night Lux** & **Night to Day Lux**.

IR Intensity

Adjust the IR intensity level from **Far**, **Middle** or **Near**.

White Balance

Assign lighting options which are designed for specific lighting environments.

AUTO - Continuously adjusts camera color balance according to any change of color temperatures and lightings in various environments.		
Tungsten Lamp	Fluorescent Lamp	Sunlight
Cloudy		Cloudy Days

You can set the **Red/Blue gain** and **Outdoor Threshold** levels by selecting values from each drop down menu.

Red & Blue Gain

Adjust levels in red & blue contrasts in the image. Be aware that when these levels are increased, the image quality will become sharper to a point that noise of the image will also be increased.

Outdoor Threshold

Values applied for this feature will define how sensitive the motion detection is triggered for outdoor scenes.

Indoor

Click to enable operation for any indoor motion detections.

Default

Click on button to restore the default settings.

Video Setting

Video System

Input Resolution

Click to assign input resolution for captured video files. Features vary in FPS (frames-per-second) and will modify the options from [Image Setting](#).

Input Resolution without WDR features:

Video Setting	
Input Resolution:	1920x1080 @ 30fps ▾
Video System:	NTSC ▾
TV Output:	Auto ▾ (Auto : Based on the Video System)
Corridor Mode:	none ▾

Input Resolution with WDR features:

Video Setting	
Input Resolution:	1920x1080_2WDR @ 30fps ▾
Video System:	NTSC ▾
TV Output:	Auto ▾ (Auto : Based on the Video System)
Corridor Mode:	none ▾

Video System

Choose from **NTSC** or **PAL** for video signal.

TV Output

Choose Auto or select between **NTSC** and **PAL** signal.


Corridor Mode



Set the degree of the camera angle for monitoring purpose.

The relation of the image and the camera would be as the following:


If Corridor Mode is set as **90 degrees** or **270 degrees** the relation of the image and the camera would be as the following:

Corridor mode: None

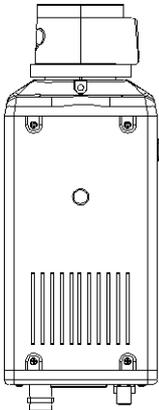Degrees	Position	Image
0 degrees		
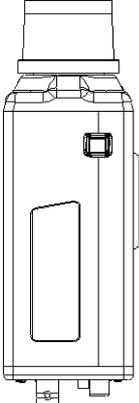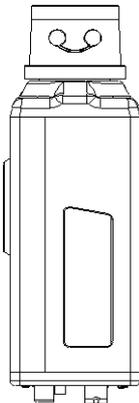
<p>90 degrees</p>		
<p>270 degrees</p>		

Corridor Mode: 90 or 270 degrees

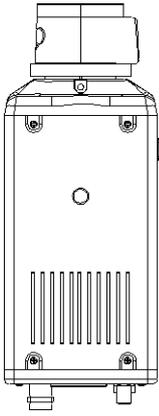Degrees	Position	Image
<p>0 degrees</p>		



Smart Stream Sensitivity:	8	▼
Smart Stream Interval:	5	▼ (second)

Smart Stream Sensitivity

Adjust the sensitivity of [Smart Stream](#) after clicking at the bottom to enable the change.

Smart Stream interval

Adjust the Stream interval in seconds of [Smart Stream](#) after clicking at the bottom to enable the change.

Streaming Setting: Basic Mode

Resolution range varies depending on different modes.

Streaming 1 Setting

Basic Mode **Advanced Mode**

Resolution:

Profile:

Quality:

Video Frame Rate:

Video Format:

Stream Feature: **ROI** **Smart Stream** **Close**

ROI (Region Of Interest): [Preview](#)

ROI Satatus: **Not Setting**

RTSP Path: ex:rtsp://IP_Address/ Audio:G.711

Resolution

Choose a set for the camera resolution from **1920x1080@30fps**, **1920x1080@30fps**, **1280x720@30fps**, **640x480@30fps**

Profile

Chose **Main** or **Baseline** based on bandwidth consumption of the video.

Quality

The higher quality assigned, the slower transmission speed may become.

Video Frame Rate

Adjust the video refreshing rate for each second.

Video Format

The video refreshing rate per second. Select from H.264+, H.264 or JPEG

Stream Feature

Click at the bottom after selecting the either ROI or Smart Stream option.

Stream Feature: **ROI** **Smart Stream** **Close**

ROI (Region Of Interest): [Preview](#)


ROI Satatus: **Not Setting**

ROI (Region of Interest)

This function helps refine any specific part of the monitoring area which can be dragged out with the mouse at a time, improving efficiency in image observation and management in video compression rate.

Click [Preview](#) to enable ROI the function. Click on any of the colors in **Area Setting** to draw an ROI area on the preview screen by dragging your mouse. You can set up to approximately 3 ROI areas.

ROI (Region Of Interest): ON OFF [Preview](#)

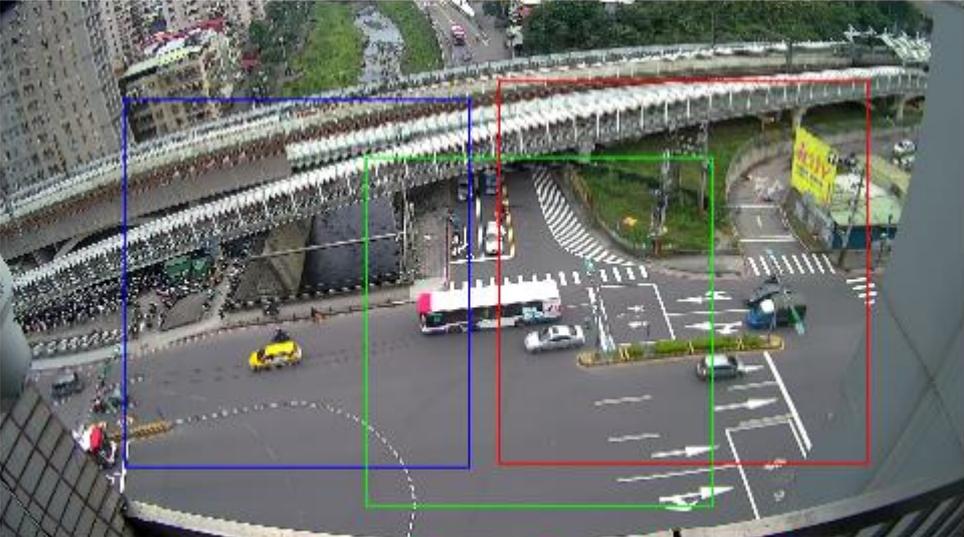

Area Setting: Area 1 Area 2 Area 3 Save

ROI Area Quality: 5 ▼ 5 ▼ 5 ▼

FPS of None ROI: 25 FPS ▼ (ROI FPS equals to Video Frame Rate)

Adjust the **ROI Area Quality** and **FPS of None ROI** values of each area from each drop down list. You can see the **ROI Status** once **ROI** is activated.

Stream Feature: ROI Smart Stream Close

ROI (Region Of Interest): [Preview](#)

ROI Satatus: Area1_ON,Area2_ON,Area3_ON,FPS of None ROI=5,ROI Area Quality=Best

Smart Stream

Enable this mode, set the range of FPS and Bitrate to limit its stream capacity, in order to preserve a better performance of image quality and save more bandwidth. You may also adjust its [Smart Stream Sensitivity](#) & [Smart Stream Interval](#) from [Video Setting](#).

Stream Feature: ROI Smart Stream Close

Smart Stream FPS: 3 FPS ▼

Smart Stream Bitrate: 512Kbps ▼

RTSP Path

Offers the RTSP output connecting path.

Streaming Setting: Advanced Mode

Resolution range varies depending on different modes.

Streaming 1 Setting

Basic Mode **Advanced Mode**

Resolution:

Profile:

Bitrate Control Mode: CBR **CVBR**

Video Quantitative:

Video Bitrate Limit:

Video Frame Rate:

GOP Size: GOP = 25

Video Format:

Stream Feature: **ROI** Smart Stream Close

ROI (Region Of Interest): [Preview](#)

ROI Satatus: **Not Setting**

RTSP Path: ex:rtsp://IP_Address/ Audio:G.711

Resolution

Profile

Bitrate Control Mode

There are **CBR**(Constant Bit Rate) & **CVBR**(Constrained Variable Bit Rate) modes.

Video Bitrate Limit: (32Kbps~8Mbps)

There are **CBR**(Constant Bit Rate) & **CVBR**(Constrained Variable Bit Rate) modes.

Video Quantitative: 1(Low) ~10(High)

In a surveillance environment that needs to process more image details, the image quality will need to be configured with a higher parameter value. The parameter value set in **Video Bitrate Limit** can reach the maximum bitrate once **CVBR** is applied. Therefore, the higher the parameter value configured, the greater the bitrate it can achieve, and the better the picture quality will be in a more detailed environment.

Video Frame Rate

GOP Size

It means "Group of Pictures". The higher the GOP is, the better the quality is.

[Video Format](#)

[Stream Feature](#)

[ROI \(Region of Interest\)](#)

[Smart Stream](#)

[RTSP Path](#)

Snapshot Setting

Select the image quality from 1 (Low) ~10(High).




Snapshot Setting

Quality: ▾

3GPP Streaming Setting

TV output will be shut down during this mode.

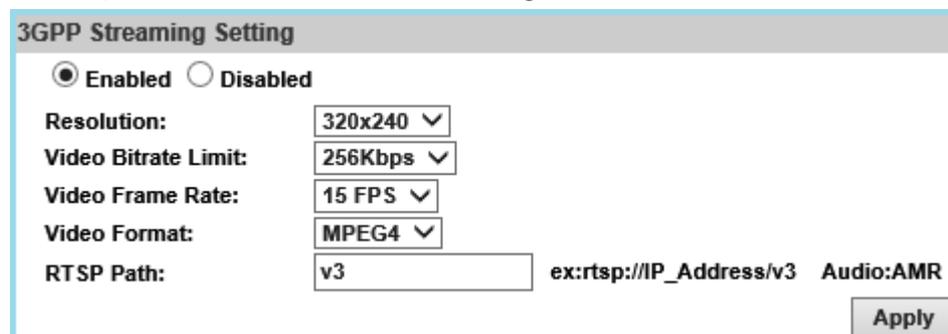

3GPP Streaming Setting

Enabled Disabled

Resolution: ▾

Video Bitrate Limit: ▾

Video Frame Rate: ▾

Video Format: ▾

RTSP Path: ex:rtsp://IP_Address/v3 Audio:AMR

Resolution

640x480@15fps, 320x240@15fps

Video Bitrate

The higher Video Bitrate, the better the video quality is.

Video Frame Rate

The video refreshing rate per second.

Video Format


The video refreshing rate per second. Select from H.264+, H.264

RTSP Path

Offers the RTSP output connecting path.

Please click on the button to keep the changes when all the settings are completed and confirmed.

Audio

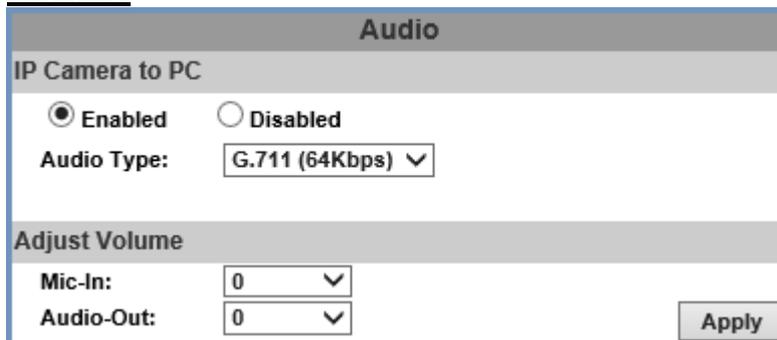

The user can send audio from the IP Camera built-in microphone to the remote PC and audio from remote PC to IP Camera's external speaker.

IP Camera to PC

Select **Enabled** to start and select the audio type. Tick **chatting** in the live browser to enable **PC to IP Camera** audio function.


The Audio may not be smooth when the SD card is recording.

' and 'Online Visitor : 1'." data-bbox="120 591 422 613"/>

Adjust Volume

Select the volume of both **Mic-in** & **Audio-out**. Click on the **Apply** button to keep all the changes.

Sound Detection

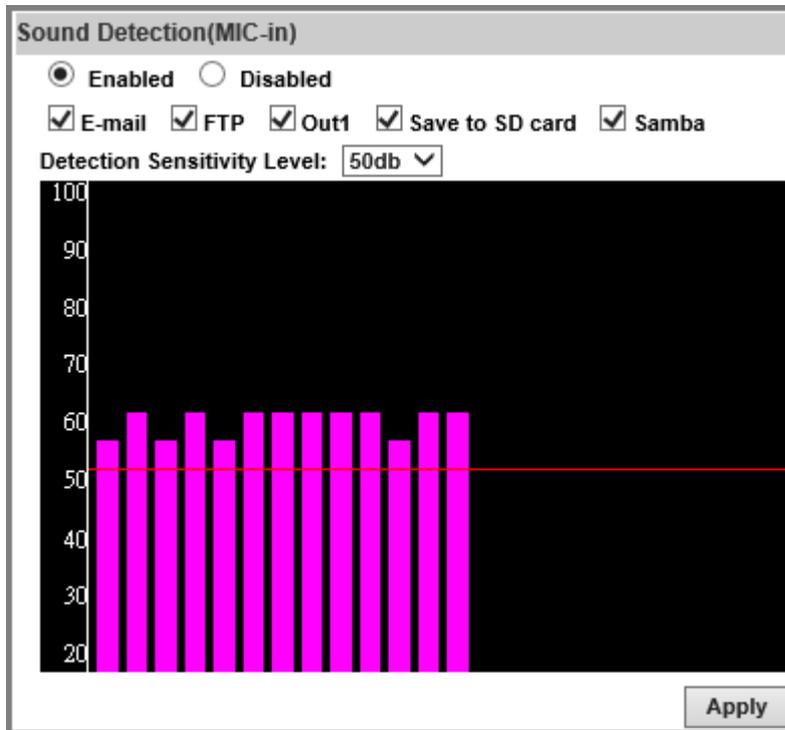

Test the audio volume and sound quality first by selecting **Enabled**. Tick the output destination of the audio file recorded.

Adjust the **Detection Sensitivity Level** from 40~90db to display the audio frequency level in the analytical graph.

Please click on the  button to keep the changes when all the settings are completed and confirmed.

Event

Click  to get into the administration page. Click  to go back to the [live video](#) page.



The screenshot displays the administration interface of an IP camera. On the left is a dark sidebar with a menu. The main content area is titled 'System Information' and contains several configuration sections:

- System Information:**
 - MAC Address: 00:0F:0D:28:92:B0
 - Server Name: IP_Camera Status Bar
 - Language: English, 繁體中文, 简体中文, French, Russian, Italian, Spanish, German, Portuguese, Polish, Japanese
- OSD Setting:**
 - Time Stamp: Enabled, Disabled
 - Text: Enabled, Disabled
 - OSD_Display [Text Edit](#)
- Time Setting:**
 - Server Time: 2018/1/12 0:26:04 Time Zone: GMT+08:00
 - Date Format: yy/mm/dd, mm/dd/yy, dd/mm/yy
 - Time Zone: GMT+08:00
 - Enable Daylight Saving:
 - NTP:
 - NTP Server: pool.ntp.org
 - Update: 6 Hour
 - Time Shift: 0 Minutes [-1440..1440]
 - Synchronize with PC's time:
 - Date: 2018/4/11
 - Time: 15:46:54
 - Manual:
 - Date: 2018/4/11
 - Time: 15:46:51
 - The date and time remain the same

An 'Apply' button is located at the bottom right of the configuration area.

The IP Camera provides multiple event settings.

Event Setting

Please change default password is a sign which appears on the preview screen as a reminder, to suggest you change login settings in [System](#) to secure your account privacy.

Motion Detection

A motion detection operation allows user to define a certain area which detects anything moving or changing its position within. It helps user to target on details inside a smaller picture, and effectively identify various surroundings of the monitored environment.



Whenever a motion is detected inside the framed area, the word **Motion** will appear on live screen and the data of notification can be sent to assigned directory for remote user.




Area Setting:	<input checked="" type="checkbox"/> Area 1	<input checked="" type="checkbox"/> Area 2	<input checked="" type="checkbox"/> Area 3
Sensitivity:	<input type="checkbox"/> 5	<input type="checkbox"/> 5	<input type="checkbox"/> 5
<input checked="" type="checkbox"/> Area 1:	<input checked="" type="checkbox"/> E-mail	<input type="checkbox"/> FTP	<input type="checkbox"/> Out1
<input type="checkbox"/> Area 2:	<input type="checkbox"/> E-mail	<input checked="" type="checkbox"/> FTP	<input checked="" type="checkbox"/> Out1
<input type="checkbox"/> Area 3:	<input type="checkbox"/> E-mail	<input type="checkbox"/> FTP	<input checked="" type="checkbox"/> Out1
Log :	<input checked="" type="checkbox"/> E-mail	<input checked="" type="checkbox"/> FTP	<input checked="" type="checkbox"/> Samba
Subject:	<input type="text" value="IP Camera Warning!"/>		
Interval:	<input type="text" value="10 sec"/> a period of time between every two motions detected.		
<input checked="" type="checkbox"/>	Based on the schedule		

- **Area Setting:** Click any of the Area 1 Area 3 Area 2 icons to start drawing 3 areas on the preview screen with your mouse in 3 different colors. Click any **Area** icon again to discard the motion area which has been made.
- **Sensitivity:** Adjust the level of the responsiveness defined as motion detection. The higher number assigned, the more sensitive, vice versa.
- **Area 1/2/3:** Data of events triggered within the motion area can be assigned by marking the checkboxes of the source and destination. For example, if you mark the **Save to SD card** checkbox from **Area 3**, the video or snapshot triggered in **Area 3** motion area will be saved to the **Micro SD card**.
- **Log:** Popped up after **Save to SD card** checkbox is ticked by your mouse. Check **E-mail/ FTP/ Samba** checkboxes on the **Log** option to send the motion detection log to **E-mail/ FTP/ Samba** simultaneously.
- **Subject:** Type in the message you would receive when motion is detected. The default message is "**IP Camera Warning!**".
- **Interval:** For example, when selecting **10 sec**, once the motion is detected and the action is triggered, it cannot be triggered again within 10 seconds.
- **Based on the schedule:** Assign the timetable managed from [Schedule](#) to enable motion detection after the option checkbox is ticked.


Tampering Detection

Tampering Detection	
Tampering:	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
	<input type="checkbox"/> E-mail <input type="checkbox"/> FTP <input type="checkbox"/> Out1 <input type="checkbox"/> Save to SD card <input type="checkbox"/> Samba
Interval:	<input type="text" value="30 sec"/>

When the camera view is covered, moved, hit by strong light, or out of focus, the tampering detection will be triggered, and send snapshot to mail/FTP/Samba/SD card, or trigger the external alarm. For example:

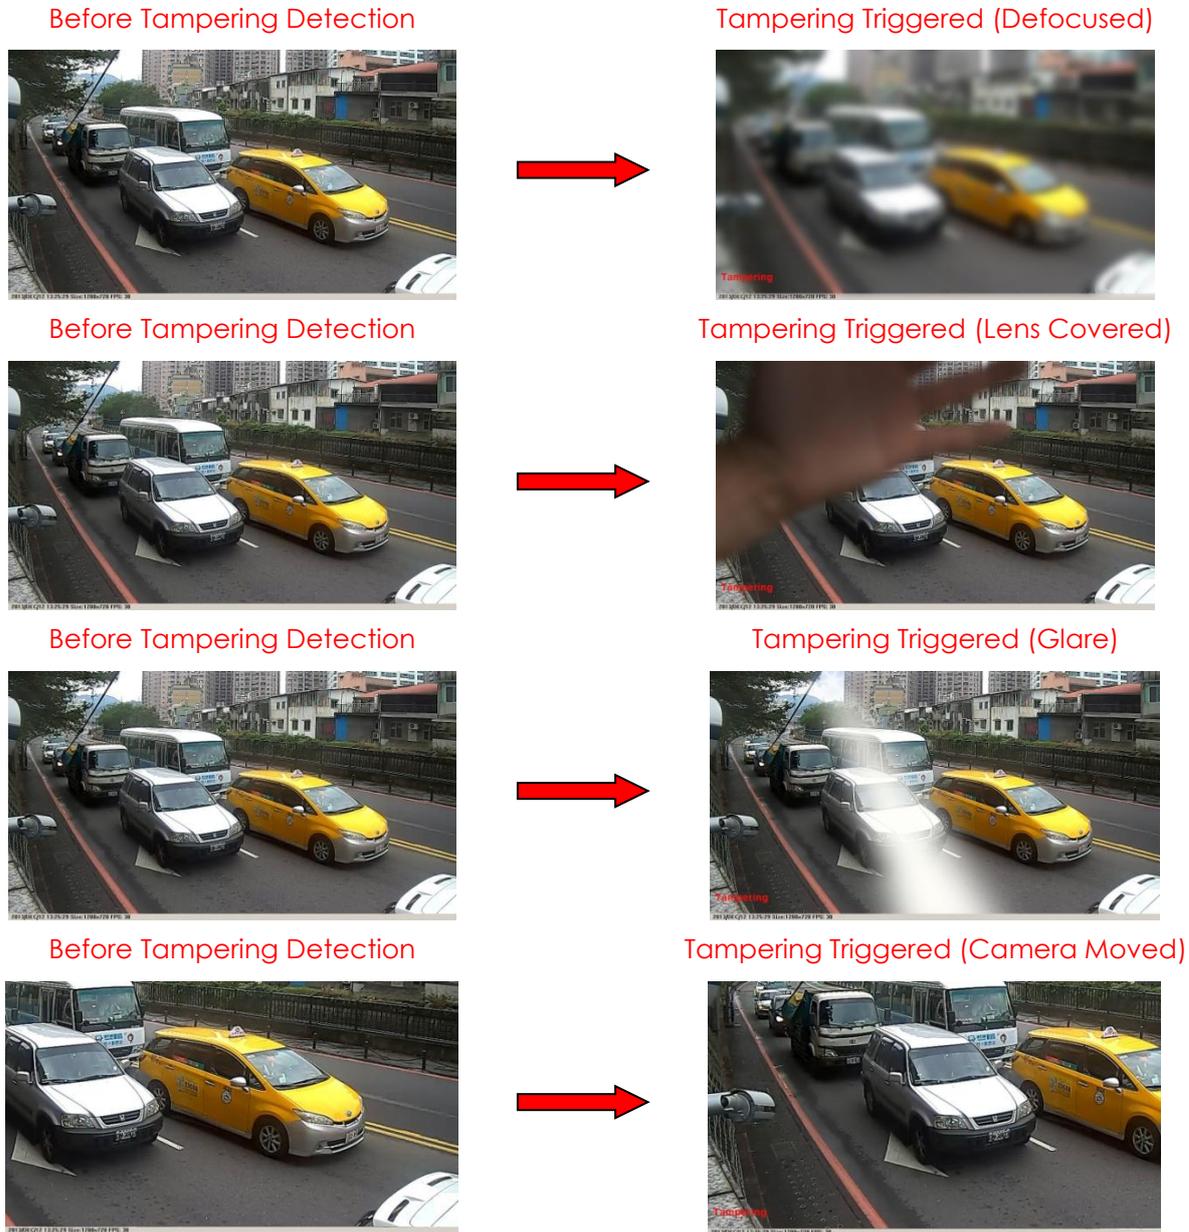

- Interval:** The tampering detecting interval. Take the diagram below as example. The interval is set for 30 second; the camera lens is covered during 10 - 40 sec. At time point B, the camera compares the view with time point A, and sends an alarm when it finds that the lens is covered. At time point C, the camera compares the view with time point B, and sends an alarm when it finds that the lens is uncovered.

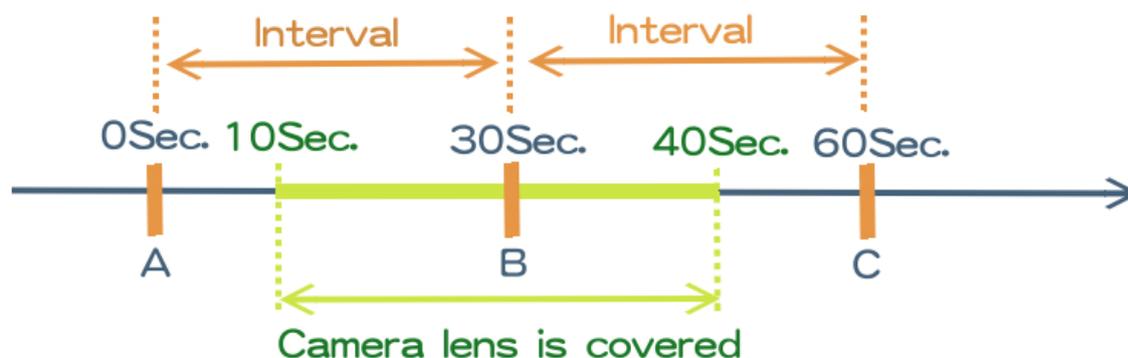

Record File

Record File	
File Format:	AVI File(with Record Time Setting) ▼

When an event occurs, the camera will record a video clip or take snapshot, and then send to mail/ FTP/ Samba.

Select the file format to be saved.

- **AVI File (with Record Time Setting):** Save AVI video file. The video length is according to the value set in [Record Time Setting](#).
- **JPEG Files (with Record Time Setting)*Only Streaming 1 with JPEG file format.:** Only when selecting "JPEG" in [streaming 1 video format](#) of [Video Setting](#), this option can be enabled. Select this option to save several JPEG picture files. The successive picture files cover a period of time according to the value set in Record Time Setting.
- **JPEG File (Single File with Interval Setting):** Save single JPEG picture file when the event occurs.

Record Time Setting

Record Time Setting			
Pre Alarm:	5 sec ▼	Post Alarm:	5 sec ▼

When an event occurs, the IP camera can record a video clip or take a snapshot, and then send it via mail/ FTP/ Samba.

Select the video recording length before and after the event is detected.

Motion Detection

Area 3: E-mail FTP Out1 Save to SD card Samba Google Drive Dropbox

Subject: IP Camera Warning!

Interval: 10 sec a period of time between every two motions detected.


Based on the schedule

Record File

File Format: AVI File(with Record Time Setting)

Record Time Setting

Pre Alarm: 5 sec Post Alarm: 5 sec

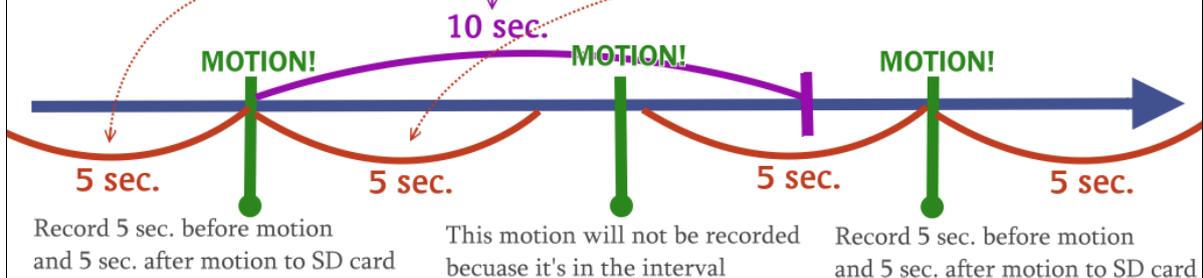

Record 5 sec. before motion and 5 sec. after motion to SD card This motion will not be recorded because it's in the interval Record 5 sec. before motion and 5 sec. after motion to SD card

Network Dis-connected

Network Dis-connected

Dis-connected: Save to SD Card
(When Schedule Record Enable, it'll stop saving to SD card)

The image will be recorded to the SD card after the IP Camera detects network disconnection once **“Save to SD card”** is ticked.

Network IP Check

Network IP Check

IP Check: Enabled Disabled

IP Address: www.google.com

Interval: 30 sec

Check failed: Connection failed four times. Reboot IP Camera.
 Save to SD card
(When Schedule Record Enable, it'll stop saving to SD card)
(When IP check failed, first step will save to SD card, continuing other saving storage)

Apply

After enabling IP Check, the IP camera can check if the network server is connecting. If the checking fails for 4 times, the camera will reboot.

Click **Apply** to update all the settings adjusted.

Schedule

Schedule

Tick the grids on the calendar to manage your schedule time.

Schedule
Profile1

All	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Mon.																								
Tue.																								
Wed.																								
Thu.																								
Fri.																								
Sat.																								
Sun.																								

With schedule setup.

Profile:

Profile1 Name:

Profile

Select a Profile from the drop down list.

Profile(1,2,3) Name

Input & assign a profile name for each profile.

Schedule
Profile2

All	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Mon.																								
Tue.																								
Wed.																								
Thu.																								
Fri.																								
Sat.																								
Sun.																								

With schedule setup.

Profile:

Profile2 Name:

Schedule
Profile3

All	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Mon.																								
Tue.																								
Wed.																								
Thu.																								
Fri.																								
Sat.																								
Sun.																								

With schedule setup.


Profile:

Profile3 Name:

Snapshot & Record

Record


After completing the [Schedule](#), the camera data will be recorded according to the schedule made from the calendar. **Beware that SD cards may fail** for being recorded for a long period of time. You may set up how much you would like the SD card memory to be used in order to estimate the right time to swap a new one.

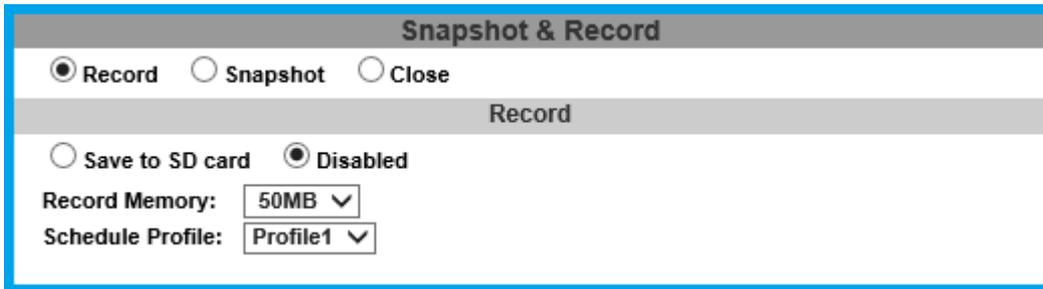

Assign the **Schedule Profile** time selected from the drop-down list first.

Snapshot

After enabling the snapshot function; the user can select the storage position, interval time and reserved file name of the snapshot. Assign the **Schedule Profile** time selected from the drop-down list first.

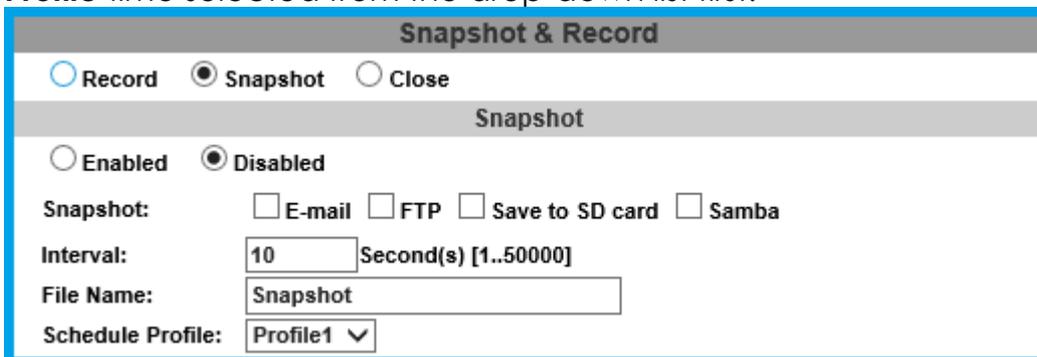


Interval: Users can set the interval between two snapshots.

File Name: Enter the file name of your snapshot file.

Restart IP Camera Automatically

Set up the time for IP camera to restart automatically after ticking **Restart** to enable access.

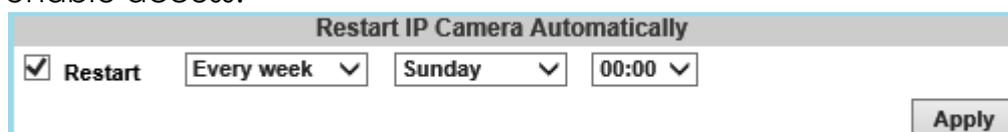


Click  to update all the settings adjusted.


I/O Setup

Enter [Live Video](#) via internet browser & check Out1 to enable I/O signal.

I/O Connection

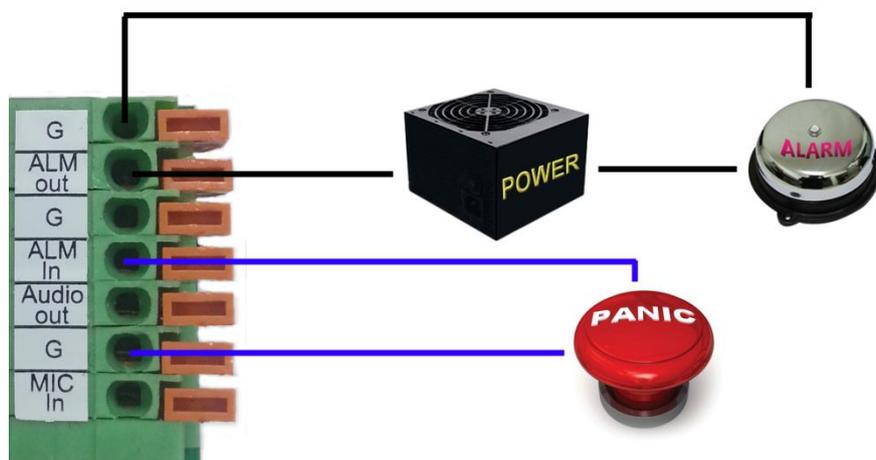

- Connect the GND & DO pin to the external relay (buzzer) device.
- Connect the GND & DI pin to the external trigger device.

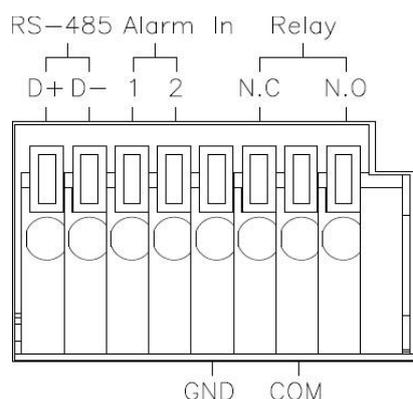


D+	RS-485: sends +/ receives +
D -	RS-485: sends -/ receives -
GND	Ground
ALARM IN 1-2	Alarm inputs
N.C	Relay: Normally close
N.O	Relay: Normally open
COM	Relay: Common

When no event occurs, the DO output is 5V (DO and GND are disconnected). When the camera detects events it will trigger and external alarm, DO output is 0V (DO and GND are connected).

If you select **N.O** on **Input sensor setting**, when the switch contacts are opened, the camera input alarm will be triggered and will execute the action user has set, for example, send a snapshot to E-mail address.

If you select **N.C** in **Input sensor setting**, when the switch contacts are closed, the camera input alarm will be triggered and will execute the action user has set, for example, send a snapshot to E-mail address.

EX1 : Connect GND & Alarm to external IR detector.	EX2 : Connect N.O & COM to external siren.
--	--

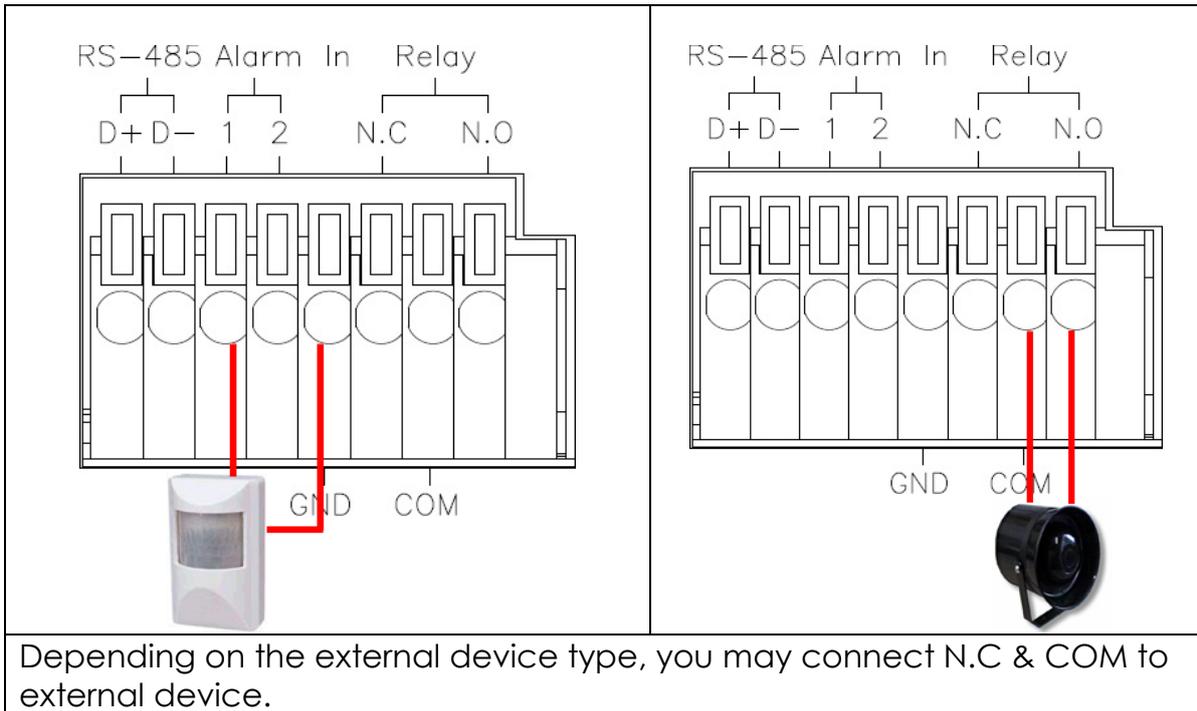

I/O PIN Definition

GND (Ground)

Initial state is LOW

DO (Digital Output)

Max. 50mA, DC 12V

DI (Digital Input)

Max. DC 6V

Input Setting

I/O Setting

Input Setting

Input 1 Sensor: N.O ▼

Input 1 Action: E-mail FTP Out1 Save to SD card Samba

Log: E-mail FTP Samba

Subject: GPIO In Detected!

Interval: 10 sec ▼

Based on the schedule

Schedule Profile: Profile1 ▼

The IP camera supports both input and output operations. When the input condition is triggered, the relay will be also triggered & a notification will be sent depending what checkboxes are ticked.

Log

Tick **Save to SD card** to enable the [Log](#) you would like to save data with.

Subject

Input & edit the message you would receive for triggered alarm.

Interval


For example, if you select "10 sec" here, once the motion is detected and action is triggered, it cannot be triggered again within 10 seconds.

Based on the schedule

Tick its checkbox to assign timetable from [Schedule](#). Once the option is activated, only during the selected schedule time the I/O is enabled. Assign The [Profile](#) timetable selected from the drop-down list first.

Output Setting

The output mode affects the DO or relay out duration.

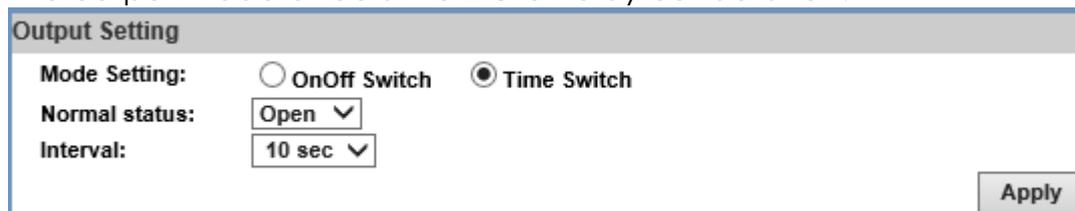

Mode Setting

ON/Off Switch

The camera triggers the external device and lasts for 10 seconds. Enable the **OnOff Switch** in **Output Setting** by clicking beside its title. You can turn off the alarm manually by clicking "off" at the right bottom of the [live video](#) page.



Select **Open** (N.O) or **Close** (N.C) for its sensor from **Normal Status**.


Time Switch

The camera triggers the external device and lasts for certain time according to the internal setting, and the user is not allowed to break off the alarm manually. Enable **Time Switch** by clicking beside the title, and then adjust the **Normal Status** & **Interval** to your desired level.

Click to keep all the changes.

RS485

You can link the IP camera to NVR or joystick controller by RS-485. Please use cable to connect D+ with D+ of two device, and connect D- with D-.

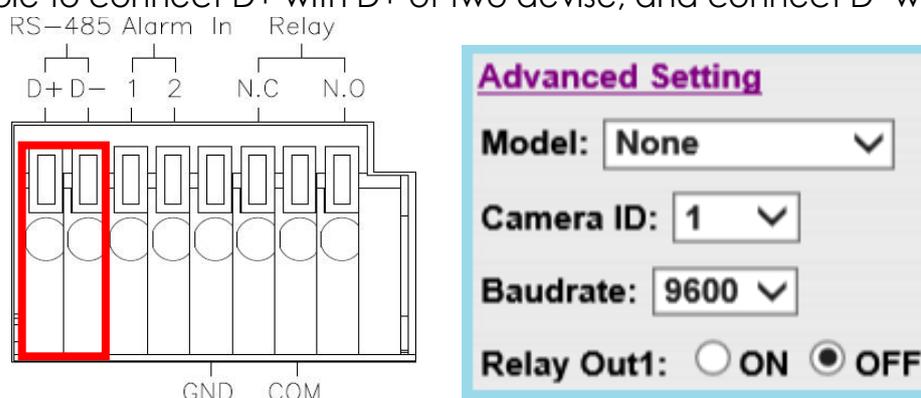

After the RS485 Setting is enabled, turn to [live video](#) for related operations.

Log List

Log List	
System Logs	Logs
Motion Detection Logs	Logs
I/O Logs	Logs
All Logs	Logs

The log keeps data for user to check through events which have occurred during the monitoring operation. Click each **Logs** to open different log data.

All Log	
<System>	[2017/11/23 15:17:39] Language changed to Trad. Chinese.
<System>	[2017/11/23 15:17:21] 220.135.138.67 login by admin.
<System>	[2017/11/23 15:12:20] 220.135.138.67 login by admin.
<System>	[2017/11/23 15:12:15] 220.135.138.67 login by Anonymous.
<System>	[2017/11/23 15:12:15] 220.135.138.67 login by Anonymous.

System Logs won't lose data due to power failure. Choose **All Logs** to list out all the events from **Motion Detection Logs** to **I/O Logs**.

SD Card

Playback

Playback

20171107 20171108 20171109

Record

20171109

SD Card: << 9273M / 30416M >>

SD Management

Auto Deletion: (Keep 1/ 2/ 3/ 4...days)

It only support FAT32 format for SD card over 64G Please format SD card into FAT32 before installation


Insert Micro SD card into the card slot thoroughly before starting this operation. Click the date under **Playback** title & a list of files will pop up.

2017/11/07			Del
Time	Video	Event Type	<input type="checkbox"/>
21:46:01	214601m.avi	Motion Detection	<input type="checkbox"/>
21:46:24	214624m.avi	Motion Detection	<input type="checkbox"/>
21:47:14	214714m.avi	Motion Detection	<input type="checkbox"/>
21:55:15	215515m.avi	Motion Detection	<input type="checkbox"/>
21:55:27	215527m.avi	Motion Detection	<input type="checkbox"/>
21:56:13	215613m.avi	Motion Detection	<input type="checkbox"/>
21:56:24	215624m.avi	Motion Detection	<input type="checkbox"/>
21:56:55	215655i	IVS	<input type="checkbox"/>
21 o'clock	21 o'clock	Schedule Snapshot	<input type="checkbox"/>
22:02:45	220245i	IVS	<input type="checkbox"/>

Files link daily.

For example, if the date **2017/11/07** is clicked, all the events happened within that time frame will then appear in a list. The enlisted files under **Video** category are files representing an event. There are 3 types of file formats, and each is different for its own **Event Type**. Notice how the file name formations under the **Video** category represent the time when a file is created.

For instance, the file name "**214601m.avi**" means the video is recorded at **21:46:01** today, **m** means **Motion Detection**, and **avi** represents the file format. Click on the file name to open the file.

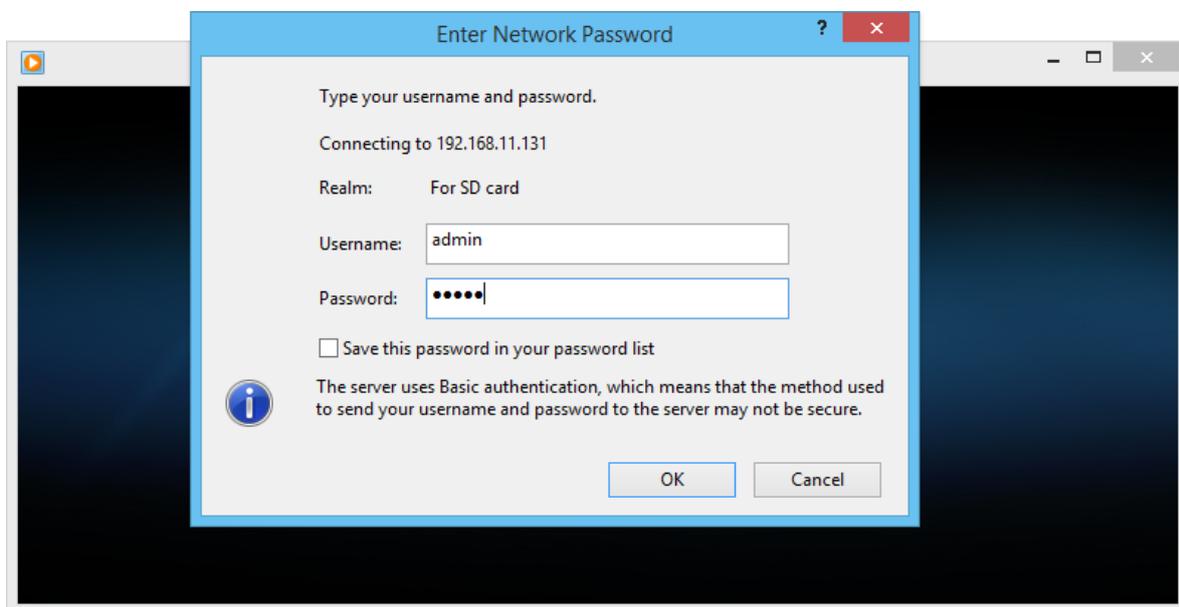

For **avi** files, you need Microsoft Media Player which is supposedly built-in in your PC. The default Username & Password for playing the video file are both **admin**. Clicking on an **IVS** file (such as **215655i**) will bring out a pop-up window suggesting an **IVS** event captured as snapshots as the one below:



Clicking on any title that is labeled with “**time unit**” (such as **21 o’clock**) at the end will bring out a pop-up window indicating the snapshot taken as scheduled in **Schedule** mode and enabled in **Snapshot** mode.



Click the  icon to delete any file by marking on the checkbox under the **Del** category with a mouse click.

Record

The recording mode is enabled after **Record** is set in **Schedule** mode. Take the schedule calendar below for example, the grids coloured in green between 3~12 are scheduled to start recording from 3 o'clock to 12 o'clock from Monday to Thursday.

Schedule																								
All	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Mon.																								
Tue.																								
Wed.																								
Thu.																								
Fri.																								
Sat.																								
Sun.																								

With schedule setup.

Once the recording mode is on, the video data recorded will be found and labelled as **2017/11/09**.

Record	
20171109	SD Card: << 9273M / 30416M >>


Click on **2017/11/09** to enter the next page where all files recorded on that date are enlisted.

2017/11/09			Del
Time	Video	Event Type	<input type="checkbox"/>
03:00:00	030000r	Record	<input type="checkbox"/>
04:00:00	040000r	Record	<input type="checkbox"/>
05:00:00	050000r	Record	<input type="checkbox"/>
06:00:00	060000r	Record	<input type="checkbox"/>
07:00:00	070000r	Record	<input type="checkbox"/>
08:00:00	080000r	Record	<input type="checkbox"/>
09:00:00	090000r	Record	<input type="checkbox"/>
10:00:00	100000r	Record	<input type="checkbox"/>
11:00:00	110000r	Record	<input type="checkbox"/>
12:00:00	120000r	Record	<input type="checkbox"/>

1 2

Files link daily.

Click on any video title to open Microsoft Media Player (supposedly already built-in in your PC) and play the video file. Key-in **admin** for both Username & Password to get permission to view the video.

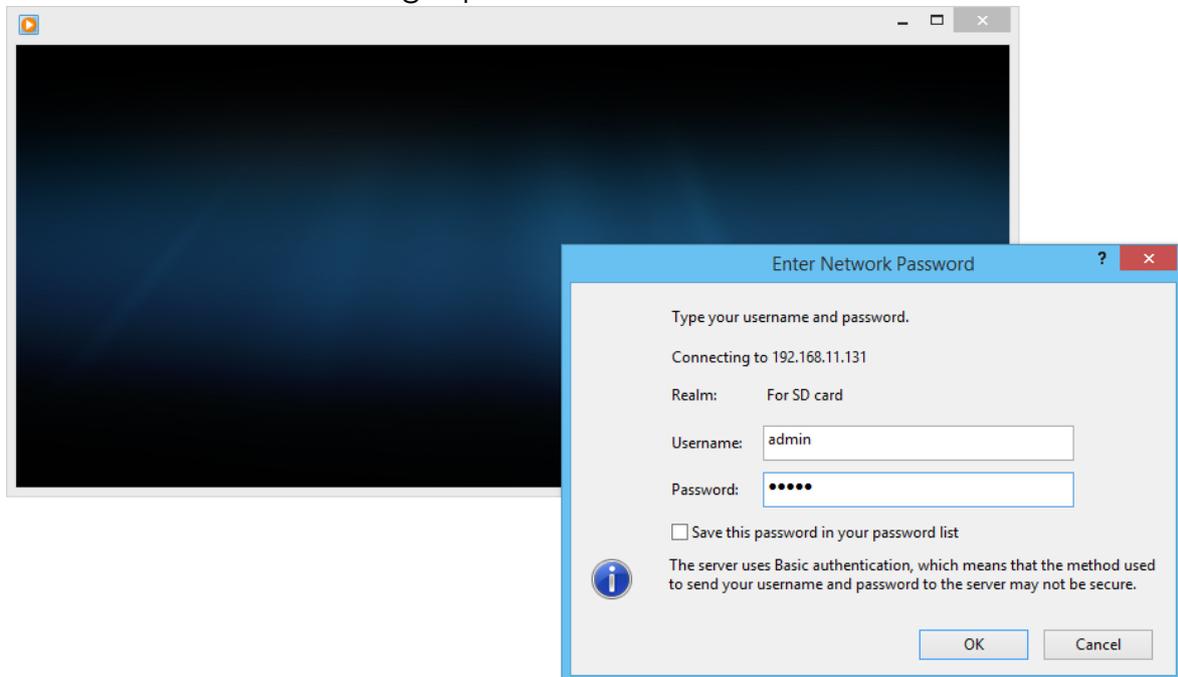

The number at the bottom indicates the distributive law of the current SD Card memory which is divided and assigned to different types of recording purposes.

The left side shows how much memory is still available, and the right side shows how much the total memory is.




If the memory of the SD card is **over 128G**, **70%** of the memory will be used for scheduled recording, and **30%** will be used for event recording.

If the memory of the SD card is **below 128G**, **50%** of the memory will be used for scheduled recording, and **50%** will be used for event recording.

Click the  icon to delete any file with its checkbox checked under the Del category.

SD Management

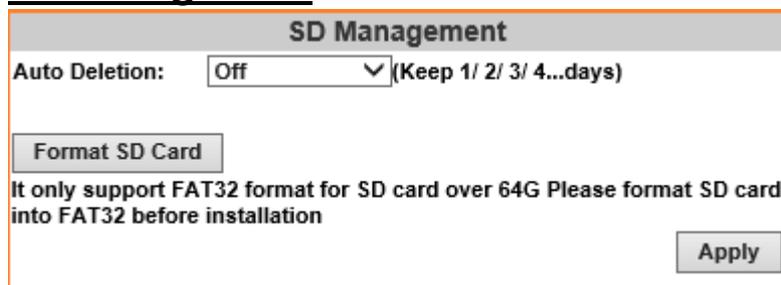

The screenshot shows a window titled "SD Management". At the top, there is a label "Auto Deletion:" followed by a dropdown menu set to "Off" and a note "(Keep 1/ 2/ 3/ 4...days)". Below this is a button labeled "Format SD Card". Underneath the button, a message reads: "It only support FAT32 format for SD card over 64G Please format SD card into FAT32 before installation". At the bottom right of the window is an "Apply" button.


Auto Deletion

Choosing "The 1st day" means the recording file will be kept for one day. Example: It is five o'clock now. Choose "The 1st day". The files will be kept from five o'clock yesterday to five o'clock today. The oldest file will be deleted if the Micro SD card is full. **Note: The use of the SD card will slightly affect the operation of the IP Camera, such as affecting the frame rate of the video.**

Format SD Card

Click the icon to process the SD Card formatting into FAT32 format. Be cautious that since it only supports FAT format for SD Card over 64G, please format SD Card into FAT32 before installation.

SD Card Files

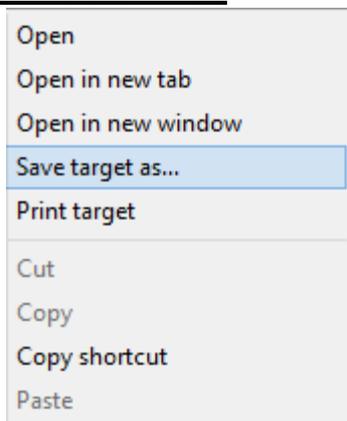


Downloading the Files

For both **Playback** and **Record** mode, after entering a date data to see the **Video** and **Event Type**, right-click on a title under the **Video** list, and choose "**Save Target As...**" from its pop-up window to start downloading the file.

Linking the Files

For both **Playback** and **Record** mode, find the **Files link daily.** link at the right corner of the bottom after entering a date data to see the **Video** and **Event Type**. Click on the link, a window will pop up.

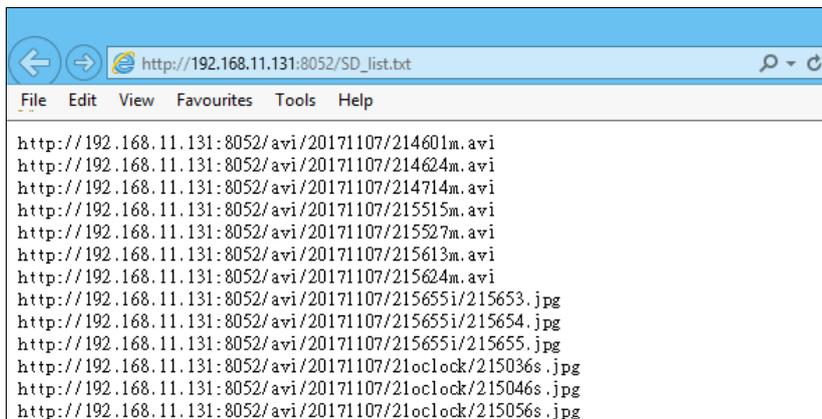


You may copy any of the protocol provided in the window and paste it on a web browser as a URL address to look at each file.


Copy to PC

You can insert the Micro SD card to the PC and read the files directly, or use FlashGet instead to download the files from the IP camera. (In this way you do not need to pull out the Micro SD card from the camera.) To use FlashGet for downloading image and video data from the Micro SD card, please follow the steps:


- i. Enter data list and right-click "**Files link daily.**", select "save target as..." then save the link list to PC.

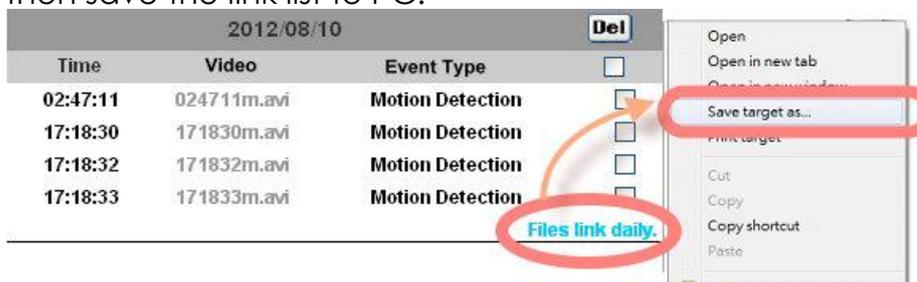


- ii. Open FlashGet, select "File" → "Import" → "Import list", and find the link list file you just saved. The file name may be called "SD_list".

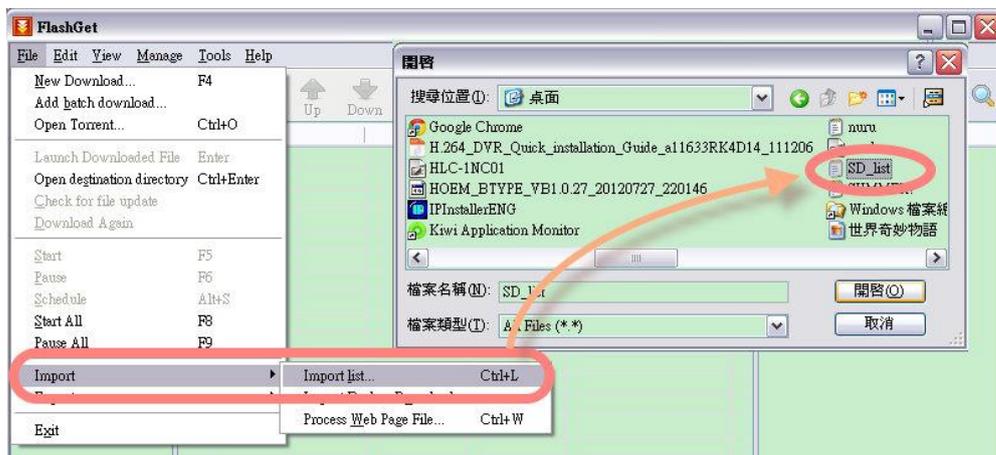

- iii. FlashGet will show you the link list, and you can tick the files you want to copy to your PC. Give the directory path in the new download window, and remember to enable "Login to Server": key in the IP Camera username and password.

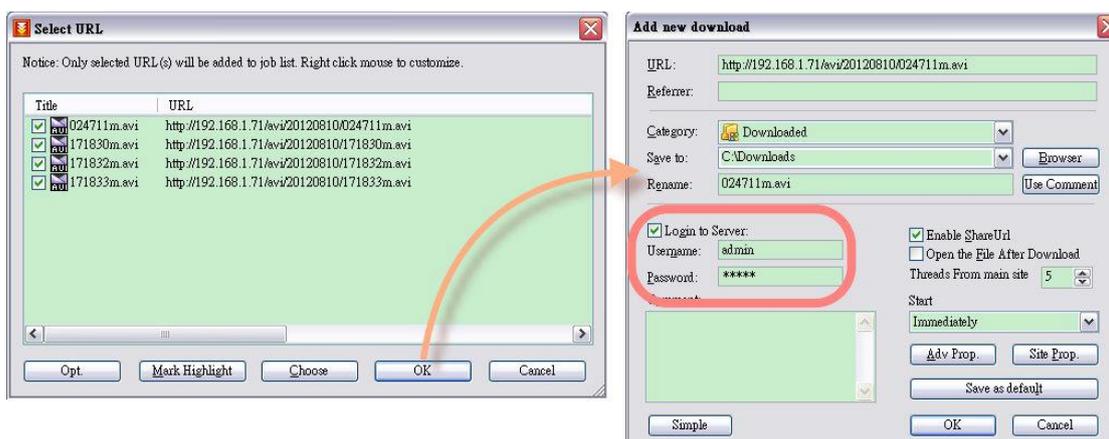


- iv. Click OK to start download.

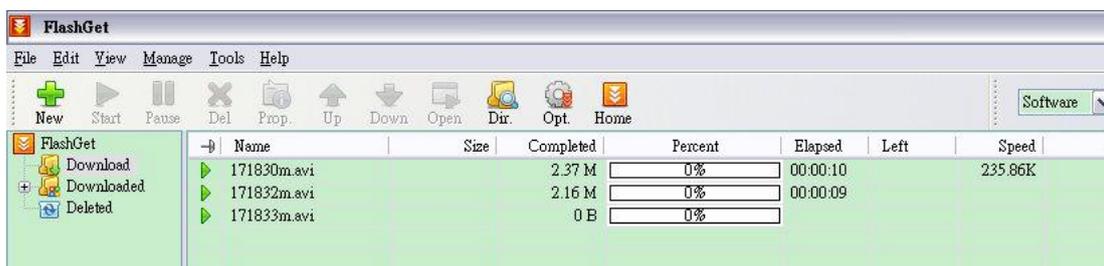

- FlashGet is free software that can be downloaded from [FlashGet](http://www.flashget.com/) official website. The example above is based on FlashGet ver.1.9.6.


NETWORK CONFIGURATION

Configuration I

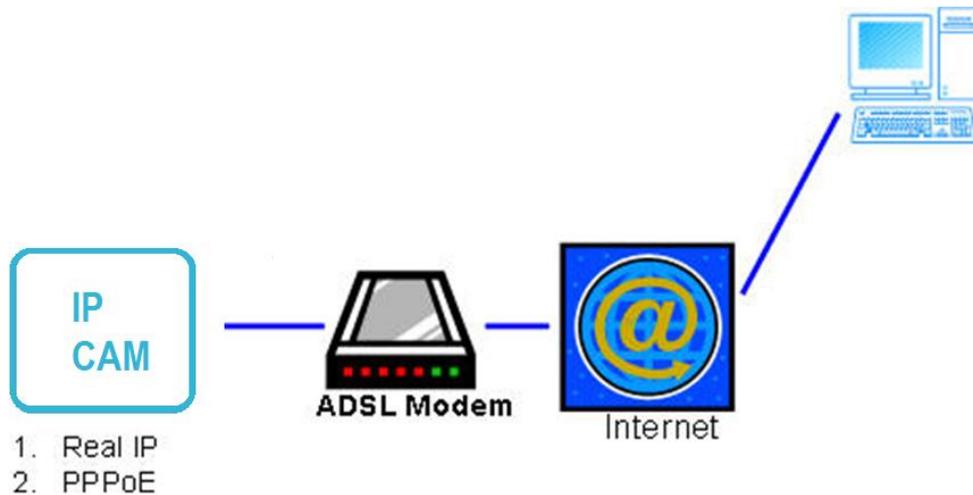

- Internet Access: ADSL or Cable Modem
- IP address: One real IP or one dynamic IP
- Only the IP Camera is connected to the internet
- For fixed real IP, set up the IP into IP Camera. For dynamic IP, start PPPoE.


Configuration II

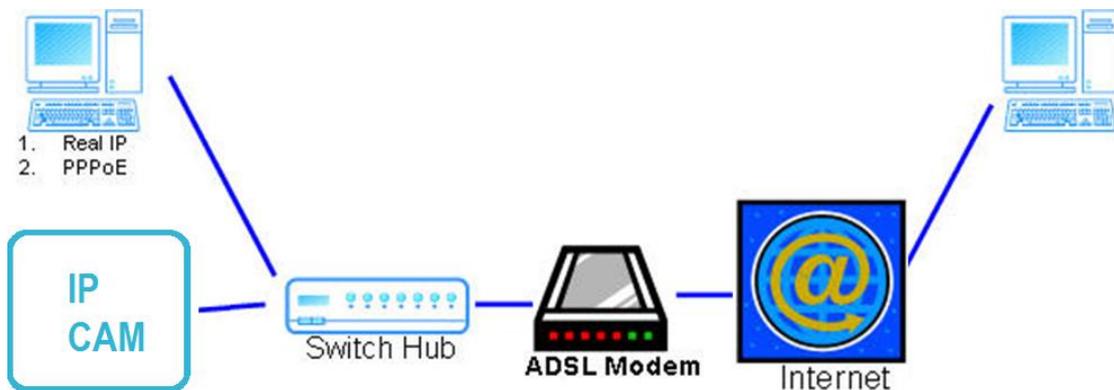

- Internet Access: ADSL or Cable Modem

- IP address: More than one real IP or one dynamic IP
- IP Camera and PC connect to the internet
- Device needed: Switch Hub.
- For fixed real IP, set up the IP into IP Camera and PC. For dynamic IP, start PPPoE.

Configuration III

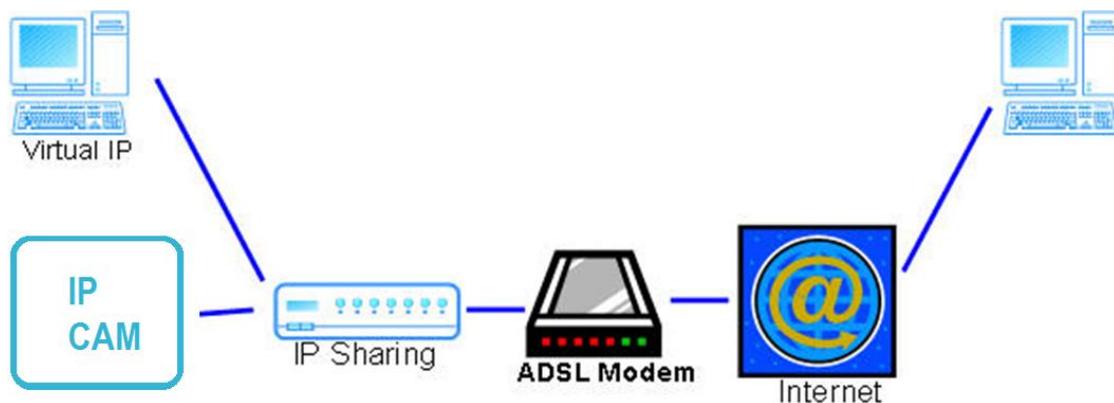


- Internet Access: ADSL or Cable Modem
- IP address: one real IP or one dynamic IP
- IP Camera and PC connect to the internet
- Device needed: IP sharing
- Use virtual IP, set up port forwarding in IP sharing

FACTORY DEFAULT


If you forget your password, please follow the steps below to restore its default settings.

Remove the power and Ethernet cable first.

- Press & hold the default button on the camera as circled in the picture.
- Connect the power for the camera to reboot for around 30 seconds.
- Release the default button after rebooting completes.

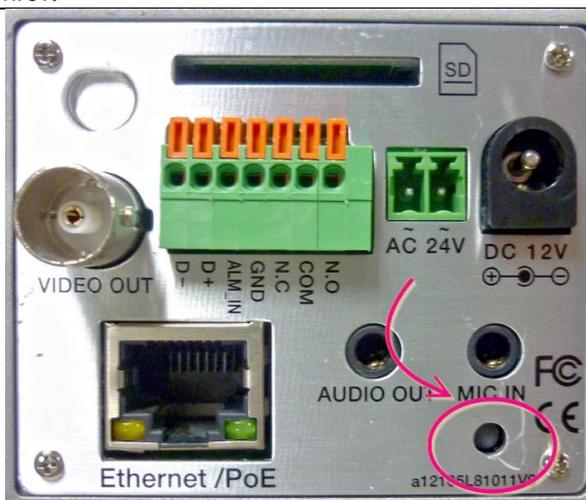

Log In As Default User

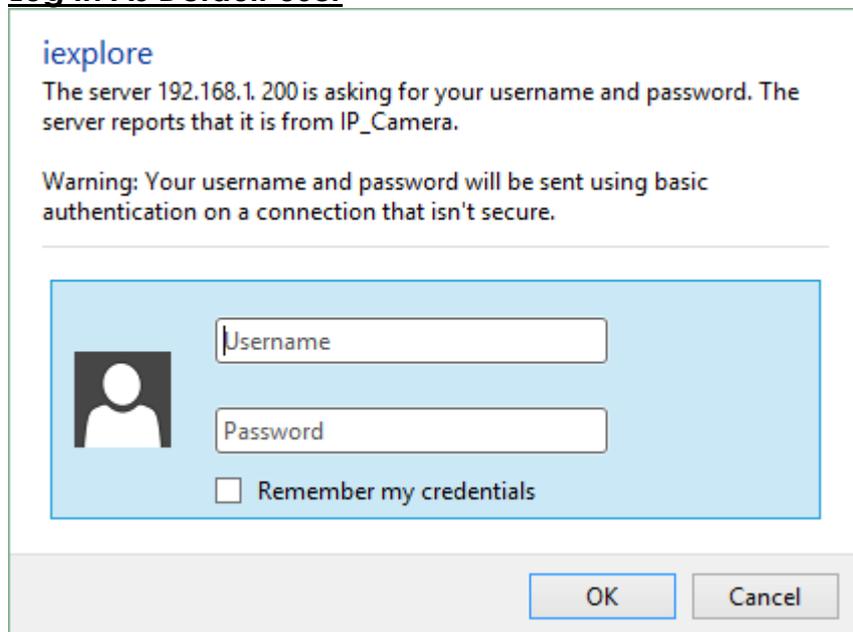


- Open the internet browser using default IP (<http://192.168.1.200>)
- Input **admin** for both user name and password to log in.
- ✧ You may also perform [Factory Default](#) through [System Update](#) when you operate the camera by remote. Please refer to [System](#) chapter for more instructions.

UNIVERSAL PASSWORD

If you forgot the password of your IP camera, you can reset the camera to factory default, or follow the procedure below to generate a universal password.

Note: Universal password will be valid only when you enable the function in [User Management](#).

- i. First, you need to know the IP address and MAC address of your IP camera. You can use [IP Scanner](#) to scan the LAN, and see the IP address and MAC address on the side column.

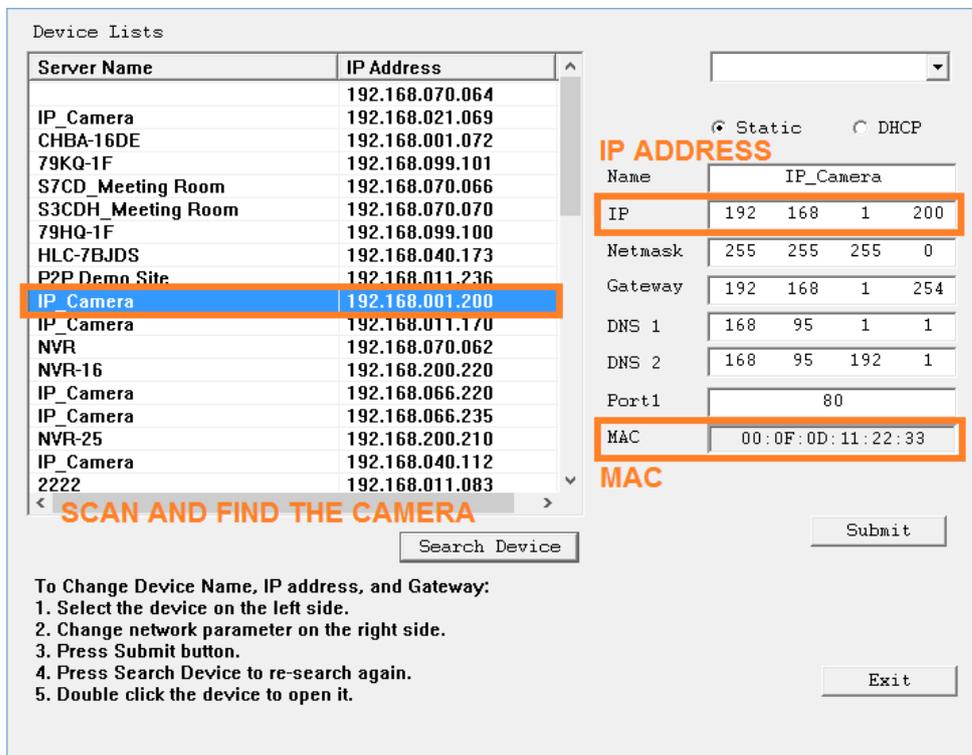

The screenshot shows the 'Device Lists' interface. On the left, a table lists various devices with their IP addresses. One 'IP_Camera' with IP '192.168.001.200' is selected. On the right, configuration options for this device are shown, including IP address, netmask, gateway, DNS, and MAC address. The IP address '192.168.1.200' and MAC address '00:0F:0D:11:22:33' are highlighted with orange boxes. Below the table is a 'SCAN AND FIND THE CAMERA' button and a 'Search Device' button. At the bottom, there are instructions on how to change device name, IP address, and gateway, and 'Submit' and 'Exit' buttons.

Server Name	IP Address
IP_Camera	192.168.070.064
CHBA-16DE	192.168.021.069
79KQ-1F	192.168.099.101
S7CD_Meeting Room	192.168.070.066
S3CDH_Meeting Room	192.168.070.070
79HQ-1F	192.168.099.100
HLC-7BJDS	192.168.040.173
P2P Demo Site	192.168.011.236
IP_Camera	192.168.001.200
IP_Camera	192.168.011.170
NVR	192.168.070.062
NVR-16	192.168.200.220
IP_Camera	192.168.066.220
IP_Camera	192.168.066.235
NVR-25	192.168.200.210
IP_Camera	192.168.040.112
2222	192.168.011.083

IP ADDRESS

Name	IP_Camera
IP	192 168 1 200
Netmask	255 255 255 0
Gateway	192 168 1 254
DNS 1	168 95 1 1
DNS 2	168 95 192 1
Port1	80
MAC	00:0F:0D:11:22:33

MAC


Submit

Exit

To Change Device Name, IP address, and Gateway:

1. Select the device on the left side.
2. Change network parameter on the right side.
3. Press Submit button.
4. Press Search Device to re-search again.
5. Double click the device to open it.


- ii. Or else, if you already know the IP address of camera: Open the web browser, key in **http:// (IP address) /GetIPMAC.cgi** and press enter. The IP address and MAC address will be displayed on browser.

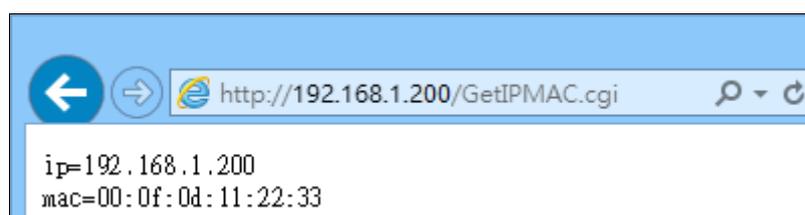


- iii. Locate the .html file named [Universal Password V1.1](#) in the [Universal Password folder](#) from the [Applications](#) folders in CD-ROM. Open it with an IE web browser.




- iv. Fill in the IP address, MAC and click encoder, the universal username and password will then be generated. Note: If you change the camera IP address, the universal password will change, too.

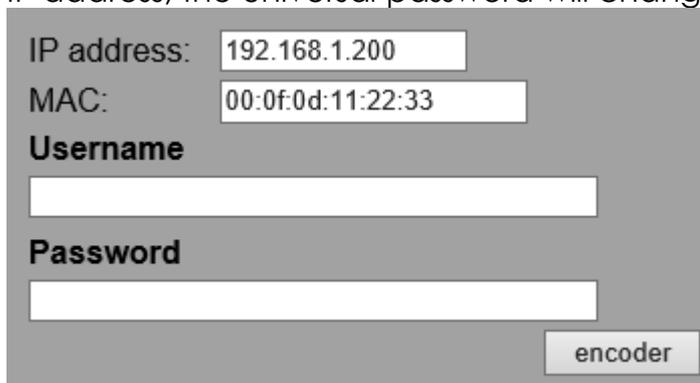The screenshot shows a web-based form for generating a universal password. It includes input fields for 'IP address' (containing '192.168.1.200') and 'MAC' (containing '00:0f:0d:11:22:33'). Below these are sections for 'Username' and 'Password', each with an empty input field. An 'encoder' button is located at the bottom right of the form.





- v. Log into the camera using the generated username & password.

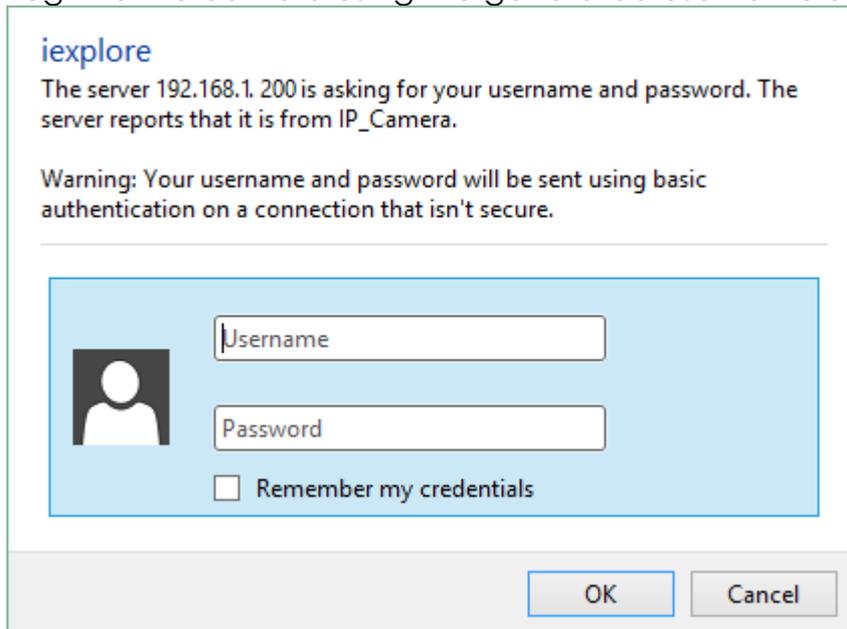The screenshot shows an Internet Explorer (iexplore) login dialog box. The title bar reads 'iexplore'. The main text says: 'The server 192.168.1.200 is asking for your username and password. The server reports that it is from IP_Camera.' Below this is a warning: 'Warning: Your username and password will be sent using basic authentication on a connection that isn't secure.' The dialog contains a light blue login area with a 'Username' input field, a 'Password' input field, and a checkbox labeled 'Remember my credentials'. At the bottom right, there are 'OK' and 'Cancel' buttons.

- vi. Now you can login as administrator. Turn to [User Management](#) page. The use of universal password does not affect the previous user setting, so the administrator account password does not change until you edit it. Please click **Edit** to give a new administrator password.

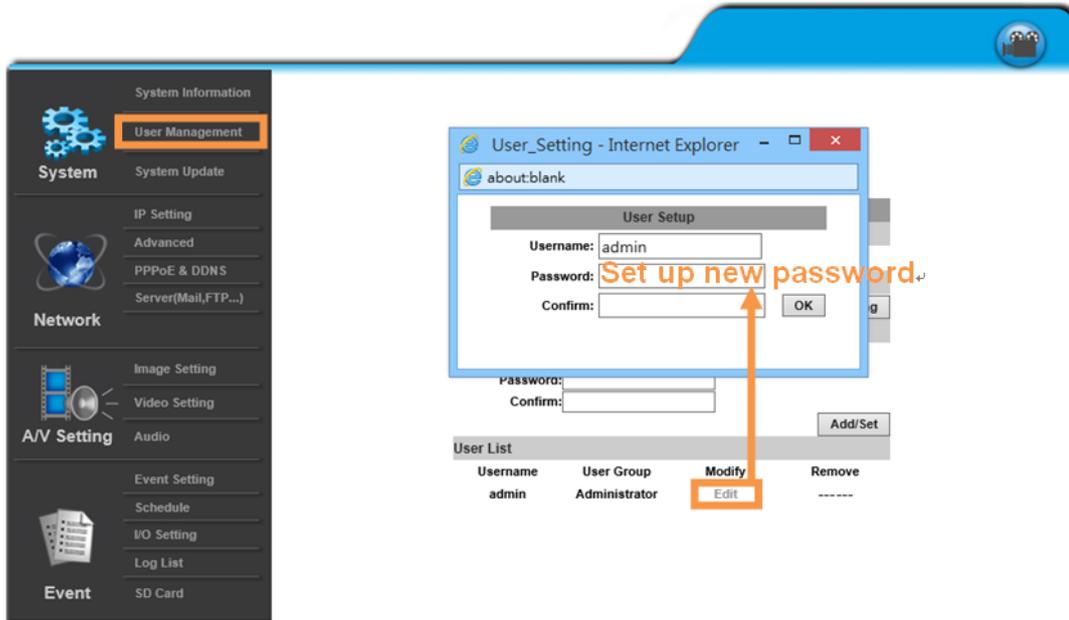

PACKAGE CONTENTS

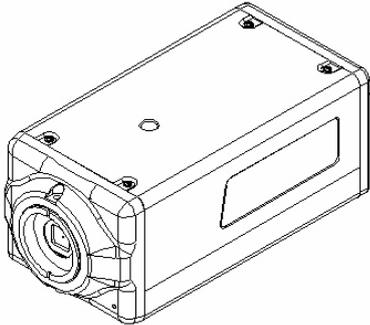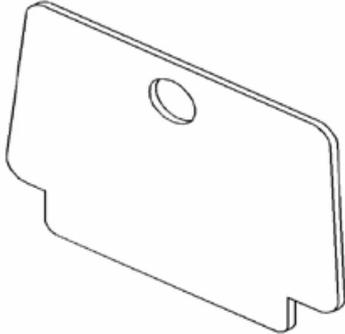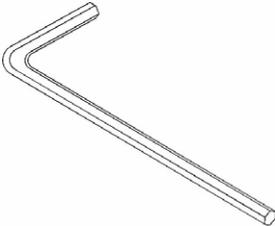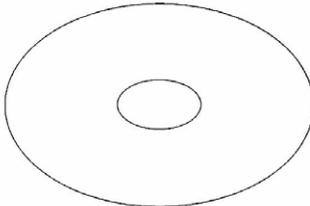IP Camera 		Plates for turning to CS 	
Hex Wrench 	Quick Installation Guide 	CD 	

- The [CD](#) includes user manual and software tools

MICRO SD CARD COMPATIBILITY (OPTIONAL)

The following are the recommended Micro SD Cards:

Transcend	SDHC class4 16GB
	SD class4 16GB
	SDHC class4 32GB
	SD class4 32GB
	SD class6 4GB
	SDHC class6 4GB
	SD class6 8GB
	SDHC class6 8GB
	SD class6 16GB
	SDHC class6 16GB
	SDHC class10 4GB
	SDHC class10 8GB
	SDHC class10 16GB
	SDHC class 10 Max. 64GB
SanDisk	SDHC class4 8GB
	SDHC class4 16GB
	SDHC class4 32GB
	SDHC class10 Max. 128GB